

Diaphragm Sealed
Differential Pressure and
Pressure Transmitters
EJ□118□ and EJ□438□

DPharp **EJX**[®]
DPharp **EJA**[®]

IM 01C25H01-01E

vigilantplant.[®]

DPharp
FOR THE DIGITAL WORLD

Diaphragm Sealed Differential Pressure and Pressure Transmitters

EJ□118□ and EJ□438□

IM 01C25H01-01E 12th Edition

Contents

1.	Introduction.....	1-1
	■ Regarding This Manual.....	1-1
	■ Trademarks	1-2
	1.1 Safe Use of This Product	1-2
	1.2 Warranty.....	1-3
	1.3 ATEX Documentation	1-4
2.	Handling Cautions.....	2-1
	2.1 Model and Specifications Check.....	2-1
	2.2 Unpacking.....	2-1
	2.3 Storage	2-1
	2.4 Selecting the Installation Location	2-2
	2.5 Pressure Connection.....	2-2
	2.6 Waterproofing of Cable Conduit Connections	2-2
	2.7 Restrictions on Use of Radio Transceivers	2-2
	2.8 Insulation Resistance and Dielectric Strength Test.....	2-2
	2.9 Installation of an Explosion-Protected Instrument	2-3
	2.9.1 FM Approval.....	2-4
	2.9.2 CSA Certification.....	2-6
	2.9.3 ATEX Certification.....	2-8
	2.9.4 IECEx Certification.....	2-12
	2.10 EMC Conformity Standards.....	2-15
	2.11 Pressure Equipment Directive (PED)	2-16
	2.12 Safety Requirement Standards	2-16
3.	Component Names	3-1
4.	Installation.....	4-1
	4.1 Precautions	4-1
	4.2 Mounting the Diaphragm Seals.....	4-1
	4.3 Transmitter Mounting	4-2
	4.4 Mounting the Flushing Connection Ring.....	4-4
	4.4.1 Mounting to Pressure Detector Section.....	4-4
	4.4.2 Mounting to Process Flange.....	4-4

4.5	Affixing the Teflon Film	4-5
4.6	Rotating Transmitter Section	4-5
4.7	Changing Integral Indicator Direction	4-5
5.	Wiring	5-1
5.1	Wiring Precautions	5-1
5.2	Selecting the Wiring Materials	5-1
5.3	Connections of External Wiring to Terminal Box	5-1
5.3.1	Power Supply Wiring Connection	5-2
5.3.2	External Indicator Connection.....	5-2
5.3.3	Communicator Connection	5-2
5.3.4	Check Meter Connection	5-2
5.3.5	Status Output Connection.....	5-3
5.4	Wiring	5-3
5.4.1	Loop Configuration	5-3
5.4.2	Wiring Installation.....	5-4
5.5	Grounding	5-5
5.6	Power Supply Voltage and Load Resistance	5-5
6.	Operation	6-1
6.1	Preparation for Starting Operation	6-1
6.2	Zero Point Adjustment	6-2
6.3	Starting Operation	6-3
6.4	Shutting Down Operation	6-3
6.5	Venting or Draining Transmitter Process-Detector Section	6-4
6.5.1	Draining Condensate for Flushing Connection Ring	6-4
6.5.2	Venting Gas for Flushing Connection Ring.....	6-4
6.6	Local Parameter Setting	6-4
6.6.1	Local Parameter Setting (LPS) Overview.....	6-5
6.6.2	Activating Local Parameter Setting	6-6
6.6.3	Parameter Setting Review	6-6
6.6.4	Tag Number Configuration.....	6-7
6.6.5	Pressure Unit Configuration.....	6-7
6.6.6	Pressure LRV/URV Configuration	6-7
6.6.7	Damping Time Constant Configuration	6-8
6.6.8	Output Mode Configuration	6-8
6.6.9	Display Out 1 Configuration.....	6-8
6.6.10	Re-range by applying actual pressure (LRV/URV).....	6-8
6.6.11	Save or Cancel.....	6-9
6.6.12	Abort Configuration	6-9
6.6.12.1	Abort Configuration (Menu).....	6-9
6.6.12.2	Abort Configuration (Parameter).....	6-9

6.6.13	Local Parameter Setting Lock.....	6-9
6.6.14	Others	6-9
7.	Maintenance.....	7-1
7.1	Overview	7-1
7.2	Calibration Instruments Selection	7-1
7.3	Calibration	7-1
7.4	Disassembly and Reassembly	7-3
7.4.1	Replacing the Integral Indicator	7-3
7.4.2	Replacing the CPU Board Assembly	7-4
7.5	Troubleshooting.....	7-4
7.5.1	Basic Troubleshooting	7-4
7.5.2	Troubleshooting Flowcharts.....	7-5
7.5.3	Alarms and Countermeasures.....	7-7
8.	General Specifications	8-1
8.1	Standard Specifications.....	8-1
8.2	Model and Suffix Codes	8-6
8.3	Optional Specifications “◇”	8-15
8.4	Dimensions.....	8-18

Revision Information

When using the Transmitters in a Safety Instrumented Systems(SIS) application, refer to Appendix A in either IM 01C25T01-06EN for the HART protocol or IM 01C25T03-01E for the BRAIN protocol.

1. Introduction

Thank you for purchasing the DPharp Differential Pressure and pressure transmitter.

Your Pressure Transmitter was precisely calibrated at the factory before shipment. To ensure both safety and efficiency, please read this manual carefully before you operate the instrument.

 **NOTE**

This manual describes the hardware configurations of the transmitters listed in below. For information on the software configuration and operation, please refer to either IM 01C25T03-01E for the BRAIN communication type, or IM 01C25T01-06EN for the HART communication type.

For FOUNDATION Fieldbus protocol type, please refer to IM 01C25T02-01E.

For PROFIBUS PA protocol type, please refer to IM 01C25T04-01EN.

Model	Style code
EJX118A	S2
EJX438A	S2
EJA118E	S1
EJA438E	S1

To ensure correct use of this instrument, read both the hardware and software manuals thoroughly before use.

 **WARNING**

When using the transmitters in a Safety Instrumented Systems (SIS) application, refer to Appendix 1 in either IM 01C25T01-06EN for the HART protocol or IM 01C25T03-01E for the BRAIN protocol. The instructions and procedures in this section must be strictly followed in order to maintain the transmitter for this safety level.

 **NOTE**

When describing the model name like EJ□118□ or EJ□438□, it shows the applicability for both EJX118A and EJA118E or EJX438A and EJA438E.

 **NOTE**

Unless otherwise stated, the illustrations in this manual are of the EJ□118□ diaphragm sealed differential pressure transmitter.

Users of the EJ□438□ should bear in mind that certain features of their instrument will differ from those shown in the illustrations of the EJ□118□.

■ Regarding This Manual

- This manual should be provided to the end user.
- The contents of this manual are subject to change without prior notice.
- All rights reserved. No part of this manual may be reproduced in any form without Yokogawa’s written permission.
- Yokogawa makes no warranty of any kind with regard to this manual, including, but not limited to, implied warranty of merchantability and fitness for a particular purpose.
- If any question arises or errors are found, or if any information is missing from this manual, please inform the nearest Yokogawa sales office.
- The specifications covered by this manual are limited to those for the standard type under the specified model number break-down and do not cover custom-made instruments.
- Please note that changes in the specifications, construction, or component parts of the instrument may not immediately be reflected in this manual at the time of change, provided that postponement of revisions will not cause difficulty to the user from a functional or performance standpoint.
- Yokogawa assumes no responsibilities for this product except as stated in the warranty.
- If the customer or any third party is harmed by the use of this product, Yokogawa assumes no responsibility for any such harm owing to any defects in the product which were not predictable, or for any indirect damages.

- The following safety symbols are used in this manual:

 **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **IMPORTANT**

Indicates that operating the hardware or software in this manner may damage it or lead to system failure.

 **NOTE**

Draws attention to information essential for understanding the operation and features.

⎓ Direct current

⏏ Functional grounding terminal

⚠ Caution

This symbol indicates that the operator must refer to an explanation in the user’s manual in order to avoid the risk of injury or death of personnel or damage to the instrument.

■ **Trademarks**

- ‘DPharp’, ‘EJX’, ‘EJA’, ‘FieldMate’ and ‘BRAIN TERMINAL’ are registered trademarks of Yokogawa Electric Corporation. Company names and product names used in this material are registered trademarks or trademarks of their respective owners.
- In this manual, trademarks or registered trademarks are not marked with TM or ®.

1.1 Safe Use of This Product

For the safety of the operator and to protect the instrument and the system, please be sure to follow this manual’s safety instructions when handling this instrument. If these instructions are not heeded, the protection provided by this instrument may be impaired. In this case, Yokogawa cannot guarantee that the instrument can be safely operated. Please pay special attention to the following points:

(a) Installation

- This instrument may only be installed by an engineer or technician who has an expert knowledge of this device. Operators are not allowed to carry out installation unless they meet this condition.
- With high process temperatures, care must be taken not to burn yourself by touching the instrument or its casing.
- Never loosen the process connector nuts when the instrument is installed in a process. This can lead to a sudden, explosive release of process fluids.
- When draining condensate from the pressure detector section, take appropriate precautions to prevent the inhalation of harmful vapors and the contact of toxic process fluids with the skin or eyes.
- When removing the instrument from a hazardous process, avoid contact with the fluid and the interior of the meter.
- All installation shall comply with local installation requirements and the local electrical code.

(b) Wiring

- The instrument must be installed by an engineer or technician who has an expert knowledge of this instrument. Operators are not permitted to carry out wiring unless they meet this condition.
- Before connecting the power cables, please confirm that there is no current flowing through the cables and that the power supply to the instrument is switched off.

(c) Operation

- Wait 5 min. after the power is turned off, before opening the covers.

(d) Maintenance

- Please carry out only the maintenance procedures described in this manual. If you require further assistance, please contact the nearest Yokogawa office.
- Care should be taken to prevent the build up of dust or other materials on the display glass and the name plate. To clean these surfaces, use a soft, dry cloth.

(e) Explosion Protected Type Instrument

- Users of explosion proof instruments should refer first to section 2.9 (Installation of an Explosion Protected Instrument) of this manual.
- The use of this instrument is restricted to those who have received appropriate training in the device.
- Take care not to create sparks when accessing the instrument or peripheral devices in a hazardous location.

(f) Modification

- Yokogawa will not be liable for malfunctions or damage resulting from any modification made to this instrument by the customer.

(g) Product Disposal

- The instrument should be disposed of in accordance with local and national legislation/regulations.

(h) Authorized Representative in EEA

- In relation to the CE Marking, The authorised representative for this product in the EEA (European Economic Area) is: Yokogawa Europe B.V. Euroweg 2, 3825 HD Amersfoort, The Netherlands

1.2 Warranty

- The warranty shall cover the period noted on the quotation presented to the purchaser at the time of purchase. Problems occurring during the warranty period shall basically be repaired free of charge.
- If any problems are experienced with this instrument, the customer should contact the Yokogawa representative from which this instrument was purchased or the nearest Yokogawa office.
- If a problem arises with this instrument, please inform us of the nature of the problem and the circumstances under which it developed, including the model specification and serial number. Any diagrams, data and other information you can include in your communication will also be helpful.
- The party responsible for the cost of fixing the problem shall be determined by Yokogawa following an investigation conducted by Yokogawa.
- The purchaser shall bear the responsibility for repair costs, even during the warranty period, if the malfunction is due to:
 - Improper and/or inadequate maintenance by the purchaser.
 - Malfunction or damage due to a failure to handle, use, or store the instrument in accordance with the design specifications.
 - Use of the product in question in a location not conforming to the standards specified by Yokogawa, or due to improper maintenance of the installation location.
 - Failure or damage due to modification or repair by any party except Yokogawa or an approved representative of Yokogawa.
 - Malfunction or damage from improper relocation of the product in question after delivery.
 - Reason of force majeure such as fires, earthquakes, storms/floods, thunder/lightening, or other natural disasters, or disturbances, riots, warfare, or radioactive contamination.

1.3 ATEX Documentation

This is only applicable to the countries in European Union.

<p>GB All instruction manuals for ATEX Ex related products are available in English, German and French. Should you require Ex related instructions in your local language, you are to contact your nearest Yokogawa office or representative.</p>	<p>SK Všetky návody na obsluhu pre prístroje s ATEX Ex sú k dispozícii v jazyku anglickom, nemeckom a francúzskom. V prípade potreby návodu pre Ex-prístroje vo Vašom národnom jazyku, skontaktujte prosím miestnu kanceláriu firmy Yokogawa.</p>
<p>DK Alle brugervejledninger for produkter relateret til ATEX Ex er tilgængelige på engelsk, tysk og fransk. Skulle De ønske yderligere oplysninger om håndtering af Ex produkter på eget sprog, kan De rette henvendelse herom til den nærmeste Yokogawa afdeling eller forhandler.</p>	<p>CZ Všechny uživatelské příručky pro výrobky, na něž se vztahuje nevybušné schválení ATEX Ex, jsou dostupné v angličtině, němčině a francouzštině. Požadujete-li pokyny týkající se výrobků s nevybušným schválením ve vašem lokálním jazyku, kontaktujte prosím vaši nejbližší reprezentační kancelář Yokogawa.</p>
<p>I Tutti i manuali operativi di prodotti ATEX contrassegnati con Ex sono disponibili in inglese, tedesco e francese. Se si desidera ricevere i manuali operativi di prodotti Ex in lingua locale, mettersi in contatto con l'ufficio Yokogawa più vicino o con un rappresentante.</p>	<p>LT Visos gaminių ATEX Ex kategorijos Eksploatavimo instrukcijos teikiami anglų, vokiečių ir prancūzų kalbomis. Norėdami gauti prietaisų Ex dokumentaciją kitomis kalbomis susisiekite su artimiausiu bendrovės "Yokogawa" biuru arba atstovu.</p>
<p>E Todos los manuales de instrucciones para los productos antiexplosivos de ATEX están disponibles en inglés, alemán y francés. Si desea solicitar las instrucciones de estos artículos antiexplosivos en su idioma local, deberá ponerse en contacto con la oficina o el representante de Yokogawa más cercano.</p>	<p>LV Visas ATEX Ex kategorijas izstrādājumu Lietošanas instrukcijas tiek piegādātas angļu, vācu un franču valodās. Ja vēlaties saņemt Ex ierīšu dokumentāciju citā valodā, Jums ir jāsazinās ar firmas Jokogava (Yokogawa) tuvāko ofisu vai pārstāvi.</p>
<p>NL Alle handleidingen voor producten die te maken hebben met ATEX explosiebeveiliging (Ex) zijn verkrijgbaar in het Engels, Duits en Frans. Neem, indien u aanwijzingen op het gebied van explosiebeveiliging nodig hebt in uw eigen taal, contact op met de dichtstbijzijnde vestiging van Yokogawa of met een vertegenwoordiger.</p>	<p>EST Kõik ATEX Ex toodete kasutamishendid on esitatud inglise, saksa ja prantsuse keeles. Ex seadmete muukeelse dokumentatsiooni saamiseks pöörduge lähima lokagava (Yokogawa) kontori või esindaja poole.</p>
<p>SF Kaikkien ATEX Ex -tyyppisten tuotteiden käyttöohjeet ovat saatavilla englannin-, saksan- ja ranskankielisinä. Mikäli tarvitsette Ex -tyyppisten tuotteiden ohjeita omalla paikallisella kielellänne, ottakaa yhteyttä lähimpään Yokogawa-toimistoon tai -edustajaan.</p>	<p>PL Wszystkie instrukcje obsługi dla urządzeń w wykonaniu przeciwwybuchowym Ex, zgodnych z wymaganiami ATEX, dostępne są w języku angielskim, niemieckim i francuskim. Jeżeli wymagana jest instrukcja obsługi w Państwa lokalnym języku, prosimy o kontakt z najbliższym biurem Yokogawy.</p>
<p>P Todos os manuais de instruções referentes aos produtos Ex da ATEX estão disponíveis em Inglês, Alemão e Francês. Se necessitar de instruções na sua língua relacionadas com produtos Ex, deverá entrar em contacto com a delegação mais próxima ou com um representante da Yokogawa.</p>	<p>SLO Vsi predpisi in navodila za ATEX Ex sorodni pridelki so pri roki v angleščini, nemščini ter francoščini. Če so Ex sorodna navodila potrebna v vašem tujejnem jeziku, kontaktirajte vaš najbližji Yokogawa office ili predstavnika.</p>
<p>F Tous les manuels d'instruction des produits ATEX Ex sont disponibles en langue anglaise, allemande et française. Si vous nécessitez des instructions relatives aux produits Ex dans votre langue, veuillez bien contacter votre représentant Yokogawa le plus proche.</p>	<p>H Az ATEX Ex műszerek gépkönyveit angol, német és francia nyelven adjuk ki. Amennyiben helyi nyelven kérjük az Ex eszközök leírásait, kérjük keressék fel a legközelebbi Yokogawa irodát, vagy képviselőt.</p>
<p>D Alle Betriebsanleitungen für ATEX Ex bezogene Produkte stehen in den Sprachen Englisch, Deutsch und Französisch zur Verfügung. Sollten Sie die Betriebsanleitungen für Ex-Produkte in Ihrer Landessprache benötigen, setzen Sie sich bitte mit Ihrem örtlichen Yokogawa-Vertreter in Verbindung.</p>	<p>BG Всички упътвания за продукти от серията ATEX Ex се предлагат на английски, немски и френски език. Ако се нуждаете от упътвания за продукти от серията Ex на родния ви език, се свържете с най-близкия офис или представителство на фирма Yokogawa.</p>
<p>S Alla instruktionsböcker för ATEX Ex (explosionssäkra) produkter är tillgängliga på engelska, tyska och franska. Om Ni behöver instruktioner för dessa explosionssäkra produkter på annat språk, skall Ni kontakta närmaste Yokogawakontor eller representant.</p>	<p>RO Toate manualele de instructiuni pentru produsele ATEX Ex sunt in limba engleza, germana si franceza. In cazul in care doriti instructiunile in limba locala, trebuie sa contactati cel mai apropiat birou sau reprezentant Yokogawa.</p>
<p>GR Όλα τα εγχειρίδια λειτουργίας των προϊόντων με ATEX Ex διατίθενται στα Αγγλικά, Γερμανικά και Γαλλικά. Σε περίπτωση που χρειάζεστε οδηγίες σχετικά με Ex στην τοπική γλώσσα παρακαλούμε επικοινωνήστε με το πλησιέστερο γραφείο της Yokogawa ή αντιπρόσωπο της.</p>	<p>M Il-manwali kollha ta' l-istruzzjonijiet għal prodotti marbuta ma' ATEX Ex huma disponibbli bi-Ingliż, bi-Ġermaniż u bi-Franċiż. Jekk tkun teħtieġ struzzjonijiet marbuta ma' Ex fil-lingwa lokali tiegħek, għandek tikkuntattja lill-eqreb rappreżentant jew ufficiju ta' Yokogawa.</p>

2. Handling Cautions

This chapter provides important information on how to handle the transmitter. Read this carefully before using the transmitter.

The transmitters are thoroughly tested at the factory before shipment. When taking delivery of an instrument, visually check them to make sure that no damage occurred during shipment.

Also check that all transmitter mounting hardware shown in figure 2.1 is included. If the transmitter is ordered without the mounting bracket, the transmitter mounting hardware will not be included. After checking the transmitter, carefully repack it in its box and keep it there until you are ready to install it.

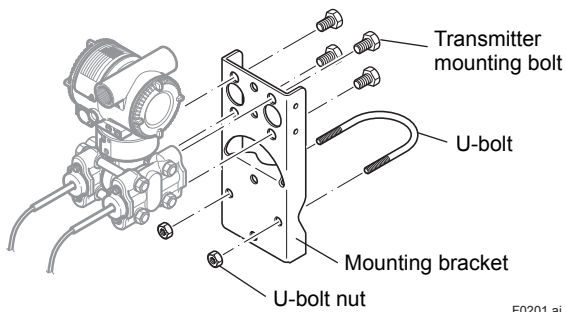


Figure 2.1 Transmitter Mounting Hardware

2.1 Model and Specifications Check

The model name and specifications are written on the name plate attached to the case.

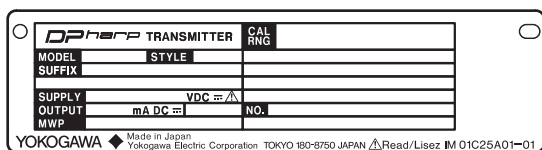


Figure 2.2 Name Plate

2.2 Unpacking

Keep the transmitter in its original packaging to prevent it from being damaged during shipment. Do not unpack the transmitter until it reaches the installation site.

2.3 Storage

The following precautions must be observed when storing the instrument, especially for a long period.

- (a) Select a storage area which meets the following conditions:
 - It is not exposed to rain or subject to water seepage/leaks.
 - Vibration and shock are kept to a minimum.
 - It has an ambient temperature and relative humidity within the following ranges.

Ambient temperature:

–40* to 85°C without integral indicator

–30* to 80°C with integral indicator

* –15°C when /HE is specified.

Relative humidity:

0% to 100% R.H. (at 40°C)

Preferred temperature and humidity:

approx. 25°C and 65% R.H.

- (b) When storing the transmitter, repack it carefully in the packaging that it was originally shipped with.
- (c) If the transmitter has been used, thoroughly clean the diaphragm surface of the diaphragm seal (pressure-detector section), so that there is no process fluid remaining on them. Before placing it in storage, also make sure that the pressure-detector is securely connected to the transmitter section.

2.4 Selecting the Installation Location

The transmitter is designed to withstand severe environmental conditions. However, to ensure that it will provide years of stable and accurate performance, take the following precautions when selecting the installation location.

- (a) Ambient Temperature
Avoid locations subject to wide temperature variations or a significant temperature gradient. If the location is exposed to radiant heat from plant equipment, provide adequate thermal insulation and/or ventilation.
- (b) Ambient Atmosphere
Do not install the transmitter in a corrosive atmosphere. If this cannot be avoided, there must be adequate ventilation as well as measures to prevent the leaking of rain water and the presence of standing water in the conduits.
- (c) Shock and Vibration
Although the transmitter is designed to be relatively resistant to shock and vibration, an installation site should be selected where this is kept to a minimum.
- (d) Installation of Explosion-protected Transmitters
An explosion-protected transmitter is certified for installation in a hazardous area containing specific gas types. See subsection 2.9 "Installation of an Explosion-Protected Transmitters."

2.5 Pressure Connection



CAUTION

- Never loosen the process flange bolts when an instrument is installed in a process. The device is under pressure, and a loss of seal can result in a sudden and uncontrolled release of process fluid.
- Since the accumulated process fluid may be toxic or otherwise harmful, take appropriate steps to prevent the contact of such fluids with the skin or eyes and the inhalation of vapors from these fluids even after dismantling the instrument from process line for maintenance.

The following precautions must be observed in order to safely operate the transmitter under pressure.

- (a) Make sure that there are no leaks in the impulse piping.
- (b) Never apply a pressure higher than the specified maximum working pressure.

2.6 Waterproofing of Cable Conduit Connections

Apply a non-hardening sealant to the threads to waterproof the transmitter cable conduit connections. (See figure 5.8, 5.9 and 5.10.)

2.7 Restrictions on Use of Radio Transceivers



IMPORTANT

Although the transmitter has been designed to resist high frequency electrical noise, if a radio transceiver is used near the transmitter or its external wiring, the transmitter may be affected by high frequency noise pickup. To test this, start out from a distance of several meters and slowly approach the transmitter with the transceiver while observing the measurement loop for noise effects. Thereafter use the transceiver outside the range where the noise effects were first observed.

2.8 Insulation Resistance and Dielectric Strength Test

Since the transmitter has undergone insulation resistance and dielectric strength tests at the factory before shipment, normally these tests are not required. If the need arises to conduct these tests, heed the following:

- (a) Do not perform such tests more frequently than is absolutely necessary. Even test voltages that do not cause visible damage to the insulation may degrade the insulation and reduce safety margins.

- (b) Never apply a voltage exceeding 500 V DC (100 V DC with an internal lightning protector) for the insulation resistance test, nor a voltage exceeding 500 V AC (100 V AC with an internal lightning protector) for the dielectric strength test.
- (c) Before conducting these tests, disconnect all signal lines from the transmitter terminals. The procedure for conducting these tests is as follows:

• Insulation Resistance Test

- 1) Short-circuit the + and – SUPPLY terminals in the terminal box. In case of 1 to 5 V output, short-circuit the SUPPLY+, SUPPLY – and A (VOUT +) terminals.
- 2) Turn OFF the insulation tester. Then connect the insulation tester plus (+) lead wire to the shorted SUPPLY terminals and the minus (–) leadwire to the grounding terminal.
- 3) Turn ON the insulation tester power and measure the insulation resistance. The voltage should be applied as briefly as possible to verify that the insulation resistance is at least 20 MΩ.
- 4) After completing the test and being very careful not to touch exposed conductors disconnect the insulation tester and connect a 100 kΩ resistor between the grounding terminal and the short-circuiting SUPPLY terminals. Leave this resistor connected at least one second to discharge any static potential. Do not touch the terminals while it is discharging.

• Dielectric Strength Test

- 1) Short-circuit the + and – SUPPLY terminals in the terminal box. In case of 1 to 5 V output, short-circuit the SUPPLY+, SUPPLY – and A (VOUT +) terminals.
- 2) Turn OFF the dielectric strength tester. Then connect the tester between the shorted SUPPLY terminals and the grounding terminal. Be sure to connect the grounding lead of the dielectric strength tester to the ground terminal.
- 3) Set the current limit on the dielectric strength tester to 10 mA, then turn ON the power and gradually increase the test voltage from '0' to the specified voltage.
- 4) When the specified voltage is reached, hold it for one minute.
- 5) After completing this test, slowly decrease the voltage to avoid any voltage surges.

2.9 Installation of an Explosion-Protected Instrument



NOTE

For FOUNDATION Fieldbus explosion protected type, please refer to IM 01C22T02-01E.
For PROFIBUS PA explosion protected type, please refer to IM 01C25T04-01EN.

If a customer makes a repair or modification to an intrinsically safe or explosionproof instrument and the instrument is not restored to its original condition, its intrinsically safe or explosionproof construction may be compromised and the instrument may be hazardous to operate. Please contact Yokogawa before making any repair or modification to an instrument.



CAUTION

This instrument has been tested and certified as being intrinsically safe or explosionproof. Please note that severe restrictions apply to this instrument's construction, installation, external wiring, maintenance and repair. A failure to abide by these restrictions could make the instrument a hazard to operate.



WARNING

Maintaining the safety of explosionproof equipment requires great care during mounting, wiring, and piping. Safety requirements also place restrictions on maintenance and repair. Please read the following sections very carefully.



WARNING

The range setting switch must not be used in a hazardous area.



IMPORTANT

For combined approval types
Once a device of multiple approval type is installed, it should not be re-installed using any other approval types. Apply a permanent mark in the check box of the selected approval type on the certification label on the transmitter to distinguish it from unused approval types.



IMPORTANT

All the blind plugs which accompany the EJX/EJA-E transmitters upon shipment from the factory are certified by the applicable agency in combination with those transmitters. The plugs which are marked with the symbols “◇ Ex” on their surfaces are certified only in combination with the EJX/EJA-E series transmitters.

2.9.1 FM Approval

a. FM Intrinsically Safe Type

Caution for FM intrinsically safe type. (Following contents refer “DOC. No. IFM022-A12”)

- Note 1. EJX/EJA-E Series Differential, gauge and absolute pressure transmitters with optional code /FS1 are applicable for use in hazardous locations.
- Applicable Standard: FM3600, FM3610, FM3611, FM3810
 - Intrinsically Safe for Class I, Division 1, Groups A, B, C & D. Class II, Division 1, Groups E, F & G and Class III, Division 1, Class I, Zone 0 in Hazardous Locations, AEx ia IIC
 - Nonincendive for Class I, Division 2, Groups A, B, C & D. Class II, Division 2, Groups F & G, Class I, Zone 2, Groups IIC, in Hazardous Locations.
 - Enclosure: Type 4X
 - Temperature Class: T4
 - Ambient temperature: -60 to 60°C

Note 2. Entity Parameters

- Intrinsically Safe Apparatus Parameters [Groups A, B, C, D, E, F and G]
 $V_{max} = 30\text{ V}$ $C_i = 6\text{ nF}$
 $I_{max} = 200\text{ mA}$ $L_i = 0\text{ }\mu\text{H}$
 $P_{max} = 1\text{ W}$

- * Associated Apparatus Parameters (FM approved barriers)
 $V_{oc} \leq 30\text{ V}$ $C_a > 6\text{ nF}$
 $I_{sc} \leq 200\text{ mA}$ $L_a > 0\text{ }\mu\text{H}$
 $P_{max} \leq 1\text{ W}$

- Intrinsically Safe Apparatus Parameters [Groups C, D, E, F and G]
 $V_{max} = 30\text{ V}$ $C_i = 6\text{ nF}$
 $I_{max} = 225\text{ mA}$ $L_i = 0\text{ }\mu\text{H}$
 $P_{max} = 1\text{ W}$

- * Associated Apparatus Parameters (FM approved barriers)
 $V_{oc} \leq 30\text{ V}$ $C_a > 6\text{ nF}$
 $I_{sc} \leq 225\text{ mA}$ $L_a > 0\text{ }\mu\text{H}$
 $P_{max} \leq 1\text{ W}$



- Entity Installation Requirements
 $V_{max} \geq V_{oc}$ or U_o or V_t , $I_{max} \geq I_{sc}$ or I_o or I_t ,
 P_{max} (or P_o) $\leq P_i$, C_a or $C_o \geq C_i + C_{cable}$,
 L_a or $L_o \geq L_i + L_{cable}$

Note 3. Installation

- Barrier must be installed in an enclosure that meets the requirements of ANSI/ISA S82.01.
- Control equipment connected to barrier must not use or generate more than 250 V rms or V dc.
- Installation should be in accordance with ANSI/ISA RP12.6 “Installation of Intrinsically Safe Systems for Hazardous (Classified) Locations” and the National Electric Code (ANSI/NFPA 70).
- The configuration of associated apparatus must be FMRC Approved.
- Dust-tight conduit seal must be used when installed in a Class II, III, Group E, F and G environments.
- Associated apparatus manufacturer’s installation drawing must be followed when installing this apparatus.
- The maximum power delivered from the barrier must not exceed 1 W.
- Note a warning label worded “SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY,” and “INSTALL IN ACCORDANCE WITH DOC. No. IFM022-A12”

Note 4. Maintenance and Repair



- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void Factory Mutual Intrinsically safe and Nonincendive Approval.

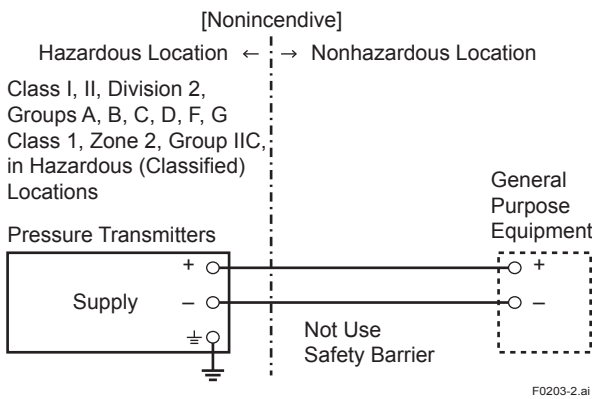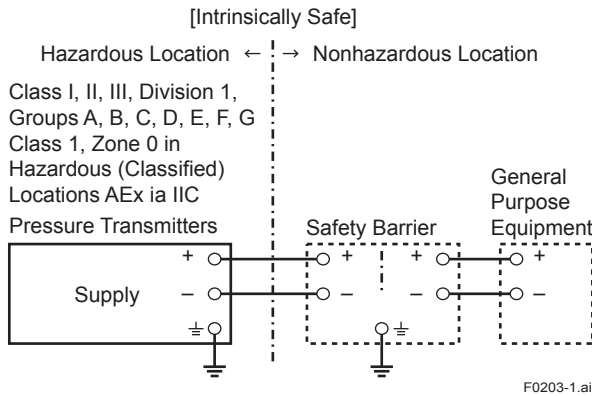

- Output signal: 4 to 20 mA
15 mA (FOUNDATION Fieldbus and PROFIBUS PA type)
1 to 5 V (Low Power type)

Note 2. Wiring

- All wiring shall comply with National Electrical Code ANSI/NFPA70 and Local Electrical Codes.
- When installed in Division 1, "FACTORY SEALED, CONDUIT SEAL NOT REQUIRED."
- Wiring connection for output signal code Q (Low Power type) shall follow the diagram below.

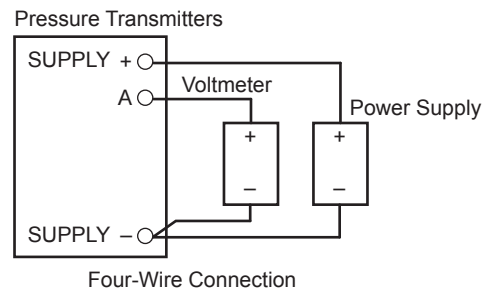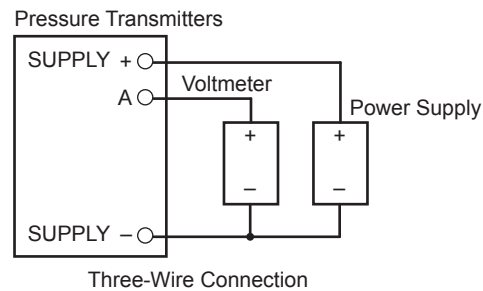

b. FM Explosionproof Type

Caution for FM explosionproof type.

Note 1. EJX/EJA-E Series pressure transmitters with optional code /FF1 are applicable for use in hazardous locations.

- Applicable Standard: FM3600, FM3615, FM3810, ANSI/NEMA 250
- Explosionproof for Class I, Division 1, Groups B, C and D.
- Dust-ignitionproof for Class II/III, Division 1, Groups E, F and G.
- Enclosure: Type 4X
- Temperature Class: T6
- Ambient Temperature: -40 to 60°C
- Supply Voltage: 42 V dc max.
32 V dc max. (FOUNDATION Fieldbus and PROFIBUS PA type)
9 to 28 V dc, 27 mW (Low Power type)

Note 3. Operation

- Keep the "WARNING" nameplate attached to the transmitter.
WARNING: OPEN CIRCUIT BEFORE REMOVING COVER. FACTORY SEALED, CONDUIT SEAL NOT REQUIRED. INSTALL IN ACCORDANCE WITH THE USERS MANUAL IM 01C25.
- Take care not to generate mechanical sparking when accessing to the instrument and peripheral devices in a hazardous location.

Note 4. Maintenance and Repair

- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void Factory Mutual Explosionproof Approval.

c. FM Intrinsically Safe Type/FM Explosionproof Type

EJX/EJA-E Series pressure transmitters with optional code /FU1 or /V1U1 can be selected the type of protection (FM Intrinsically Safe or FM Explosionproof) for use in hazardous locations.

Note 1. For the installation of this transmitter, once a particular type of protection is selected, any other type of protection cannot be used. The installation must be in accordance with the description about the type of protection in this instruction manual.

Note 2. In order to avoid confusion, unnecessary marking is crossed out on the label other than the selected type of protection when the transmitter is installed.

2.9.2 CSA Certification

a. CSA Intrinsically Safe Type

Caution for CSA Intrinsically safe and nonincendive type. (Following contents refer to "DOC No. ICS013-A13")

Note 1. EJX/EJA-E Series differential, gauge, and absolute pressure transmitters with optional code /CS1 are applicable for use in hazardous locations

Certificate: 1606623

[For CSA C22.2]

- Applicable Standard: C22.2 No.0, C22.2 No.0.4, C22.2 No.25, C22.2 No.94, C22.2 No.157, C22.2 No.213, C22.2 No.61010-1, C22.2 No.61010-2-030, C22.2 No.60079-0
- Intrinsically Safe for Class I, Division 1, Groups A, B, C & D, Class II, Division 1, Groups E, F & G, Class III, Division 1
- Nonincendive for Class I, Division 2, Groups A, B, C & D, Class II, Division 2, Groups F & G, Class III, Division 1
- Enclosure: Type 4X
- Temp. Code: T4
- Amb. Temp.: -50* to 60°C
* -15°C when /HE is specified.
- Process Temperature: 120°C max.

[For CSA E60079]


- Applicable Standard: CAN/CSA E60079-11, CAN/CSA E60079-15, IEC 60529:2001
- Ex ia IIC T4, Ex nL IIC T4
- Ambient Temperature: -50* to 60°C
* -15°C when /HE is specified.
- Max. Process Temp.: 120°C
- Enclosure: IP66/IP67


Note 2. Entity Parameters

- Intrinsically safe ratings are as follows:
Maximum Input Voltage (Vmax/Ui) = 30 V
Maximum Input Current (Imax/Ii) = 200 mA
Maximum Input Power (Pmax/Pi) = 0.9 W
Maximum Internal Capacitance (Ci) = 10 nF
Maximum Internal Inductance (Li) = 0 μH
- Type "n" or Nonincendive ratings are as follows:
Maximum Input Voltage (Vmax/Ui) = 30 V
Maximum Internal Capacitance (Ci) = 10 nF
Maximum Internal Inductance (Li) = 0 μH
- Installation Requirements
Uo ≤ Ui, Io ≤ Ii, Po ≤ Pi,
Co ≥ Ci + Ccable, Lo ≥ Li + Lcable
Voc ≤ Vmax, Isc ≤ Imax,
Ca ≥ Ci + Ccable, La ≥ Li + Lcable
Uo, Io, Po, Co, Lo, Voc, Isc, Ca and La are parameters of barrier.

Note 3. Installation

- In any safety barrier used output current must be limited by a resistor 'R' such that Io=Uo/R or Isc=Voc/R.
- The safety barrier must be CSA certified.
- Input voltage of the safety barrier must be less than 250 Vrms/Vdc.
- Installation should be in accordance with Canadian Electrical Code Part I and Local Electrical Code.
- Dust-tight conduit seal must be used when installed in Class II and III environments.
- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation and Yokogawa Corporation of America is prohibited and will void Canadian Standards Intrinsically safe and nonincendive Certification.

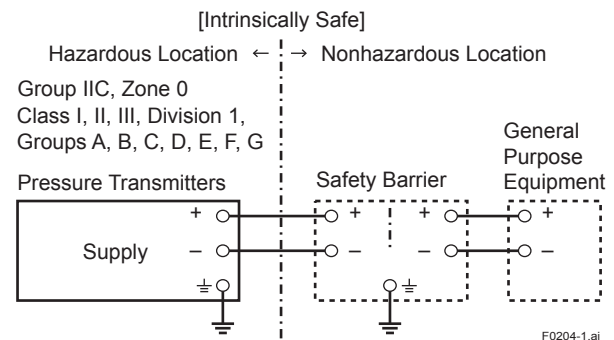

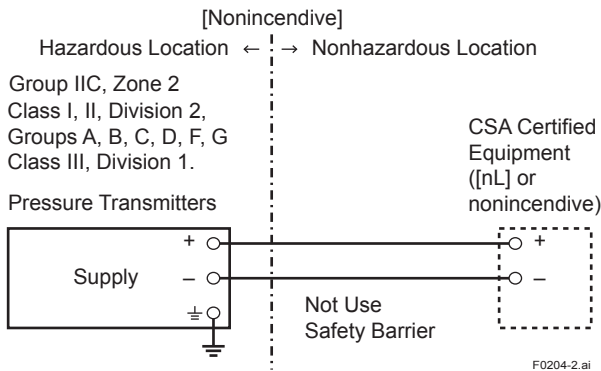

b. CSA Explosionproof Type

Caution for CSA explosionproof type.



Note 1. EJX/EJA-E Series pressure transmitters with optional code /CF1 are applicable for use in hazardous locations:

- Certificate: 2014354
- Applicable Standard: C22.2 No.0, C22.2 No.0.4, C22.2 No.0.5, C22.2 No.25, C22.2 No.30, C22.2 No.94, C22.2 No.61010-1, C22.2 No.60079-0, C22.2 No.61010-2-030, C22.2 No.60079-1
- Explosion-proof for Class I, Groups B, C and D.
- Dustignition-proof for Class II/III, Groups E, F and G.
- Enclosure: Type 4X
- Temperature Code: T6...T4
- Ex d IIC T6...T4
- Enclosure: IP66/IP67
- Maximum Process Temperature: 120°C (T4), 100°C (T5), 85°C (T6)
- Ambient Temperature: -50* to 75°C (T4), -50* to 80°C (T5), -50* to 75°C (T6)
* -15°C when /HE is specified.
- Supply Voltage: 42 V dc max.
32 V dc max. (FOUNDATION Fieldbus and PROFIBUS PA type)
9 to 28 V dc, 27 mW (Low Power type)
- Output Signal: 4 to 20 mA dc
15 mA (FOUNDATION Fieldbus and PROFIBUS PA type)
1 to 5 V (Low Power type)


Note 2. Wiring

- All wiring shall comply with Canadian Electrical Code Part I and Local Electrical Codes.
- In hazardous location, wiring shall be in conduit as shown in the figure.


- **WARNING:**
A SEAL SHALL BE INSTALLED WITHIN 50cm OF THE ENCLOSURE.
UN SCELLEMENT DOIT ÊTRE INSTALLÉ À MOINS DE 50cm DU BOÎTIER.
- **WARNING:**
WHEN INSTALLED IN CL.I, DIV 2, SEAL NOT REQUIRED.
UNE FOIS INSTALLÉ DANS CL I, DIV 2, AUCUN JOINT N'EST REQUIS.

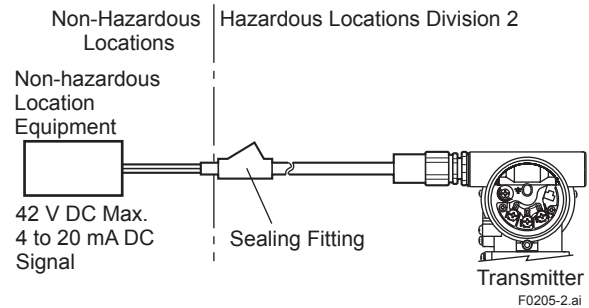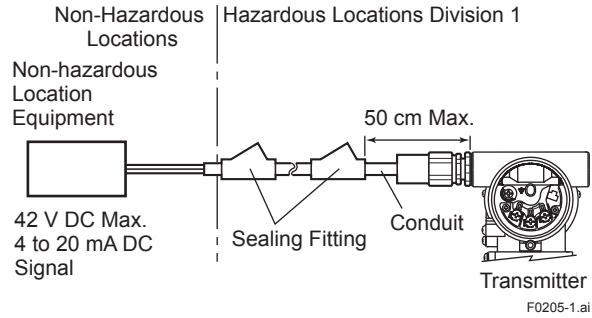

- All wiring shall comply with local installation requirements and local electrical code.
- In hazardous locations, the cable entry devices shall be of a certified flameproof type, suitable for the conditions of use and correctly installed.
- Unused apertures shall be closed with suitable flameproof certified blanking elements. (The plug attached is flameproof certified.)
- Wiring connection for output signal code Q (Low Power type) shall follow the diagram below.

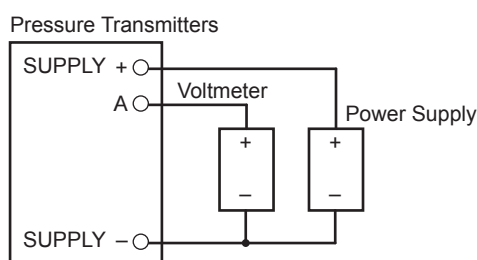

Three-Wire Connection

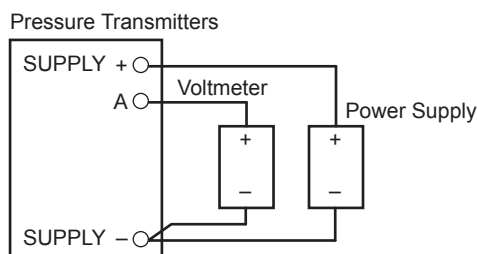

Four-Wire Connection

F0212.ai

Note 3. Operation

- **WARNING:**
AFTER DE-ENERGIZING, DELAY 5 MINUTES BEFORE OPENING.
APRÉS POWER-OFF, ATTENDRE 5 MINUTES AVANT D'OUVRIR.
- **WARNING:**
WHEN AMBIENT TEMPERATURE $\geq 65^{\circ}\text{C}$,
USE THE HEAT-RESISTING CABLES $\geq 90^{\circ}\text{C}$.
QUAND LA TEMPÉRATURE AMBIANTE $\geq 65^{\circ}\text{C}$,
UTILISEZ DES CÂBLES RÉSISTANTES Á LA CHALEUR $\geq 90^{\circ}\text{C}$.
- Take care not to generate mechanical sparking when accessing to the instrument and peripheral devices in a hazardous location.

Note 4. Maintenance and Repair

- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation and Yokogawa Corporation of America is prohibited and will void Canadian Standards Explosionproof Certification.

c CSA Intrinsically Safe Type/CSA Explosionproof Type

EJX/EJA-E Series pressure transmitters with optional code /CU1 or /V1U1 can be selected the type of protection (CSA Intrinsically Safe or CSA Explosionproof) for use in hazardous locations.

Note 1. For the installation of this transmitter, once a particular type of protection is selected, any other type of protection cannot be used. The installation must be in accordance with the description about the type of protection in this instruction manual.

Note 2. In order to avoid confusion, unnecessary marking is crossed out on the label other than the selected type of protection when the transmitter is installed.

2.9.3 ATEX Certification

(1) Technical Data

a. ATEX Intrinsically Safe Ex ia

Caution for ATEX Intrinsically safe type.

Note 1. EJX/EJA-E Series pressure transmitters with optional code /KS21 for potentially explosive atmospheres:


- No. DEKRA 11ATEX0228 X
- Applicable Standard:
EN 60079-0:2009, EN 60079-11:2007,
EN 60079-26:2007, EN 61241-11:2006
- Type of Protection and Marking code:
Ex ia IIC T4 Ga
Ex ia IIIC T85 °C T100 °C T120 °C Db
- Group: II
- Category: 1G, 2D
- Ambient Temperature for EPL Ga:
-50 to 60°C
- Ambient Temperature for EPL Db:
-30* to 60°C
* -15°C when /HE is specified.
- Process Temperature (Tp.): 120°C max.
- Maximum Surface Temperature for EPL Db:
T85°C (Tp.: 80°C)
T100°C (Tp.: 100°C)
T120°C (Tp.: 120°C)
- Enclosure: IP66 / IP67

Note 2 Electrical Data

- In type of explosion protection intrinsic safety Ex ia IIC or Ex ia IIIC, only for connection to a certified intrinsically safe circuit with following maximum values:
 $U_i = 30 \text{ V}$
 $I_i = 200 \text{ mA}$
 $P_i = 0.9 \text{ W}$
 (Linear Source)
 Maximum internal capacitance; $C_i = 27.6 \text{ nF}$
 Maximum internal inductance; $L_i = 0 \text{ }\mu\text{H}$

Note 3. Installation

- Refer to the control drawing. All wiring shall comply with local installation requirements.

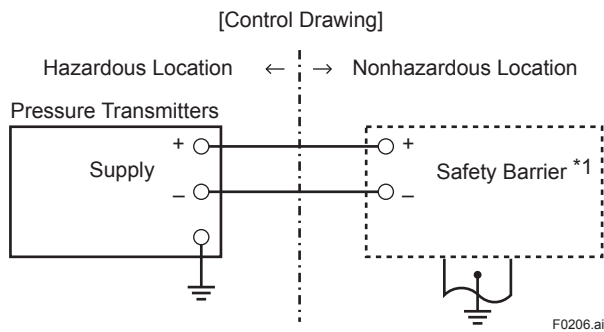

*1: In any safety barriers used the output current must be limited by a resistor "R" such that $I_o = U_z/R$.

Note 4. Maintenance and Repair

- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void DEKRA Intrinsically safe Certification.

Note 5. Special Conditions for Safe Use



WARNING

- In the case where the enclosure of the Pressure Transmitter is made of aluminium, if it is mounted in an area where the use of category 1 G apparatus is required, it must be installed such, that, even in the event of rare incidents, ignition sources due to impact and friction sparks are excluded.
- Electrostatic charge may cause an explosion hazard. Avoid any actions that cause the generation of electrostatic charge, such as rubbing with a dry cloth on coating face of the product.
- In case of the enclosure of the Pressure Transmitter with paint layers, if it is mounted in an area where the use of category 2D apparatus is required, it shall be installed in such a way that the risk from electrostatic discharges and propagating brush discharges caused by rapid flow of dust is avoided.
- To satisfy IP66 or IP67, apply waterproof glands to the electrical connection port.
- When the lightning protector option is specified, the apparatus is not capable of withstanding the 500V insulation test required by EN60079-11. This must be taken into account when installing the apparatus.

b. ATEX Flameproof Type

Caution for ATEX flameproof type.

Note 1. EJX/EJA-E Series pressure transmitters with optional code /KF22 for potentially explosive atmospheres:


- No. KEMA 07ATEX0109 X
- Applicable Standard: EN 60079-0:2009, EN 60079-1:2007, EN 60079-31:2009
- Type of Protection and Marking Code: Ex d IIC T6...T4 Gb, Ex tb IIIC T85°C Db
- Group: II
- Category: 2G, 2D
- Enclosure: IP66 / IP67
- Temperature Class for gas-proof: T6, T5, and T4
- Ambient Temperature for gas-proof: -50 to 75°C (T6), -50 to 80°C (T5), and -50 to 75°C (T4)
- Maximum Process Temperature (Tp.) for gas-proof: 85°C (T6), 100°C (T5), and 120°C (T4)
- Maximum Surface Temperature for dust-proof: T85°C (Tamb.: -30* to 75°C, Tp.: 85°C)
* -15°C when /HE is specified.

Note 2. Electrical Data

- Supply voltage: 42 V dc max. 32 V dc max. (FOUNDATION Fieldbus and PROFIBUS PA type)
9 to 28 V dc, 27 mW (Low Power type)
- Output signal: 4 to 20 mA
15 mA (FOUNDATION Fieldbus and PROFIBUS PA type)
1 to 5 V (Low Power type)

Note 3. Installation

- All wiring shall comply with local installation requirement.
- Cable glands, adapters and/or blanking elements with a suitable IP rating shall be of Ex d IIC/Ex tb IIIC certified by ATEX and shall be installed so as to maintain the specific degree of protection (IP Code) of the equipment.
- Wiring connection for output signal code Q (Low Power type) shall follow the diagram below.

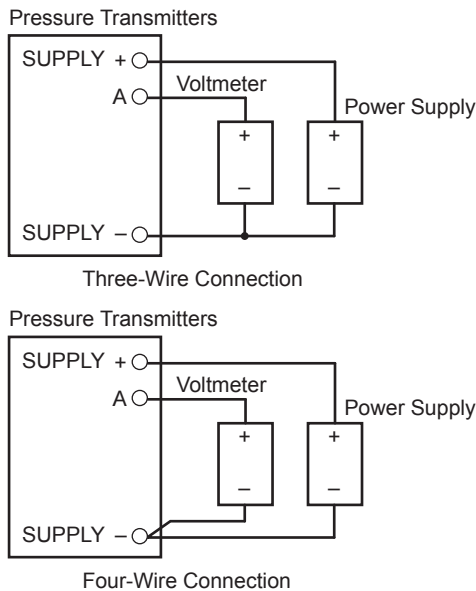

F0213.ai

Note 4. Operation

- Keep the “WARNING” label attached to the transmitter.
WARNING: AFTER DE-ENERGIZING, DELAY 5 MINUTES BEFORE OPENING. WHEN THE AMBIENT TEMP. ≥65°C, USE HEAT-RESISTING CABLE AND CABLE GLAND ≥90°C.
- Take care not to generate mechanical sparking when accessing to the instrument and peripheral devices in a hazardous location.

Note 5. Special Conditions for Safe Use



WARNING

- Electrostatic charge may cause an explosion hazard. Avoid any actions that cause the generation of electrostatic charge, such as rubbing with a dry cloth on coating face of the product.
- In the case where the enclosure of the Pressure Transmitter is made of aluminium, if it is mounted in an area where the use of category 2D apparatus is required, it shall be installed in such a way that the risk from electrostatic discharges and propagating brush discharges caused by rapid flow of dust is avoided.
- The instrument modification or parts replacement by other than an authorized Representative of Yokogawa Electric Corporation is prohibited and will void the certification.

c. ATEX Intrinsically Safe Type/ATEX Flameproof Type

EJX/EJA-E Series pressure transmitters with optional code /KU22 or /V1U1 can be selected the type of protection ATEX Flameproof, Intrinsically Safe. Ex ia, or Ex ic for use in hazardous area.

Note 1. For the installation of this transmitter, once a particular type of protection is selected, any other type of protection cannot be used. The installation must be in accordance with the description about the type of protection in this user’s manual.

Note 2. For combined approval types Once a device of multiple approval type is installed, it should not be re-installed using any other approval types. Apply a permanent mark in the check box of the selected approval type on the certification label on the transmitter to distinguish it from unused approval types.

• ATEX Intrinsically Safe Ex ic

Caution for ATEX intrinsically safe Ex ic

- Applicable Standard: EN 60079-0:2009/EN 60079-0:2012, EN 60079-11:2012
- Type of Protection and Marking Code: Ex ic IIC T4 Gc
- Ambient Temperature: -30* to +60°C
* -15°C when /HE is specified.
- Ambient Humidity: 0 to 100% (No condensation)
- Maximum Process Temperature: 120°C
- IP Code: IP66
- Ambient pollution degree: 2
- Overvoltage category: I

Note 1. Electrical Data


Ui = 30 V
Ci = 27.6 nF
Li = 0 μH

Note 2. Installation

- All wiring shall comply with local installation requirements. (refer to the control drawing)
- Cable glands, adapters and/or blanking elements shall be of Ex “n”, Ex “e” or Ex “d” and shall be installed so as to maintain the specified degree of protection (IP Code) of the transmitters.

Note 3. Maintenance and Repair

- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void ATEX intrinsically safe.

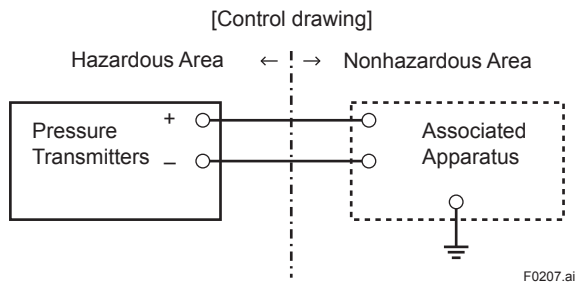

Note 4. Specific Conditions of Use


WARNING

- Electrostatic charge may cause an explosion hazard. Avoid any actions that cause the generation of electrostatic charge, such as rubbing with a dry cloth on coating face of the product.
- When the lightning protector option is specified, the apparatus is not capable of withstanding the 500V insulation test required by EN60079-11. This must be taken into account when installing the apparatus.

(2) Electrical Connection

A mark indicating the electrical connection type is stamped near the electrical connection port. These marks are as followed.

Screw Size	Marking
ISO M20 × 1.5 female	△ M
ANSI 1/2 NPT female	△ N or △ W

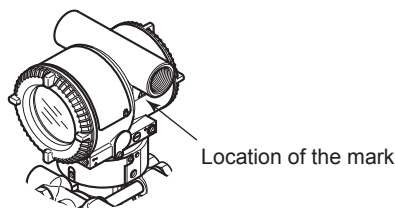

(3) Installation

WARNING

- All wiring shall comply with local installation requirements and the local electrical code.
- There is no need for conduit seal in Division 1 and Division 2 hazardous locations because this product is sealed at the factory.

(4) Operation

WARNING

- OPEN CIRCUIT BEFORE REMOVING COVER. INSTALL IN ACCORDANCE WITH THIS USER'S MANUAL
- Take care not to generate mechanical sparking when access to the instrument and peripheral devices in a hazardous location.


(5) Maintenance and Repair

WARNING


The instrument modification or parts replacement by other than an authorized Representative of Yokogawa Electric Corporation is prohibited and will void the certification.

(6) Name Plate


● Name plate

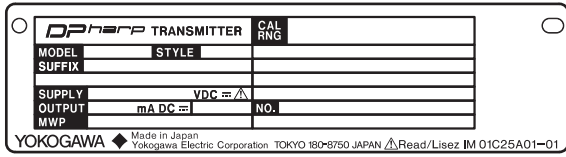


● Tag plate for flameproof type

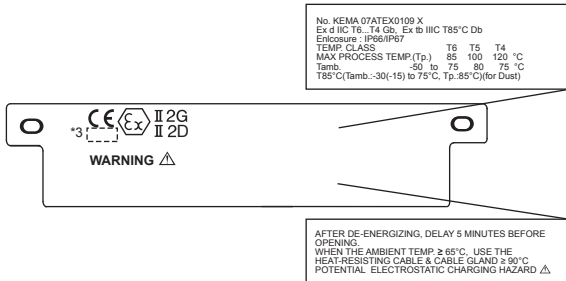

● Tag plate for intrinsically safe type

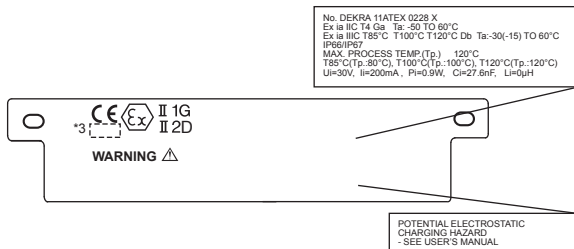

● Tag plate for intrinsically safe Ex ic

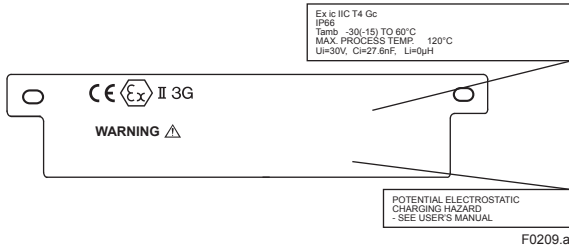

- MODEL: Specified model code.
- STYLE: Style code.
- SUFFIX: Specified suffix code.
- SUPPLY: Supply voltage.
- OUTPUT: Output signal.
- MWP: Maximum working pressure.
- CAL RNG: Specified calibration range.
- NO.: Serial number and year of production*1.
- TOKYO 180-8750 JAPAN: The manufacturer name and the address*2.

*1: The first digit in the three numbers next to the nine letters of the serial number appearing after "NO." on the nameplate indicates the year of production. The following is an example of a serial number for a product that was produced in 2010:

91K819857 032

The year 2010

*2: "180-8750" is a zip code which represents the following address.

2-9-32 Nakacho, Musashino-shi, Tokyo Japan

*3: The identification number of Notified Body.

2.9.4 IECEx Certification

EJX Series pressure transmitters with optional code /SU21 can be selected the type of protection (IECEx Intrinsically Safe Ex ia, Ex ic or flameproof) for use in hazardous locations. EJX Series pressure transmitters with optional code /SS26 can be selected the type of protection (IECEx intrinsically safe Ex ia or Ex ic) for use in hazardous locations. EJX Series pressure transmitters with optional code /SU2 can be selected the type of protection (IECEx Intrinsically Safe/type n or flameproof) for use in hazardous locations.

Note 1. For the installation of this transmitter, once a particular type of protection is selected, any other type of protection cannot be used. The installation must be in accordance with the description about the type of protection in this instruction manual.

Note 2. For combined approval types, once a device of multiple approval type is installed, it should not be re-installed using any other approval types. Apply a permanent mark in the check box of the selected approval type on the certification label on the transmitter to distinguish it from unused approval types.

a. IECEx Intrinsically Safe Ex ia

Caution for IECEx Intrinsically safe Ex ia.

- Note 1. EJX/EJA-E series pressure transmitters with optional code /SU21 are applicable for use in hazardous locations
- No. IECEx DEK 11.0081X
 - Applicable Standard: IEC 60079-0:2011, IEC 60079-11:2011, IEC 60079-26:2006
 - Ex ia IIC T4 Ga
 - Ambient Temperature: -50 to 60°C
 - Max. Process Temp.: 120°C


Note 2. Electrical Data

- Maximum Input Voltage (Ui) = 30 V
- Maximum Input Current (Ii) = 200 mA
- Maximum Input Power (Pi) = 0.9 W (linear source)
- Maximum Internal Capacitance (Ci) = 27.6 nF
- Maximum Internal Inductance (Li) = 0 μH

Note 3. Installation

- In any safety barrier used output current must be limited by a resistor 'R' such that $I_o = U_z / R$.

- The safety barrier must be IECEx certified.
- Input voltage of the safety barrier must be less than 250 Vrms/Vdc.
- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void IECEx certification.

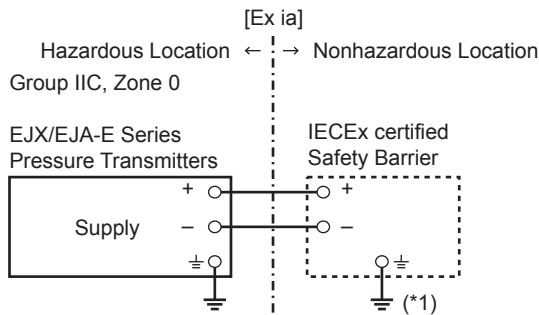

*1: When using non isolation barrier, connect (*1) to IS barrier system.

F0216.ai

Note 4. Specific Condition of Use



WARNING

- Electrostatic charge may cause an explosion hazard. Avoid any actions that cause the generation of electrostatic charge, such as rubbing with a dry cloth on coating face of the product.
- In the case where the enclosure of the pressure transmitter is made of aluminum, if it is mounted in an area where the use of EPL Ga equipment is required, it shall be installed in such a way that, even in the event of rare incidents, ignition sources due to impact and friction sparks are excluded.
- When the lightning protector option is specified, the apparatus is not capable of withstanding the 500 V insulation test required by IEC 60079-11. This must be taken into account when installing the apparatus.

b. IECEx Intrinsically Safe Ex ic

Caution for IECEx Intrinsically safe Ex ic.

- Note 1. EJX/EJA-E series pressure transmitters with optional code /SU21 are applicable for use in hazardous locations
- No. IECEx DEK 13.0061X
 - Applicable Standard: IEC 60079-0:2011, IEC 60079-11:2011


- Ex ic IIC T4 Gc
- Ambient Temperature: -30* to 60°C
* -15 °C when /HE is specified.
- Max. Process Temp.: 120°C
- IP Code: IP66
- Overvoltage Category: I

Note 2. Electrical Data

Maximum Input Voltage (Ui) = 30 V
Maximum Internal Capacitance (Ci) = 27.6 nF
Maximum Internal Inductance (Li) = 0 μH

Note 3. Installation

- The pressure transmitter is allowed to be installed in “nL” systems, on condition that the output parameters of “nL” source (associated energy-limited apparatus) are suitable to the above mentioned input parameters of the pressure transmitter and the cable parameters.
- Cable glands, adapters and/or blanking elements shall be of Ex “n”, Ex “e” or Ex “d” and shall be installed so as to maintain the specified degree of protection of the equipment.
- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void IECEx certification.

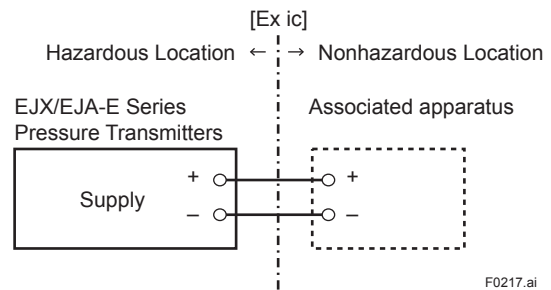

F0217.ai

Note 4. Specific Condition of Use



WARNING

- Electrostatic charge may cause an explosion hazard. Avoid any actions that cause the generation of electrostatic charge, such as rubbing with a dry cloth on coating face of the product.
- The apparatus is not capable of dielectric strength tests required by IEC 60079-11. This must be taken into account when installing the apparatus.

c. IECEx Intrinsicly Safe Type / type n

Caution for IECEx Intrinsicly safe and type n.

Note 1. EJX Series differential, gauge, and absolute pressure transmitters with optional code /SU2 are applicable for use in hazardous locations



- No. IECEx CSA 05.0005
- Applicable Standard: IEC 60079-0:2000, IEC 60079-11:1999, IEC 60079-15:2001
- Ex ia IIC T4, Ex nL IIC T4
- Ambient Temperature: -50 to 60°C
- Max. Process Temp.: 120°C
- Enclosure: IP66/IP67

Note 2. Electrical Data

- Intrinsicly safe ratings are as follows:
 Maximum Input Voltage (V_{max}/U_i) = 30 V
 Maximum Input Current (I_{max}/I_i) = 200 mA
 Maximum Input Power (P_{max}/P_i) = 0.9 W
 Maximum Internal Capacitance (C_i) = 10 nF
 Maximum Internal Inductance (L_i) = 0 μH
- Type "n" ratings are as follows:
 Maximum Input Voltage (V_{max}/U_i) = 30 V
 Maximum Internal Capacitance (C_i) = 10 nF
 Maximum Internal Inductance (L_i) = 0 μH
- Installation Requirements
 $U_o \leq U_i$, $I_o \leq I_i$, $P_o \leq P_i$,
 $C_o \geq C_i + C_{cable}$, $L_o \geq L_i + L_{cable}$
 $V_{oc} \leq V_{max}$, $I_{sc} \leq I_{max}$,
 $C_a \geq C_i + C_{cable}$, $L_a \geq L_i + L_{cable}$
 U_o , I_o , P_o , C_o , L_o , V_{oc} , I_{sc} , C_a and L_a are parameters of barrier.

Note 3. Installation

- In any safety barrier used output current must be limited by a resistor 'R' such that $I_o = U_o/R$.
- The safety barrier must be IECEx certified.
- Input voltage of the safety barrier must be less than 250 Vrms/Vdc.
- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation and will void IECEx Intrinsicly safe and type n certification.

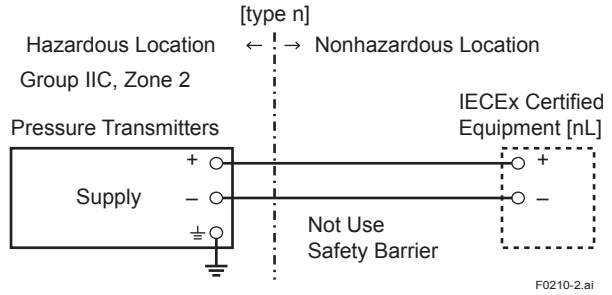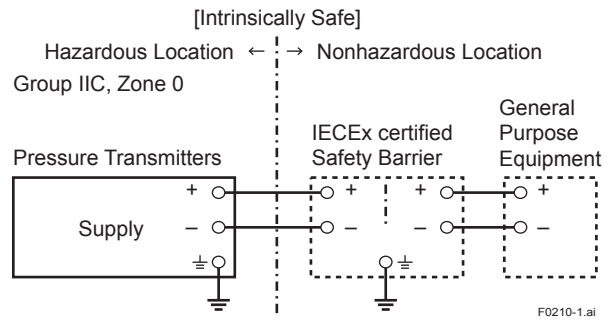

d. IECEx Flameproof Type



Caution for IECEx flameproof type.

Note 1. EJX/EJA-E Series pressure transmitters with optional code /SF2, /SU2, or /SU21 are applicable for use in hazardous locations:

- No. IECEx CSA 07.0008
- Applicable Standard: IEC60079-0:2011, IEC60079-1:2007-4
- Flameproof for Zone 1, Ex d IIC T6...T4 Gb
- Enclosure: IP66/IP67
- Maximum Process Temperature: 120°C (T4), 100°C (T5), 85°C (T6)
- Ambient Temperature: -50 to 75°C (T4), -50 to 80°C (T5), -50 to 75°C (T6)
- Supply Voltage: 42 V dc max. 32 V dc max. (FOUNDATION Fieldbus and PROFIBUS PA type)
 9 to 28 V dc, 27 mW (Low Power type)
- Output Signal: 4 to 20 mA dc
 15 mA (FOUNDATION Fieldbus and PROFIBUS PA type)
 1 to 5 V (Low Power type)

Note 2. Wiring

- In hazardous locations, the cable entry devices shall be of a certified flameproof type, suitable for the conditions of use and correctly installed.
- Unused apertures shall be closed with suitable flameproof certified blanking elements.
- Wiring connection for output signal code Q (Low Power type) shall follow the diagram below.

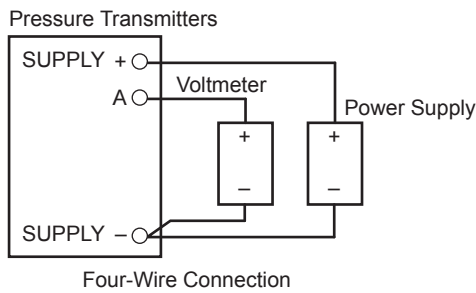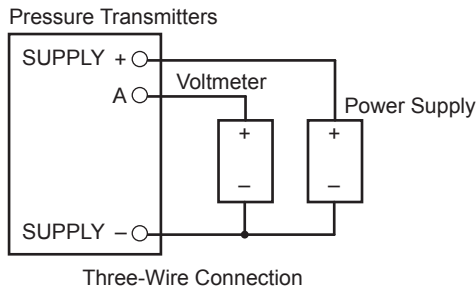

F0214.ai


Note 3. Operation

- WARNING: AFTER DE-ENERGIZING, DELAY 5 MINUTES BEFORE OPENING.
- WARNING: WHEN THE AMBIENT TEMP. $\geq 65^{\circ}\text{C}$, USE HEAT-RESISTING CABLE AND CABLE GLAND $\geq 90^{\circ}\text{C}$.
- Take care not to generate mechanical sparking when accessing to the instrument and peripheral devices in a hazardous location.
- Electrostatic charge may cause an explosion hazard. Avoid any actions that cause the generation of electrostatic charge, such as rubbing with a dry cloth on coating face of the product.

Note 4. Maintenance and Repair

- The instrument modification or parts replacement by other than authorized representative of Yokogawa Electric Corporation is prohibited and will void IECEx Certification.
- Electrical Connection
A mark indicating the electrical connection type is stamped near the electrical connection port. These marks are as followed.

Screw Size	Marking
ISO M20 × 1.5 female	$\triangle M$
ANSI 1/2 NPT female	$\triangle N$ or $\triangle W$

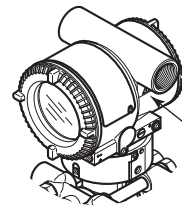

Location of the mark

F0215.ai

2.10 EMC Conformity Standards

- EN 61326-1 Class A, Table 2 (For use in industrial locations)
- EN 61326-2-3
- EN 61326-2-5 (for Fieldbus)



CAUTION

To meet EMC regulations, Yokogawa recommends that customers run signal wiring through metal conduits or use shielded twisted-pair cabling when installing EJX/EJA-E series transmitters in a plant.

2.11 Pressure Equipment Directive (PED)

(1) General

EJX/EJA-E Series pressure transmitters are categorized as piping under the pressure accessories section of directive 97/23/EC, which corresponds to Article 3, Paragraph 3 of PED, denoted as Sound Engineering Practice (SEP).

(2) Technical Data

Article 3, Paragraph 3 of PED, denoted as Sound Engineering Practice (SEP).

(3) Operation



CAUTION

- The temperature and pressure of fluid should be maintained at levels that are consistent with normal operating conditions.
- The ambient temperature should be maintained at a level that is consistent with normal operating conditions.
- Please take care to prevent water hammer and the like from inducing excessive pressures in pipes and valves. If phenomena are likely, install a safety valve or take some other appropriate measure to prevent pressure from exceeding PS.
- Take appropriate measures at the device or system level to protect transmitters if they are to be operated near an external heat source.

2.12 Safety Requirement Standards

Applicable standard: EN 61010-1, EN 61010-2-30, C22.2 No.61010-1, C22.2 No.61010-2-030

(1) Pollution Degree 2

"Pollution degree" describes the degree to which a solid, liquid, or gas which deteriorates dielectric strength or surface resistivity is adhering. " 2 " applies to normal indoor atmosphere. Normally, only non-conductive pollution occurs. Occasionally, however, temporary conductivity caused by condensation must be expected.

(2) Installation Category I

"Overvoltage category (Installation category)" describes a number which defines a transient overvoltage condition. It implies the regulation for impulse withstand voltage. " I " applies to electrical equipment which is supplied from the circuit when appropriate transient overvoltage control means (interfaces) are provided.

(3) Altitude of installation site:

Max. 2,000 m above sea level

(4) Indoor/Outdoor use

3. Component Names


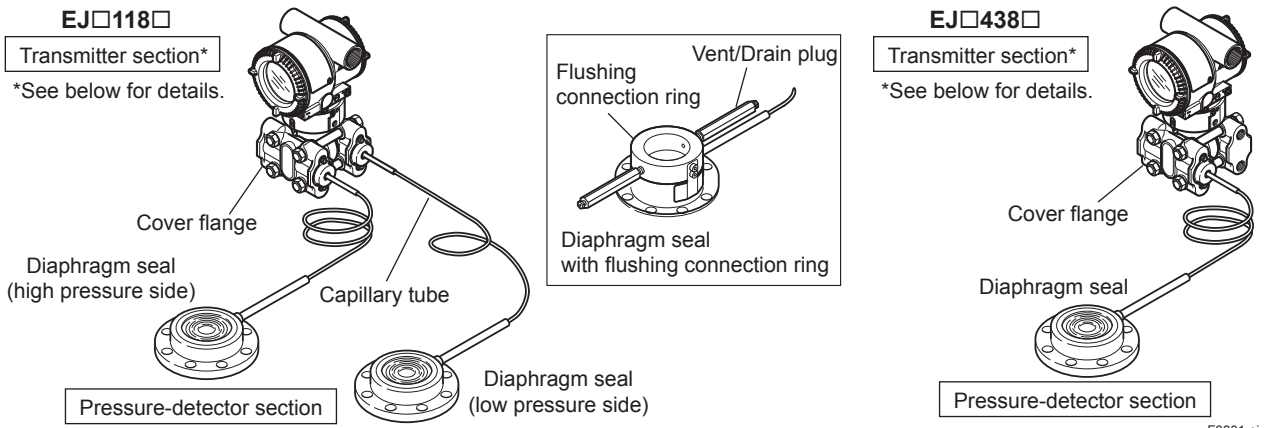


Figure 3.1 Component Names (External View of Flush type)

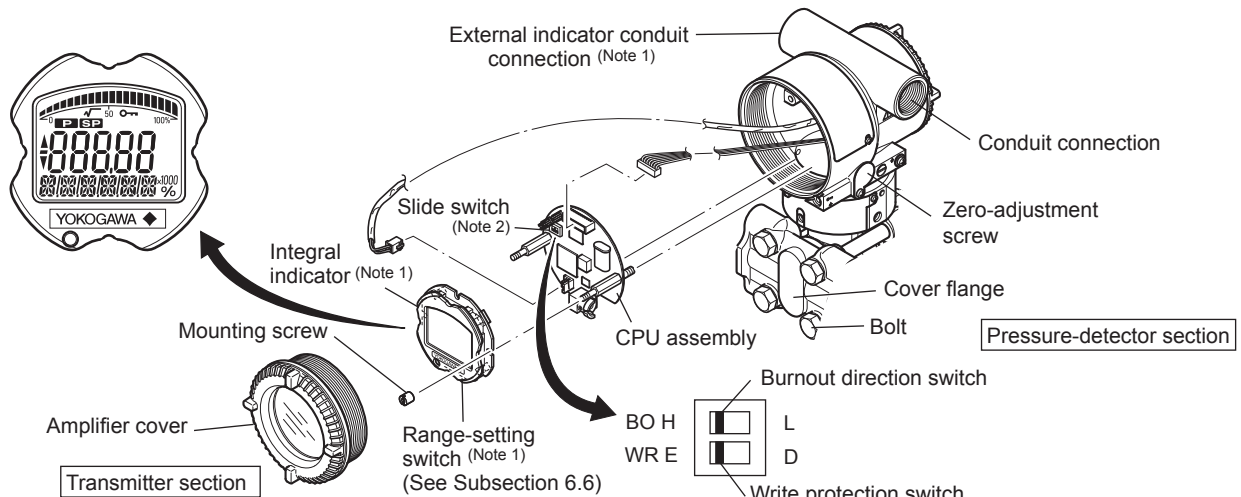

Burnout direction switch (BO)			
Burnout Direction Switch Position (Note 2)	H	L	L
	E	D	D
Burnout Direction	HIGH		LOW

Hardware write protection switch (WR)			
Write Protection Switch Position (Note 2)	H	L	L
	E	D	D
Write Protection	NO (Write enabled)		YES (Write disabled)

Note 1: See subsection 8.2, "Model and Suffix Codes," for details.

Note 2: Applicable for BRAIN/HART communication type. Set the switches as shown in the figure above to set the burn-out direction and write protection. The Burnout switch is set to the H side for delivery (unless option code /C1 or /C2 is specified in the order), and the hardware write protection switch is set to E side. The setting of the switches can be confirmed via communication. An external zero adjustment screw can only be disabled by communication. To disable the screw, set a parameter before activating the hardware write protect function. See each communication manual for details.

Figure 3.2 Component Names (Transmitter Section Details)

Table 3.1 Display Symbol

Display Symbol	Meaning of Display Symbol
√	Display mode is 'square root'. (Display is not lit when 'linear' mode.)
▲	The output signal being zero-adjusted is increasing. Besides, this symbol lights when local parameter setting is in progress.
▼	The output signal being zero-adjusted is decreasing. Besides, this symbol lights when local parameter setting is in progress.
Ⓜ	Write protect function is enabled.

F0303.ai

4. Installation

4.1 Precautions

Before installing the transmitter, read the cautionary notes in Section 2.4, "Selecting the Installation Location." For additional information on the ambient conditions allowed at the installation location, refer to Subsection 8.1 "Standard Specifications."

IMPORTANT

- When welding piping during construction, take care not to allow welding currents to flow through the transmitter.
- Do not step on this instrument after installation.
- For the EJ□438□, there is a small hole in the low pressure side cover flange that is used to measure the atmospheric pressure. The hole must not face upward. See section 8.4, "Dimensions," for the location of the hole.
- Never loosen the four bolts securing the cover flanges (Refer to figure 3.2.) If the seal liquid leaks, the transmitter cannot be used.

IMPORTANT


Please use a gasket with an inside diameter ($\varnothing d$) that is greater than the diameter of the diaphragm seal. If a gasket with a smaller inside diameter is used, the diaphragm may not function correctly. (Refer to Subsection 8.4 'Dimensions')

IMPORTANT

- When measuring the liquid level of the tank, the minimum liquid level (zero point) must be set to a level at least 50 mm above the center of the high pressure side diaphragm seal (see Figure 4.2).
- Correctly install the diaphragm seals on the high and low pressure sides of the process, checking the label on each seal.
- To avoid measuring error duets temperature difference between the two diaphragm seals, capillary tube must be bound together. The capillary tube must be securely fixed to the tank wall to prevent movement by wind or vibration. If the capillary tube is too long, loosely coil the extra tube portion (coil diameter of 300 mm or more) and secure the coiled tube with a clamp.
- During the diaphragm seal installation, ensure as far as possible that no seal liquid head pressure is applied to the diaphragm seals.
- Exercise care so as not to damage diaphragm surfaces. Since the diaphragm protrudes approx. 1 mm from the flange surface, do not place the pressure detector section face down on a surface as this can damage the diaphragm.
- Do not sharply bend or twist capillary tube or apply excessive stress to them.

4.2 Mounting the Diaphragm Seals

Mount the diaphragm seals using the flanges as shown in Figure 4.1 Figure 4.2 shows how to mount the diaphragm seals on a tank. The mating flange, gasket, bolts and nuts are to be procured by the customer.

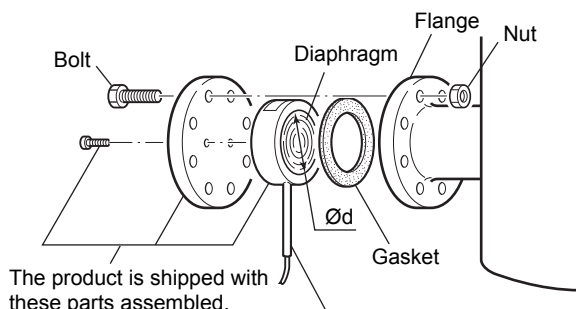

The product is shipped with these parts assembled.


Correctly install the diaphragm seals on the high and low pressure sides of the process (The label on each diaphragm seal is marked **HIGH** or **LOW**.)

F0401.ai

Figure 4.1 Mounting the Diaphragm Seals

IMPORTANT

Install the sealed diaphragm so that the shank positions downward.

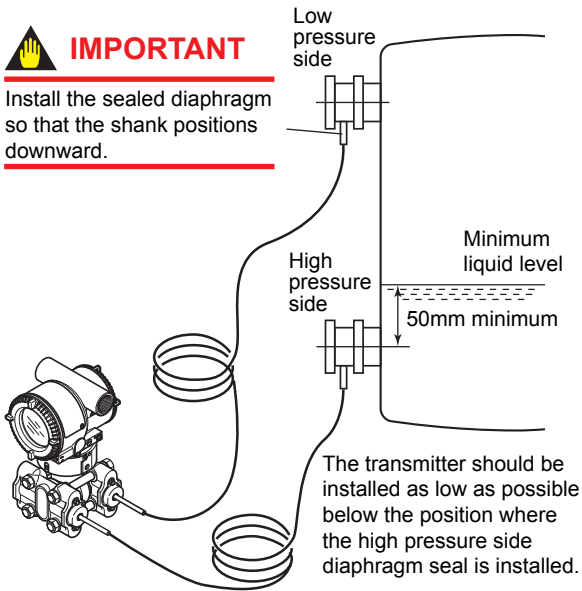

IMPORTANT

Install the sealed diaphragm so that the shank positions downward.

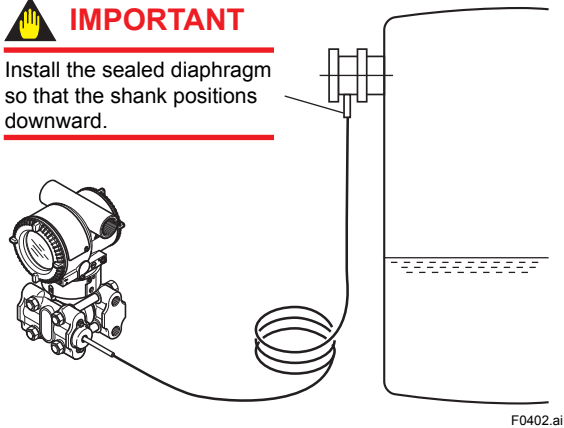



Figure 4.2 Installing the Diaphragm Seals to a Tank

F0402.ai


4.3 Transmitter Mounting

- The transmitter can be mounted on a nominal 50 mm (2-inch) pipe using the mounting bracket supplied, as shown in Figure 4.3. The transmitter can be mounted on either a horizontal or a vertical pipe.
- When mounting the bracket on the transmitter, tighten the (four) bolts that hold the transmitter to a torque of approximately 39 N·m {4 kgf·m}.

Horizontal pipe mounting

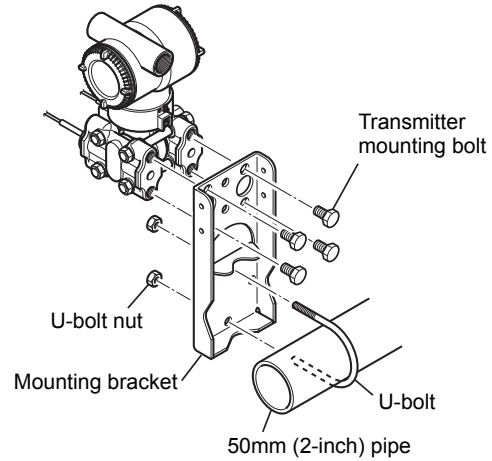

Vertical pipe mounting

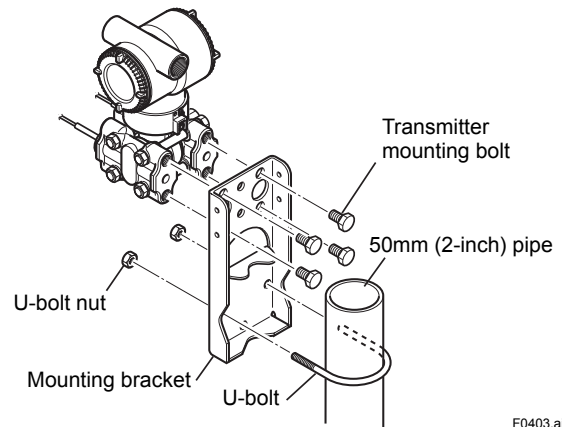

F0403.ai

Figure 4.3 Transmitter Mounting

IMPORTANT

Never loosen the four bolts securing the cover flange or the screws at the joints between the capillary tube and cover flanges (Refer to figure 3.2.) If the seal liquid leaks, the transmitter cannot be used.



IMPORTANT

The transmitter should be installed at least 600 mm below the high pressure (HP) process connection to ensure a positive head pressure of fill fluid. Pay special attention to vacuum applications. If it can not be installed at least 600 mm below the HP process connection, please use the equation below:

$$h = \frac{(P - P_0)}{ds} \times 0.102 \text{ [mm]}$$

- h: Vertical height between the HP process connection and the transmitter (mm)
- h ≤ 0: Install the transmitter at least h (mm) below the HP process connection
- h > 0: Install the transmitter at most h (mm) above the HP process connection

P: Pressure in the tank (Pa abs)

P0: Minimum working pressure limit of the transmitter (Pa abs). See below table.

[For fill fluid code A, B, C, D, E]


Wetted parts material code	Capillary length	Process connection size code		
		2, 8	3	4,W
SW	1 to 5 m	6790	3190	
	6 to 10 m	10030	3520	
SE	1 to 5 m		6790	3190
	6 to 10 m		10030	3520
SY	1 to 5 m			3190
	6 to 10 m			3520
HW	1 to 5 m	19150	6140	
	6 to 10 m		8290	
TW	1 to 5 m	9620	3620	
	6 to 10 m		4210	
UW	1 to 5 m	9540	4750	
	6 to 10 m		6050	

[For fill fluid code 1, 2, 4]

Wetted parts material code	Capillary length	Process connection size code		
		2, 8	3	4,W
SW	1 to 5 m	2570	320	
	6 to 10 m	4680	530	
SE	1 to 5 m		2570	320
	6 to 10 m		4680	530
SY	1 to 5 m			320
	6 to 10 m			530
HW	1 to 5 m	10220	2050	
	6 to 10 m		3450	
TW	1 to 5 m	4270	570	
	6 to 10 m		960	


ds: Specific gravity of fill fluid (at 25°C). See below table.

Fill fluid code	A, 1, 4	B	C, 2	D	E
ds: Specific gravity	1.07	0.94	1.09	1.90 to 1.92	1.09

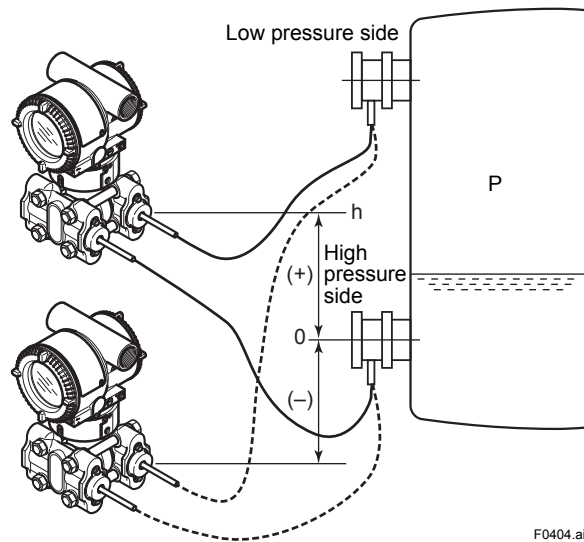

F0404.ai

Figure 4.4 Example of Installation to Tank for Differential Pressure Transmitter (Caution on Installation)

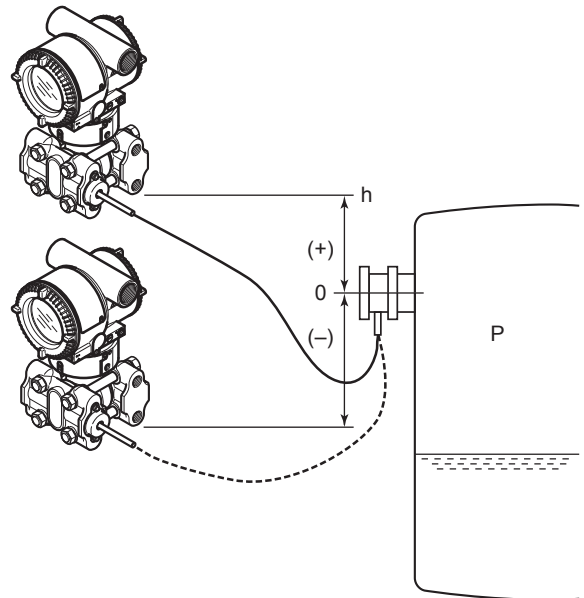

F0405.ai

Figure 4.5 Example of Installation to Tank for Gauge Pressure Transmitter (Caution on Installation)

4.4 Mounting the Flushing Connection Ring

4.4.1 Mounting to Pressure Detector Section

The flushing connection ring is mounted to the pressure detector section as shown in Figure 4.6. At the factory shipment, the flushing connection ring is already assembled and attached to process detector section.

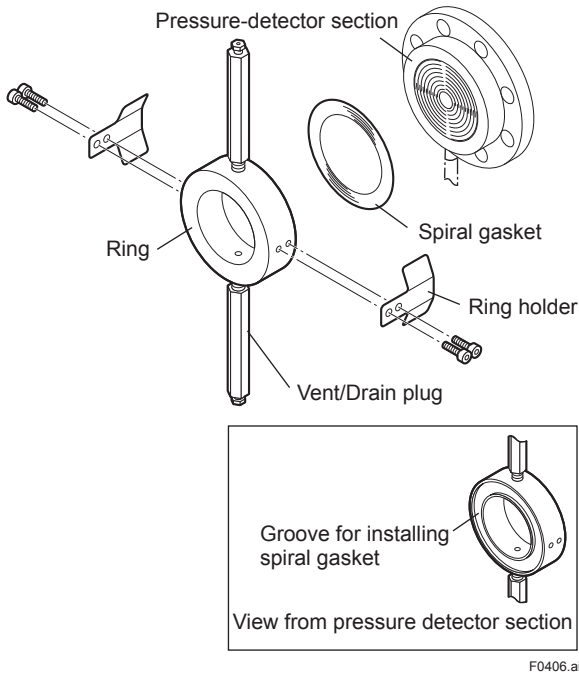


Figure 4.6 Mounting to Pressure Detector Section

- (1) Mount the ring holder on the ring and loosely tighten the mounting screws.
- (2) Place the spiral gasket in the ring groove. With the ring correctly aligned and flush with the face of the pressure detector, securely tighten each ring holder's mounting screws.
- (3) Position the ring so that the vent/drain plugs are aligned straight up and down.

4.4.2 Mounting to Process Flange

Tighten the bolts to completely close the gap between the ring and the pressure detector section. The mating flange, gasket, stud bolts and nuts are to be procured by the customer.

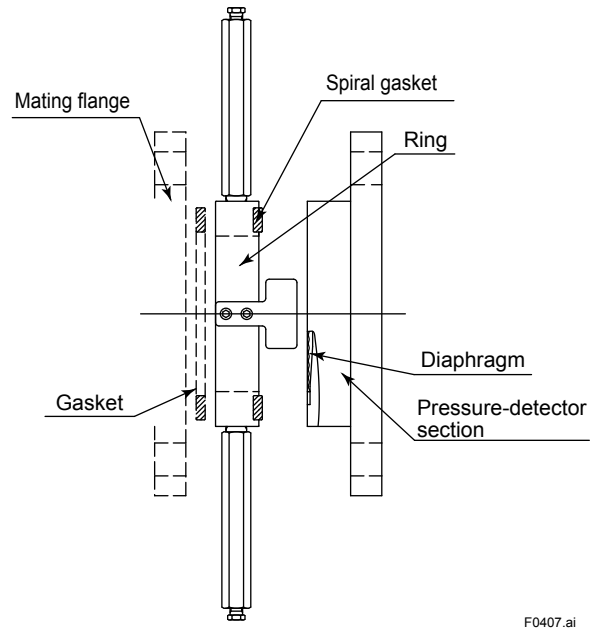


Figure 4.7 Mounting to Process Flange



IMPORTANT

- Confirm that there is no gap between the ring and the process-detector section after they are mounted on the process flange. A gap can lead to a sudden, explosive release of process fluids.
- When mounting or removing the ring, take care not to tilt the pressure detector downward as the ring can slip off and cause injury.
- When re-mounting the ring, use the new spiral gasket as shown in below table.

Table 4.1 Spiral Gasket for Pressure Detector Section Side*

Part number	Size	Description
F9350SV	ø100×ø120×t4.5	For 3-inch flange
F9970XF	ø100×ø120×t4.5	For 3-inch flange**
F9350ST	ø70×ø90×t4.5	For 2-inch flange
F9970XD	ø70×ø90×t4.5	For 2-inch flange**
F9346ZH	ø60×ø75×t4.5	For 1 1/2-inch flange
F9970XB	ø60×ø75×t4.5	For 1 1/2-inch flange**

*: Material; 316SST (Hoop), PTFE Teflon (Filler)

** : For oil-prohibited use (Option code: /K1, /K2, /K5, /K6)

4.5 Affixing the Teflon Film

The FEP Teflon option includes a teflon film and fluorinated oil.

Before mounting the diaphragm seal to the process flange, affix the teflon film as follows:



IMPORTANT

- 1) Position the diaphragm seal so that the diaphragm is in an upward position.
- 2) Pour the fluorinated oil on the diaphragm and gasket area covering it completely and evenly. Be careful not to scratch the diaphragm or change its shape.
- 3) Affix the teflon film over the diaphragm and gasket area.
- 4) Next, carefully inspect the cover and try to identify any entrapped air between the diaphragm and the teflon film. The air must be removed to ensure optimum performance. If air pockets are present, use your fingers to remove the air by starting at the center of the diaphragm and work your way out.
- 5) Position the gasket on the Teflon film.
- 6) Mount the transmitter onto the process flange.

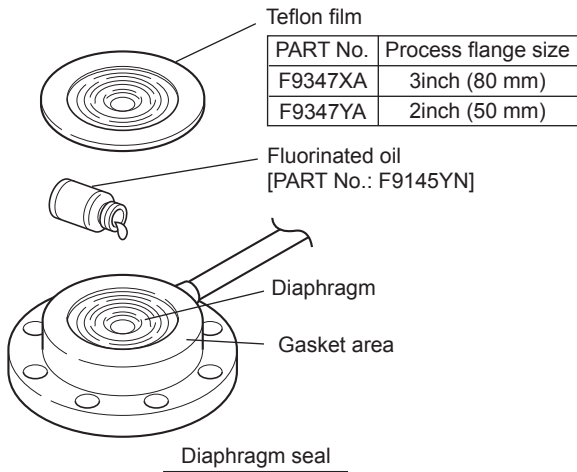


Figure 4.8 Affixing the Teflon Film

F0408.ai

4.6 Rotating Transmitter Section


The transmitter section can be rotated in either direction to any desired position. Note that there is a stopper which prevents the transmitter from being rotated more than 360°.

- (1) Using the Allen wrench, remove the two setscrews securing the transmitter section to the capsule assembly.
- (2) Rotate the transmitter section slowly to the desired position.
- (3) Tighten the two setscrews to a torque of 1.5 N·m {15 kgf·cm}.



IMPORTANT

Do not rotate the transmitter section more than the above limit.

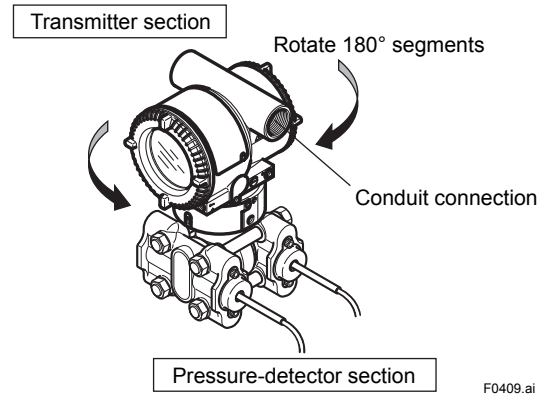

F0409.ai

Figure 4.9 Rotating Transmitter Section


4.7 Changing Integral Indicator Direction



IMPORTANT

- Always turn OFF power and shut off and release pressures before disassembly.
- For changing the integral indicator direction, the transmitter must be removed to a non-hazardous area.

An integral indicator can be installed in the following three directions, Refer to subsection 7.4 for attaching and removing the integral indicator.

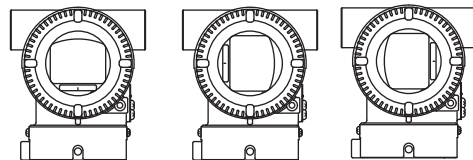

F0410.ai

Figure 4.10 Integral Indicator Direction

5. Wiring

5.1 Wiring Precautions



IMPORTANT


- Lay wiring as far as possible from electrical noise sources such as large capacity transformers, motors, and power supplies.
- Remove the electrical connection dust cap before wiring.
- All threaded parts must be treated with waterproofing sealant. (A non-hardening silicone group sealant is recommended.)
- To prevent noise pickup, do not pass signal and power cables through the same ducts.
- Explosion-protected instruments must be wired in accordance with specific requirements (and, in certain countries, legal regulations) in order to preserve the effectiveness of their explosion-protected features.
- The terminal box cover is locked by an Allen head bolt (a shrouding bolt) on ATEX flameproof type transmitters. When the shrouding bolt is driven clockwise using an Allen wrench, it goes in. The cover lock can then be released and the cover can be opened by hand. See subsection 7.4 “Disassembly and Reassembly” for details.
- Plug and seal an unused conduit connection.

5.2 Selecting the Wiring Materials

- Use stranded leadwires or cables which are the same as or better than 600 V grade PVC insulated wire (JIS C3307) or its equivalent.
- Use shielded wires in areas that are susceptible to electrical noise.
- In areas with higher or lower ambient temperatures, use appropriate wires or cables.
- In environment where oils, solvents, corrosive gases or liquids may be present, use wires or cables that are resistant to such substances.
- It is recommended that crimp-on solderless terminal lugs (for 4 mm screws) with insulating sleeves be used for leadwire ends.

5.3 Connections of External Wiring to Terminal Box

• Terminal Configuration

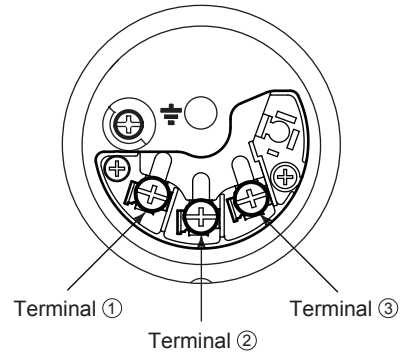

F0513.ai

• Terminal Wiring for 4 to 20 mA output, FOUNDATION Fieldbus type, and PROFIBUS PA type.

SUPPLY	+	①] Power supply and output terminals
	-	②	
CHECK	+	③] External indicator (ammeter) terminals ^{*1,2}
or	-	②	
ALARM	+	③] Status contact output terminals ²
	-	②	
			⏏ Ground terminal

*1: When using an external indicator or check meter, the internal resistance must be 10 Ω or less. A check meter or indicator cannot be connected when /AL option is specified.

*2: Not available for FOUNDATION Fieldbus and PROFIBUS PA communication types.

• Terminal Wiring for 1 to 5 V output

SUPPLY	+	①] Power supply terminals
	-	②	
VOUT	+	③] 1 to 5 V DC with HART communication terminals
	-	②	
			⏏ Ground terminal

F0514.ai

Figure 6.1 Terminal

5.3.1 Power Supply Wiring Connection



IMPORTANT

Connecting with the commercial AC power supply will damage the device. Be sure to use the DC power supply in the predetermined range.

Connect the power supply wiring to the SUPPLY + and – terminals. When /AL is specified, also refer to subsection 5.3.5.

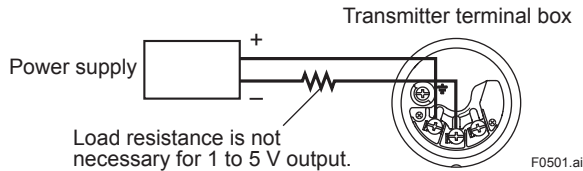


Figure 5.2 Power Supply Wiring Connection

5.3.2 External Indicator Connection

Available only for 4 to 20mA output type and when /AL is not specified.

Connect wiring for external indicators to the CHECK (+) and SUPPLY – terminals.

(Note) Use an external indicator whose internal resistance is 10 Ω or less.

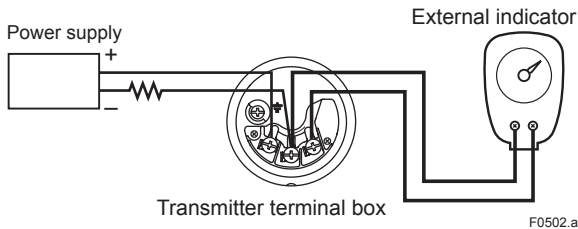


Figure 5.3 External Indicator Connection

5.3.3 Communicator Connection

- 4 to 20 mA output, BRAIN / HART



IMPORTANT

Analog output may change temporarily in connecting with BRAIN terminal due to an initial current flowed to it. To prevent communication signal affecting the upper system, it is recommended to install a low-pass filter (approximately 0.1s)

Connect the BT200 or HART Communicator to the SUPPLY + and – terminals. (Use hooks.)

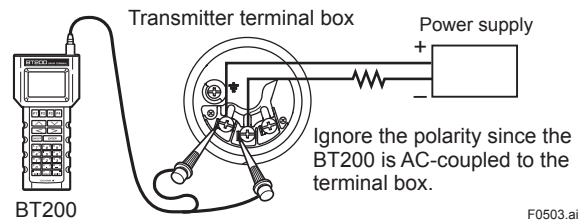


Figure 5.4 BT200 Connection

- 1 to 5 V output, HART
Connect the HART communicator or configuration tool to the SUPPLY - and VOUT (+) terminals. (Use hooks.)

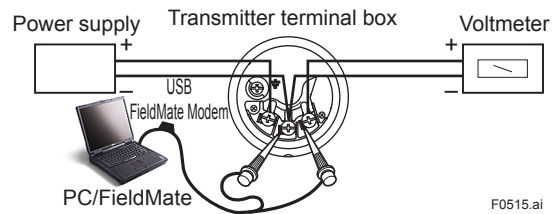


Figure 5.5 Four wire connection

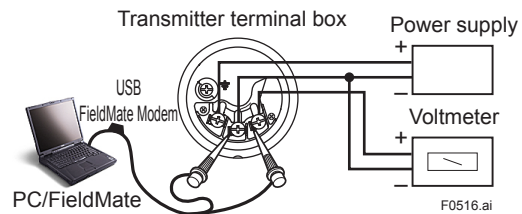


Figure 5.6 Three wire connection

5.3.4 Check Meter Connection

Available only for 4 to 20mA output type and when /AL is not specified.

Connect the check meter to the CHECK (+) and SUPPLY – terminals. (Use hooks.)

- A 4 to 20 mA DC output signal from the CHECK (+) and SUPPLY – terminals.

(Note) Use a check meter whose internal resistance is 10 Ω or less.

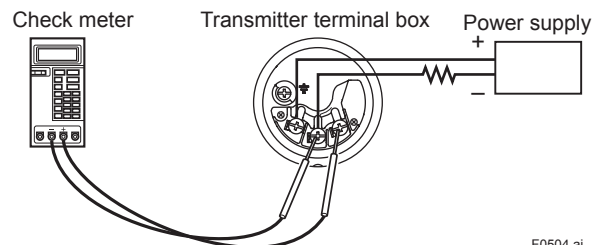


Figure 5.7 Check Meter Connection

5.3.5 Status Output Connection

When option code /AL is specified, connect the external wiring as shown in Figure 5.5.

To configure and activate the process alarm function and status output, it is necessary to set some parameters. Refer to each communication manual for procedures.

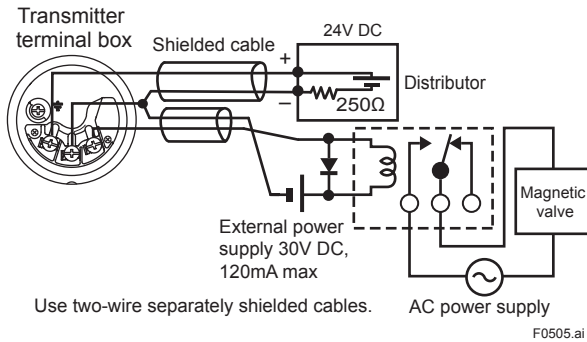


Figure 5.8 Status Output Connection

5.4 Wiring

5.4.1 Loop Configuration

Since the DPharp uses a two-wire transmission system for 4 to 20 mA output, signal wiring is also used as power wiring.

DC power is required for the transmitter loop. The transmitter and distributor are connected as shown below.

For details of the power supply voltage and load resistance, see section 5.6; for communications line requirements, see section 8.1.

For 1 to 5 V output, three or four wire system is used. See (3).

(1) 4 to 20 mA output, General-use Type and Flameproof Type

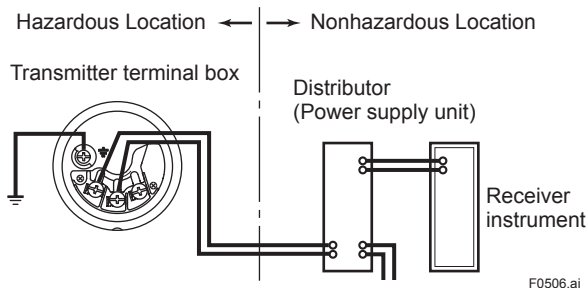


Figure 5.9 Connection between Transmitter and Distributor

(2) 4 to 20 mA output, Intrinsically Safe Type

With the intrinsically safe type, a safety barrier must be included in the loop.

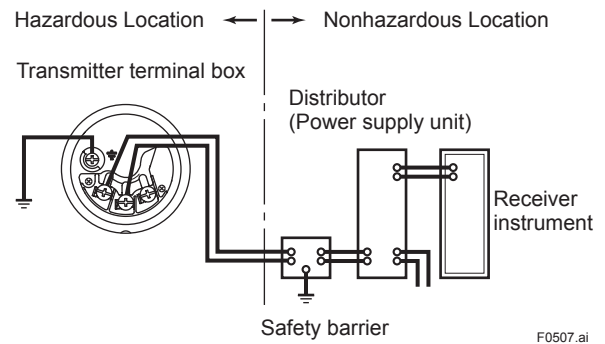


Figure 5.10 Connection between Transmitter and Distributor

(3) 1 to 5 V output

Either three or four wire system is used.

Power supply line and 1 to 5 V signal line commonly use the SUPPLY - terminal.



NOTE

With three wire connection, the cable length may affect the measurement accuracy of the output signal.

In either three-wire or four-wire connection, recommended wiring distance is 200 m or less, and the use of shielded cable is recommended.

- Three wire connection
For three wire system, a negative wiring shall be commonly used for power supply and signal line.

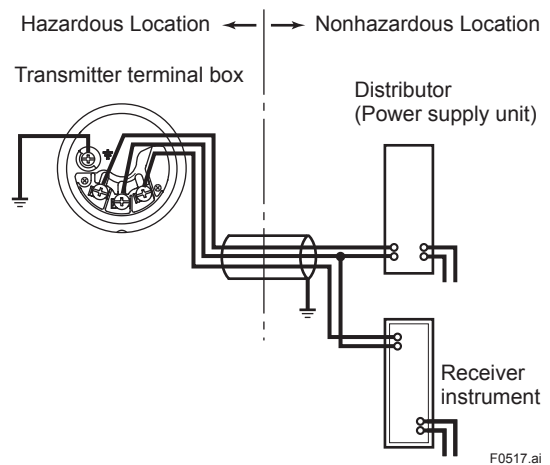


Figure 5.11 Connection between Transmitter, Distributor and Receiver

- Four wire connection
Fasten the negative side wiring of both power supply and signal line to the SUPPLY - terminal.

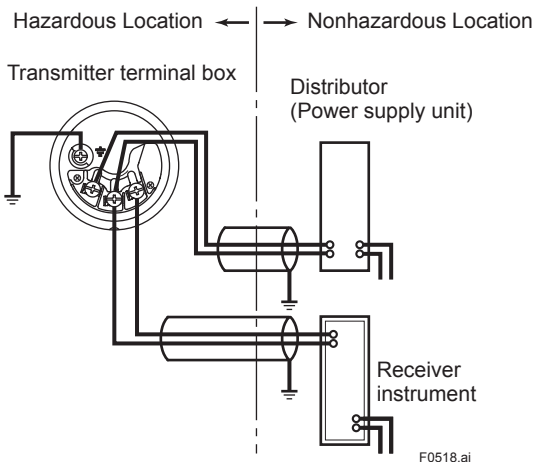


Figure 5.12 Connection between Transmitter, Distributer and Receiver

5.4.2 Wiring Installation

(1) General-use Type and Intrinsically Safe Type

With the cable wiring, use a metallic conduit or waterproof glands.

- Apply a non-hardening sealant to the terminal box connection port and to the threads on the flexible metal conduit for waterproofing.

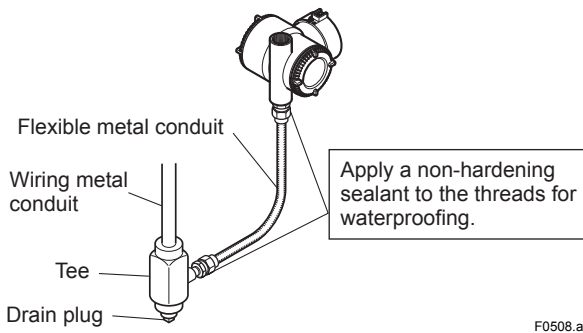


Figure 5.13 Typical Wiring Using Flexible Metal Conduit

(2) Flameproof Type

Wire cables through a flameproof packing adapter, or use a flameproof metal conduit.

- Wiring cable through flameproof packing adapter.
 - Apply a non-hardening sealant to the terminal box connection port and to the threads on the flameproof packing adapter for waterproofing.

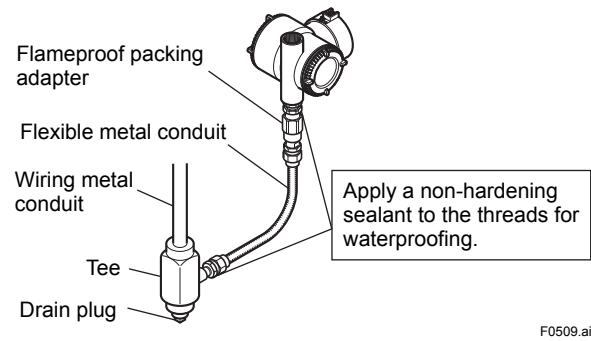


Figure 5.14 Typical Cable Wiring Using Flameproof Packing Adapter

- Flameproof metal conduit wiring
 - A seal fitting must be installed near the terminal box connection port for a sealed construction.
 - Apply a non-hardening sealant to the threads of the terminal box connection port, flexible metal conduit and seal fitting for waterproofing.

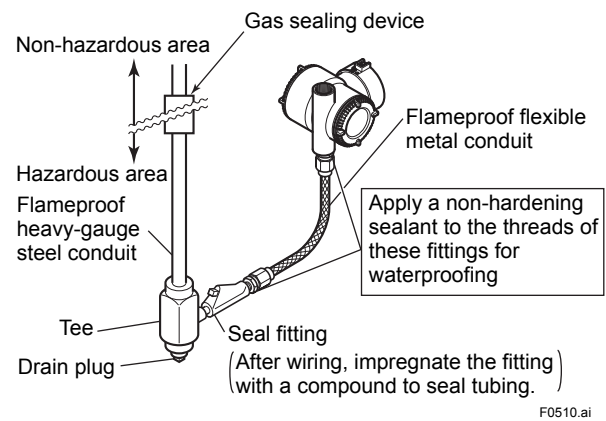


Figure 5.15 Typical Wiring Using Flameproof Metal Conduit

5.5 Grounding

Grounding is always required for the proper operation of transmitters. Follow the domestic electrical requirements as regulated in each country. For a transmitter with a built-in lightning protector, grounding should satisfy ground resistance of 10Ω or less.

Ground terminals are located on the inside and outside of the terminal box. Either of these terminals may be used.

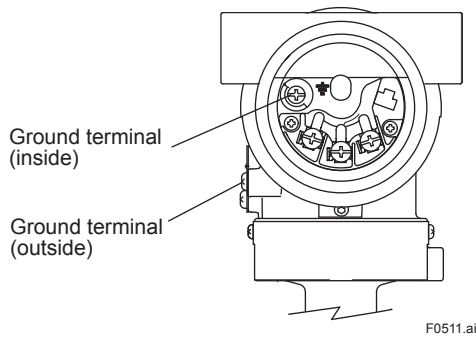


Figure 5.16 Ground Terminals

5.6 Power Supply Voltage and Load Resistance

For 4 to 20 mA output only.

When configuring the loop, make sure that the external load resistance is within the range in the figure below.

(Note) In case of an intrinsically safe transmitter, external load resistance includes safety barrier resistance.

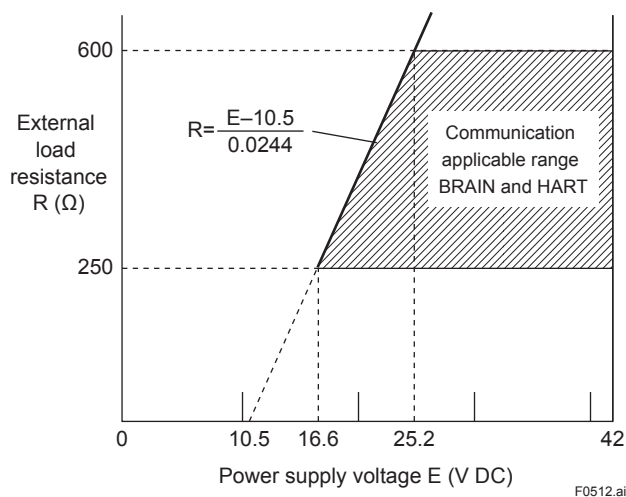


Figure 5.17 Relationship between Power Supply Voltage and External Load Resistance

6. Operation

6.1 Preparation for Starting Operation

This section describes the operation procedure for the EJ□118□ as shown in Figure 6.1 when measuring liquid level in a closed tank, and EJ□438□ as shown in Figure 6.2 when measuring pressure in a tank.

- (a) Confirm that there is no leak in the connecting part of each diaphragm seal mounting flange.
- (b) Turn ON power and connect the communicator. Open the terminal box cover and connect the communicator to the SUPPLY + and – terminals.
- (c) Using the communicator, confirm that the transmitter is operating properly. Check parameter values or change the setpoints as necessary.

See IM 01C25T03-01E (BRAIN communication) or IM 01C25T01-06EN (HART communication) for communicator operation. If the transmitter is equipped with an integral indicator, its indication can be used to confirm that the transmitter is operating properly.


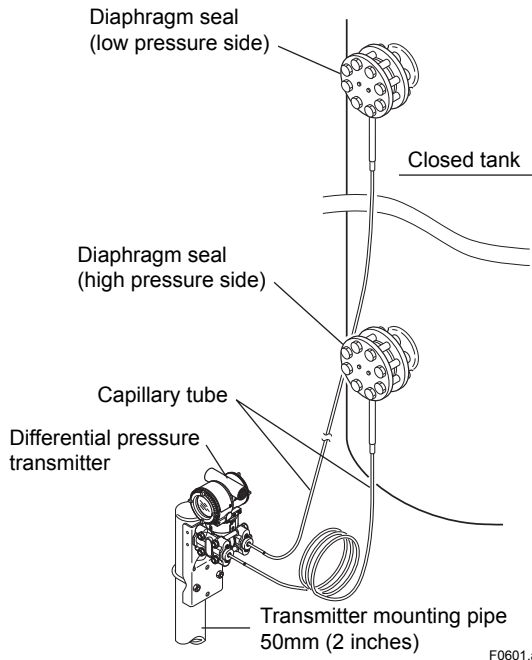


Figure 6.1 Liquid Level Measurement in a Closed Tank

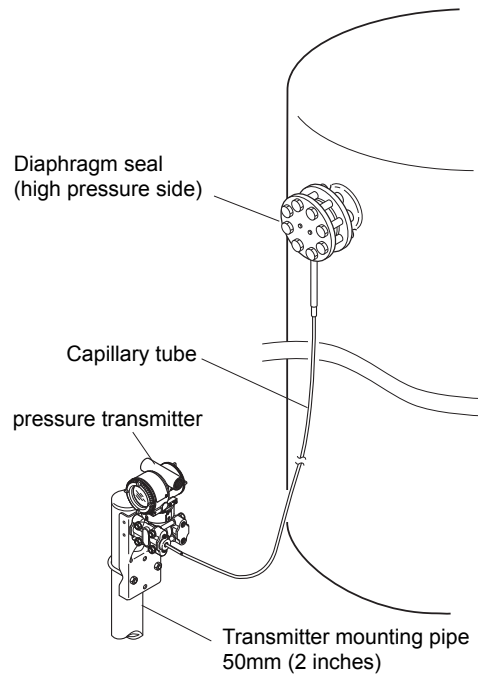

F0602.ai

Figure 6.2 Pressure Measurement

■ Confirming that Transmitter is Operating Properly


Using the BT200



IMPORTANT

- Analog output may change temporally in connecting with BRAIN terminal due to an initial current flowed to it. To prevent communication signal affecting the upper system, it is recommended to install a low-pass filter (approximately 0.1s).
- Communication signal is superimposed on analog output signal. It is recommended to set a low-pass filter (approximately 0.1s) to the receiver in order to reduce the output effect from communication signal. Before online-communication, confirm that communication signal does not give effect on the upper system.

- If the wiring system is faulty, 'communication error' appears on the display.
- If the transmitter is faulty, 'SELF CHECK ERROR' appears on the display.

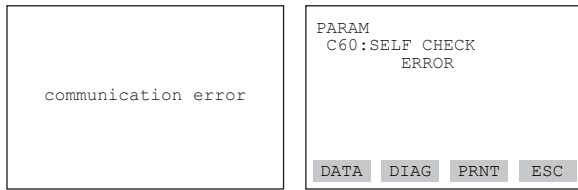

Communication error
(Faulty wiring)

Self-diagnostic error
(Faulty transmitter)

F0603.ai

Using the integral indicator

- If the wiring system is faulty, the display stays blank.
- If the transmitter is faulty, an error code is displayed.



Self-diagnostic error on the integral indicator
(Faulty transmitter)

F0604.ai

NOTE

If any of the above errors are indicated on the display of the integral indicator or the communicator, refer to subsection 7.5.3 for corrective action.

■ Verify and Change Transmitter Parameter Setting and Values

The parameters related to the following items are set at factory as specified by the customer.

- Calibration range
- Integral indicator display
- Output mode
- Software damping (optional)

Other parameters like following are shipped with the default setting.

- Low-cut
- Process alarm setting
- Static pressure range
- Signal characterizer
- Write protection

To confirm or change the values, see IM 01C25T01-06EN or 01C25T03-01E.

6.2 Zero Point Adjustment

After completing preparations for operating the transmitter, adjust the zero point.

Zero point adjustment can be done by turning the transmitter's zero-adjustment screw or by using the communicator. This section describes the procedure for the zero-adjustment screw. For the communicator procedure, see the communication manual.

IMPORTANT


Do not turn off the power to the transmitter immediately after performing a zero point adjustment. Powering off within 30 seconds of performing this procedure will return the zero point to its previous setting.

NOTE

Before performing this adjustment, make sure that the external zero adjustment function has NOT been disabled by a parameter setting.

To check the output signal, use a digital multimeter, calibrator, or communicator.

- (1) **When you can obtain the Low Range Value from the actual measured value of 0% (0 kPa, atmospheric pressure);**

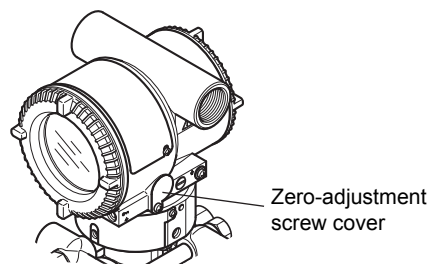

F0605.ai

The zero-adjustment screw is located inside the cover.

Use a slotted screwdriver to turn the zero-adjustment screw. Turn the screw clockwise to increase the output or counterclockwise to decrease the output. The zero point adjustment can be made with a resolution of 0.01% of the setting range. The degree of zero adjustments varies with the screw turning speed; turn the screw slowly to make a fine adjustment, quickly to make a rough adjustment.

When adjusting the transmitter zero point, the liquid level in a tank does not have to be set to the low limit (0%) of the measuring range; use a digital manometer or a glass gauge to match the transmitter output signal with the actual measured value.

(2) When you cannot obtain the Low Range Value from the actual measured value of 0%;

Adjust the transmitter output to the actual measured value obtained by a digital manometer or a glass gauge.

[Example]

The measuring range of 50 to 250 kPa; the actual measured value of 130 kPa.

$$\text{Actual measured value} = \frac{130-50}{250-50} \times 100 = 40.0\% \\ (=10.4\text{mA})$$

Turn the screw to match the output signal to the actual measured value.

6.3 Starting Operation

After completing the zero point adjustment, follow the procedure below to start operation.

- 1) Confirm the operating status. If the output signal exhibits wide fluctuations (hunting) due to periodic variation in the process pressure, use the communicator to dampen the transmitter output signal. Confirm the hunting using a receiving instrument or the integral indicator, and set the optimum damping time constant.
- 2) After confirming the operating status, perform the following:



IMPORTANT

- Remove the communicator from the terminal box, and confirm that none of the terminal screws are loose.
- Close the terminal box cover and the amplifier cover. Screw each cover in tightly until it will not turn further.
- There are two covers that must be locked on the ATEX Flameproof type transmitters. An Allen head bolt (shrouding bolt) under the edge of each cover is used to lock the cover. When the shrouding bolt is driven counterclockwise with an Allen wrench, the bolt rotates upward and locks the cover. (See page 7-3.) After locking the covers, confirm that they are secure and cannot be opened by hand.
- Tighten the zero-adjustment cover mounting screw to secure the cover.

6.4 Shutting Down Operation

Turn off the power.



NOTE

Whenever shutting down the transmitter for a long period, detach the transmitter (diaphragm seals) from the tank.

6.5 Venting or Draining Transmitter Process-Detector Section

If condensate (or gas) collects in the transmitter process-detector section, the measured pressure may be in error. If it is not possible to configure the piping for self draining (or self-venting) operation, you will need to loosen the drain (vent) screw on the flushing connection ring to completely drain (vent) any stagnated liquid (gas). However, since draining condensate or bleeding off gas gives the pressure measurement disturbance, this should not be done when the loop is in operation.



WARNING

Since the accumulated liquid (or gas) may be toxic or otherwise harmful, take appropriate care to avoid contact with the body, or inhalation of vapors.

6.5.1 Draining Condensate for Flushing Connection Ring

- 1) Gradually open the drain screw to drain from the flushing connection ring.
- 2) When the flushing connection ring is completely drained, close the drain screw.
- 3) Tighten the drain screw to a torque of 10 N·m {1 kgf·m}.

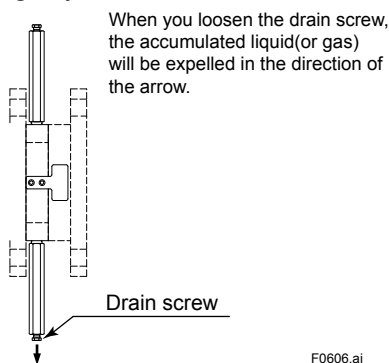


Figure 6.3 Draining for Flushing Connection Ring

6.5.2 Venting Gas for Flushing Connection Ring

- 1) Gradually open the vent screw to vent gas from the flushing connection ring.
- 2) When the flushing connection ring is completely vented, close the vent screw.
- 3) Tighten the vent screw to a torque of 10 N·m {1 kgf·m}.

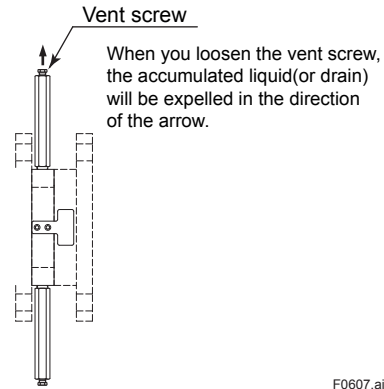


Figure 6.4 Venting for Flushing Connection Ring

6.6 Local Parameter Setting



WARNING

The local push button on the integral indicator must not be used in a hazardous area. When it is necessary to use the push button, operate it in a non- hazardous location.



IMPORTANT

- Do not turn off the power to the transmitter immediately after performing parameter setting. Powering off within 30 seconds of performing this procedure will return the parameter to its previous setting.
- The parameter of Ext SW must be "Enabled" to perform this configuration. See the user's manual IM 01C25T (HART/BRAIN) for the setting procedure.
- The Local Parameter Setting function is available with HART or BRAIN communication type.
LCD update will be slower at low ambient temperature, and it is recommended to use LPS function at temperatures above -10 degrees C.

6.6.1 Local Parameter Setting (LPS) Overview

Parameter configuration by the external adjustment screw and push button (integral indicator code E) offers easy and quick setup for parameters of Tag number, Unit, LRV, URV, Damping, Output mode (linear/square root), Display out 1, and Re-range by applying actual pressure (LRV/URV). There is no effect on measurement signal (analog output or communication signal) when Local Parameter Setting is carried out.

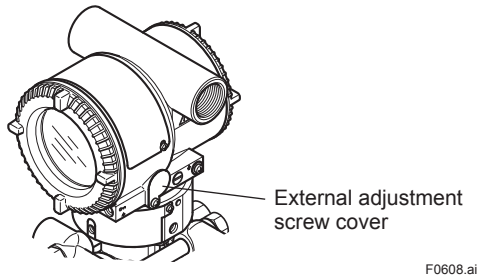


Figure 6.5 External Adjustment Screw

F0608.ai


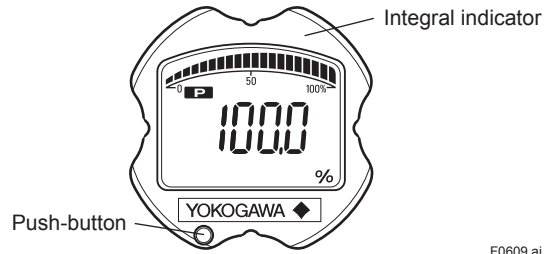


Figure 6.6 Range-Setting Switch (push button)

F0609.ai

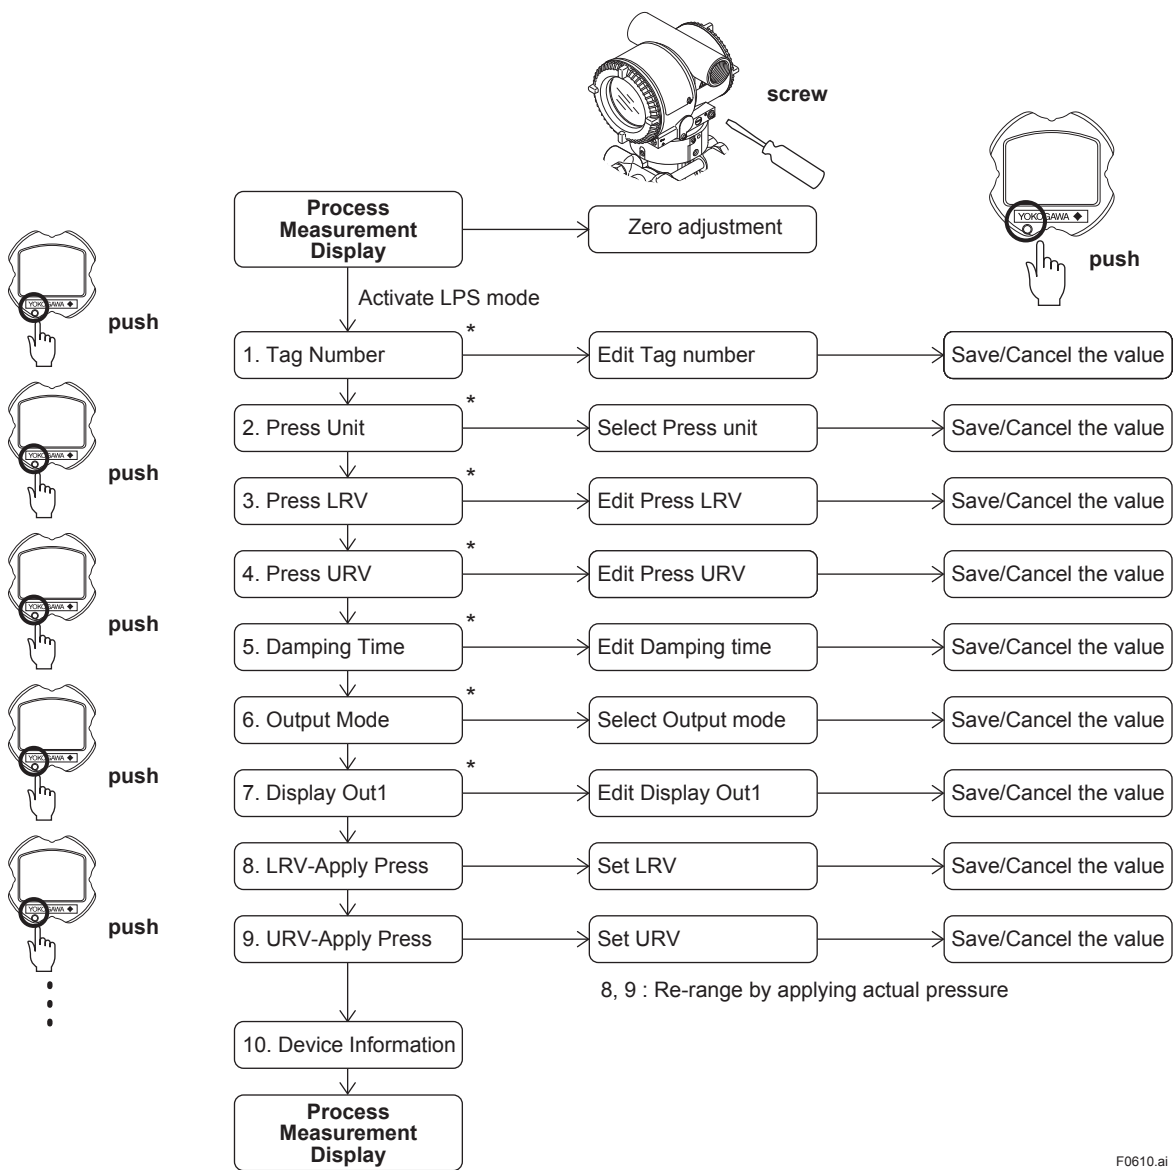

F0610.ai

*: Note that the above 1 to 7 parameter configurations are available with the software revision (SOFT REV)2.03 or later. Software revision can be checked via a field communicator (HART/BRAIN) or DTM. Please refer to IM 01C25T01 for HART parameter "Software rev" and IM 01C25T03 for BRAIN "SOFT REV".


Figure 6.7

6.6.2 Activating Local Parameter Setting

Press the push button on the integral indicator to activate the Local Parameter Setting mode. The transmitter will exit automatically from the Local Parameter Setting mode if no operation is carried out for 10 minutes.

6.6.3 Parameter Setting Review

Current setting value for the below parameters are shown sequentially by each press of the push button. Tag number, Unit, LRV, URV, Damping, Output mode (linear/square root), Display out 1.

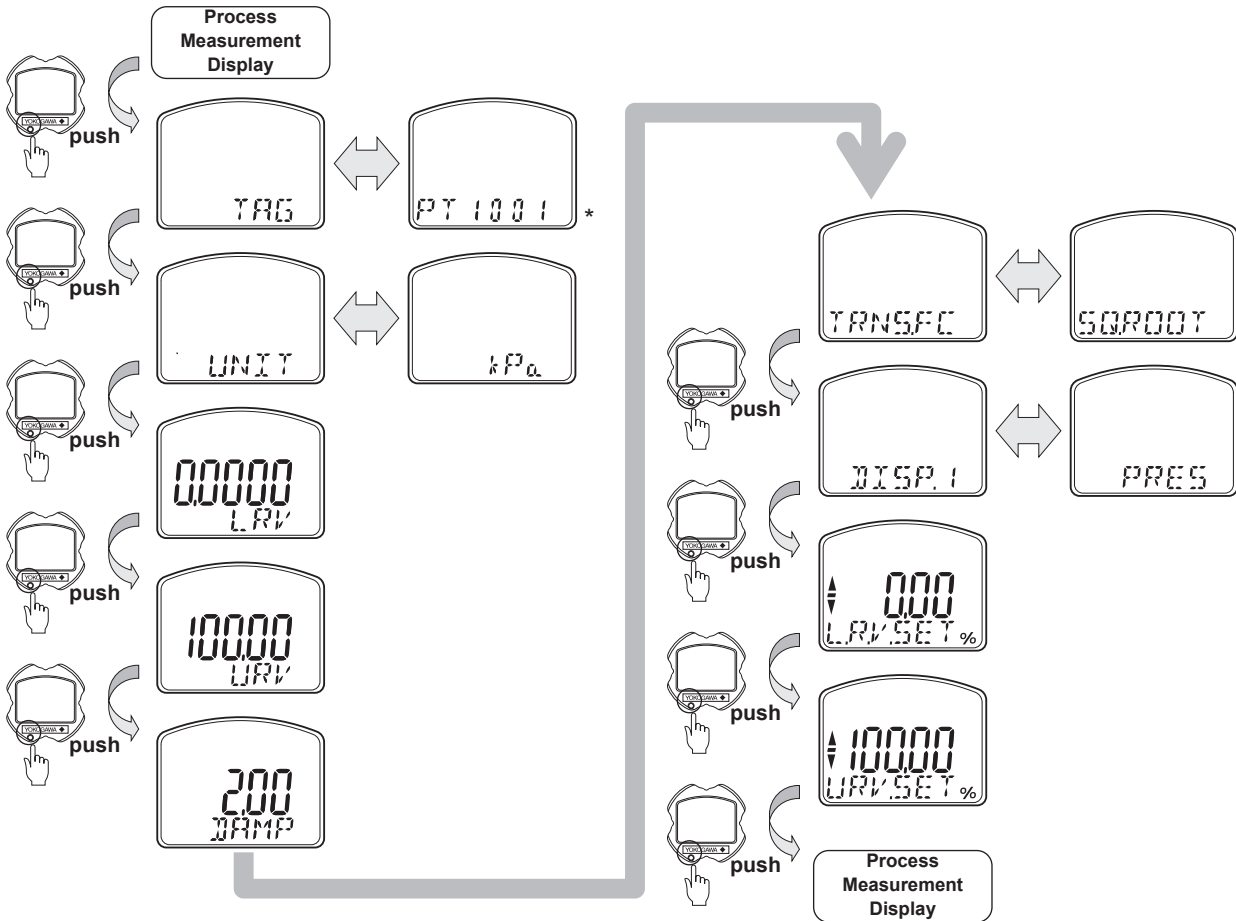

F0611.ai


*: [Software revision: 2.03] Up to 6 characters are shown in the bottom line. To review after the 7th character, turn the external adjustment screw and press the push button six times or more.
[Software revision: 3.01 or later] The display automatically scrolls to show all the characters.

To configure each parameter value, turn the external adjustment screw on each parameter screen after activating the Local Parameter Setting mode.

To cancel the Local Parameter Setting configuration, please refer to 6.6.11 Save or Cancel and 6.6.12 Abort Configuration.

6.6.4 Tag Number Configuration


Tag Number is edited by turning the external adjustment screw. Up to 8 alphanumeric characters for HART or 16 alphanumeric characters for BRAIN can be set.

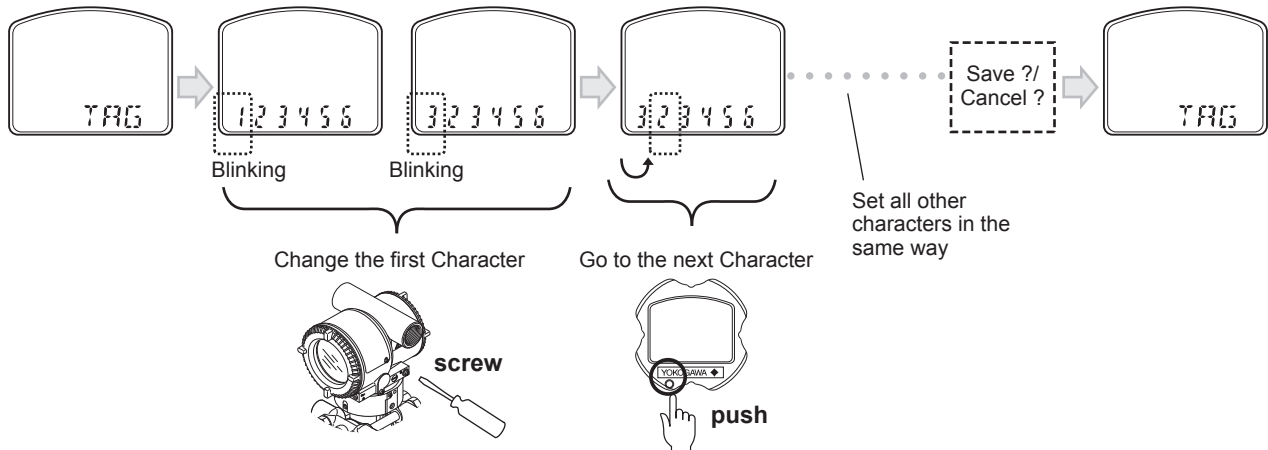

F0612.ai

6.6.5 Pressure Unit Configuration

Pressure unit for the below table can be changed as below. By turning the external adjustment screw, user can scroll between the various available pressure units.

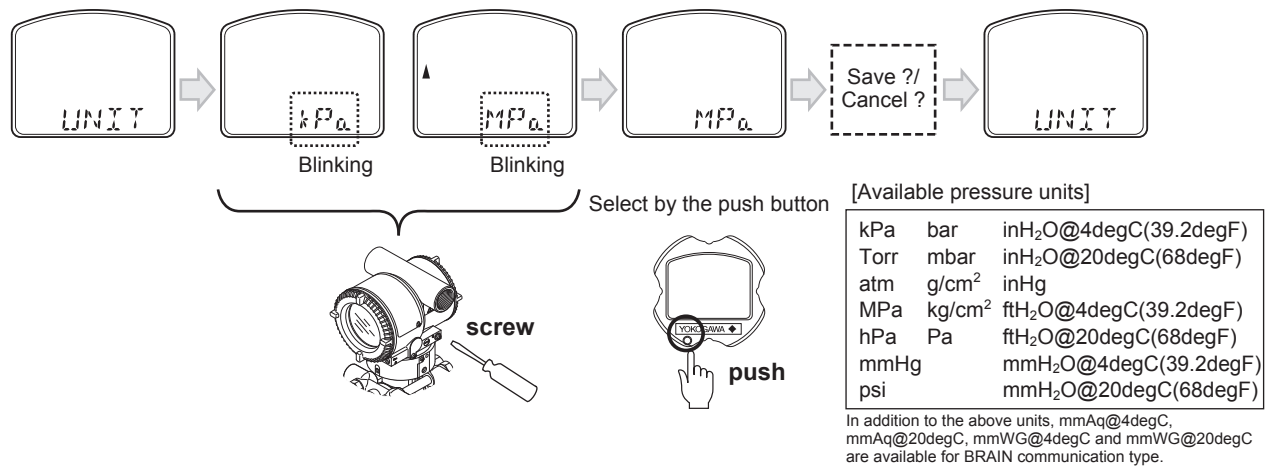

F0613.ai


6.6.6 Pressure LRV/URV Configuration

Pressure LRV and URV can be set. The number for each digit is changed by turning the external adjustment screw and set by pressing the push button. Please refer to 6.6.7 Damping Time Constant Configuration for how to change the numerical value.

When the setting is out of the limit, an alarm will be generated.

6.6.7 Damping Time Constant Configuration

The damping time constant for the amplifier assembly can be set. Quick Response Parameter is automatically set to ON when the damping time constant is set to less than 0.5 seconds. Damping time constant is rounded off to two decimal places.

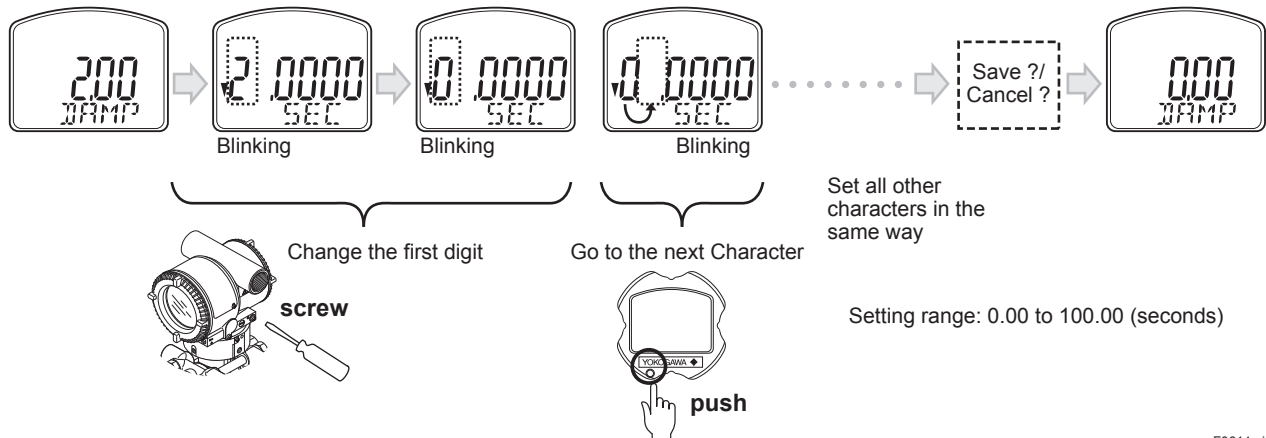

6.6.8 Output Mode Configuration


Pressure Output Mode (Linear or Sq root) can be selected by turning the external adjustment screw. Please refer to 6.6.5 Pressure Unit Configuration for how to select and set the enumerated value.

6.6.9 Display Out 1 Configuration

Display Out1 can be selected by turning the external adjustment screw. Please refer to 6.6.5 Pressure Unit Configuration for how to select and set the enumerated value.

6.6.10 Re-range by applying actual pressure (LRV/URV).

This feature allows the lower and upper range values to be setup with the actual input applied.

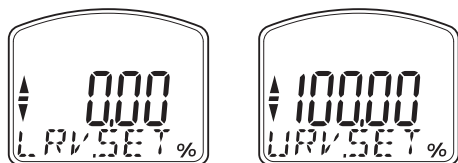

Follow the procedure below to change the LRV and URV settings.

[Example]

Rerange LRV to 0 and URV to 3 MPa.

- 1) Connect the transmitter and apparatus as shown in Figure 7.1 and warm it up for at least five minutes.
- 2) Press the push-button. The integral indicator then displays “LRV.SET.”

- 3) Apply a pressure of 0 kPa (atmospheric pressure) to the transmitter. (Note 1)
- 4) Turn the external adjustment screw in the desired direction. The integral indicator displays the output signal in %. (Note 2)
- 5) Adjust the output signal to 0% (1 V DC) by rotating the external adjustment screw. Press the push button to save the value. Doing so completes the LRV setting. (Note 3)
- 6) Press the push-button. The integral indicator then displays “URV.SET.”
- 7) Apply a pressure of 3 MPa to the transmitter. (Note 1)
- 8) Turn the external adjustment screw in the desired direction. The integral indicator displays the output signal in %. (Note 2)
- 9) Adjust the output signal to 100% (5 V DC) by rotating the external adjustment screw. Press the button to save the value. Doing so completes the URV setting.
- 10) Press the push-button. The transmitter then switches back to the normal operation mode with the measurement range of 0 to 3 MPa.

Note 1: Wait until the pressure inside the pressure-detector section has stabilized before proceeding to the next step.


Note 2: If the pressure applied to the transmitter exceeds the previous LRV (or URV), the integral indicator may display error number “AL.30” (In this case, the output signal percent and “AL.30” are displayed alternately every two seconds). Although “AL.30” is displayed, you may proceed to the next step. However, should any other error number be displayed, take the appropriate measure in reference to, “Errors and Countermeasures” in each communication manual.

Note 3: Changing the lower range value (LRV) also automatically changes the upper range value (URV), keeping the span constant. New URV=previous URV+(new LRV–previous LRV)

F0614.ai

6.6.11 Save or Cancel

At the end of each parameter setting, select “Save” or “Cancel” by the external adjustment screw and press the push button to save or cancel the configuration.

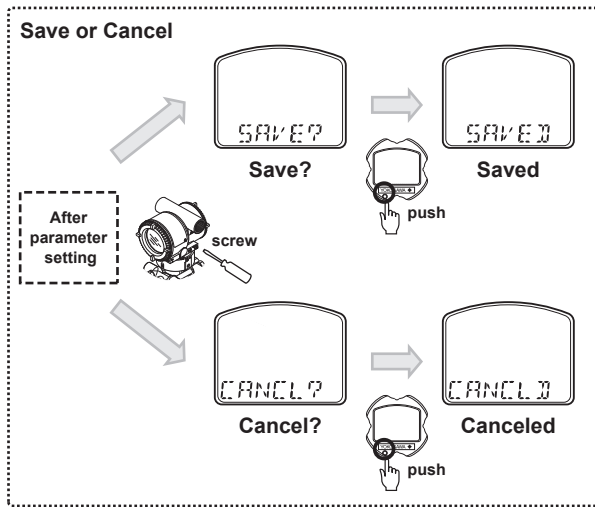


F0616.ai

6.6.12 Abort Configuration

6.6.12.1 Abort Configuration (Menu)


Hold down the push button for over 2 seconds to exit the Local Parameter Setting mode.

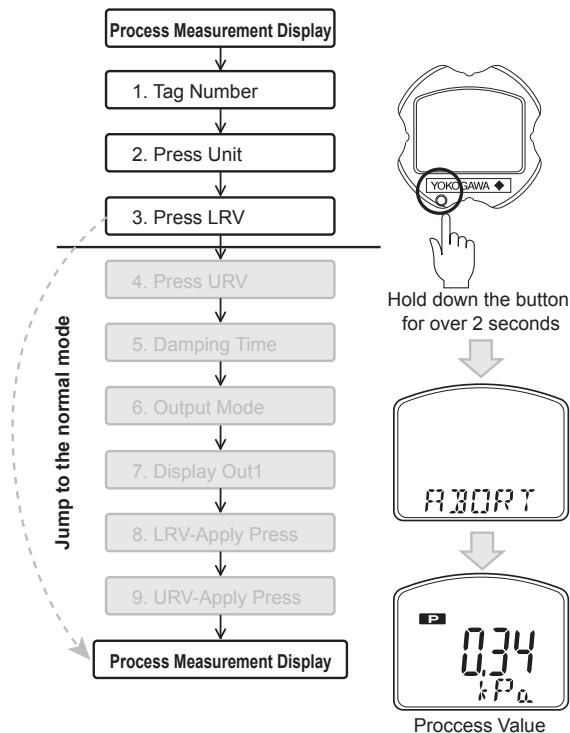

F0617.ai

6.6.12.2 Abort Configuration (Parameter)

To exit the configuration while editing the value, hold down the button for over 2 seconds and select “Save” or “Cancel”.

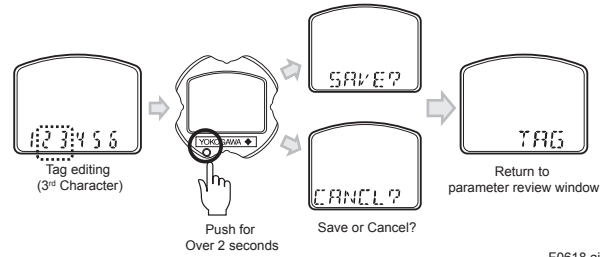

F0618.ai

6.6.13 Local Parameter Setting Lock

To disable parameter changes by the Local Parameter Setting there are three different ways.

	Locked features
Communication Parameter Ext SW =disable (EXT ZERO ADJ = disable)	<ul style="list-style-type: none"> External Zero Adjustment Local Parameter Setting
Communication Parameter Write Protect = On (WRT PROTECT = Yes)	<ul style="list-style-type: none"> Local Parameter Setting All Communication Parameters *
Hardware write protection switch on CPU assembly = D (Disable)	<ul style="list-style-type: none"> Local Parameter Setting All Communication Parameters *

*External Zero Adjustment is unlocked.

The above parameter setting is carried out by using field communicator or DTM. See the user’s manual IM 01C25T (HART/BRAIN) for the setting procedure.

Reviewing local parameter setting by push button on the integral indicator is available at any time even when the Local Parameter Setting is locked.

6.6.14 Others

- Difference between BRAIN and HART

	HART	BRAIN
Tag Number	Up to 8 characters can be set	Up to 16 characters can be set
Output Mode (Linear/Sq root)	“TRNS.FC” shown on the integral indicator	“OUT.MOD” shown on the integral indicator

- The degree of adjustment depends on the speed of turning the adjustment screw. Turn the screw slowly for fine tuning and turn the screw fast for quick tuning.

7. Maintenance

7.1 Overview



WARNING

Since the accumulated process fluid may be toxic or otherwise harmful, take appropriate care to avoid contact with the body or inhalation of vapors when draining condensate or venting gas from the transmitter pressure-detector section and even after dismounting the instrument from the process line for maintenance.

Maintenance of the transmitter is easy due to its modular construction. This chapter describes the procedures for calibration, adjustment, and the disassembly and reassembly procedures required for component replacement.

Transmitters are precision instruments. Please carefully and thoroughly read the following sections for information on how to properly handle them while performing maintenance.



IMPORTANT

- As a rule, maintenance of this transmitter should be done in a shop that has all the necessary tools.
- The CPU assembly contains sensitive parts that can be damaged by static electricity. Take precautions such as using a grounded wrist strap when handling electronic parts or touching the board circuit patterns. Also be sure to place the removed CPU assembly into a bag with an antistatic coating.

7.2 Calibration Instruments Selection

Table 7.1 lists the instruments that can be used to calibrate a transmitter. When selecting an instrument, consider the required accuracy level. Exercise care when handling these instruments to ensure they maintain the specified accuracy.

7.3 Calibration

Use the procedure below to check instrument operation and accuracy during periodic maintenance or troubleshooting.

- 1) Connect the instruments as shown in figure 7.1 and warm up the instruments for at least five minutes.



IMPORTANT

- To adjust the transmitter for highest accuracy, make adjustments with the power supply voltage and load resistance including leadwire resistances set close to the conditions under which the transmitter is installed. In addition, place the process connections of both high and low pressure side on the same level.
 - If the measurement range 0% point is 0 kPa or shifted in the positive direction (suppressed zero), the reference pressure should be applied as shown in the figure. If the measurement range 0% point is shifted in the negative direction (elevated zero), the reference pressure should be applied using a vacuum pump.
- 2) Apply reference pressures of 0%, 50%, and 100% of the measurement range to the transmitter. Calculate the errors (differences between digital voltmeter readings and reference pressures) as the pressure is increased from 0% to 100% and is decreased from 100% to 0%, and confirm that the errors are within the required accuracy.

Table 7.1 Instruments Required for Calibration

Name	Yokogawa-recommended Instrument	Remarks
Power supply	Model SDBT or SDBS distributor	4 to 20 mA DC signal
Load resistor	Model 2792 standard resistor [250 Ω ±0.005%, 3 W] Load adjustment resistor [100 Ω ±1%, 1 W]	
Voltmeter	Model 2501 A digital multimeter Accuracy (10V DC range): ±(0.002% of rdg + 1 dgt)	
Digital manometer	Model MT220 precision digital manometer 1) For 10 kPa class Accuracy: ±(0.015% of rdg + 0.015% of F.S.) for 0 to 10 kPa ±(0.2% of rdg + 0.1% of F.S.) for -10 to 0 kPa 2) For 130 kPa class Accuracy: ±0.02% of rdg for 25 to 130 kPa ±5digits for 0 to 25 kPa ±(0.2% of rdg + 0.1% of F.S.) for -80 to 0 kPa 3) For 700 kPa class Accuracy: ±(0.02% of rdg + 3digits) for 100 to 700 kPa ±5 digits for 0 to 100 kPa ±(0.2% of rdg + 0.1% of F.S.) for -80 to 0 kPa 4) For 3000 kPa class Accuracy: ±(0.02% of rdg + 10 digits) for 0 to 3000 kPa ±(0.2% of rdg + 0.1% of F.S.) for -80 to 0 kPa 5) For 130 kPa abs class Accuracy: ±(0.03% of rdg + 6 digits) for 0 to 130 kPa abs	Select a manometer having a pressure range close to that of the transmitter.
Pressure generator	Model 7674 pneumatic pressure standard for 200 kPa {2 kgf/cm ² }, 25 kPa {2500 mmH ₂ O} Accuracy: ±0.05% of F.S.	Requires air pressure supply.
	Dead weight gauge tester 25 kPa {2500 mmH ₂ O} Accuracy: ±0.03% of setting	Select the one having a pressure range close to that of the transmitter.
Pressure source	Model 6919 pressure regulator (pressure pump) Pressure range: 0 to 133 kPa {1000 mmHg}	Prepare the vacuum pump for negative pressure ranges.

Note: The above table contains the instruments capable of performing calibration to the 0.2% level. Since special maintenance and management procedures involving traceability of each instrument to higher-level standards are required for calibration to the 0.1% or higher level, there may be difficulties in calibration to this level in the field. For calibration to the 0.1% level, contact Yokogawa representatives from which the instrument was purchased or the nearest Yokogawa office.

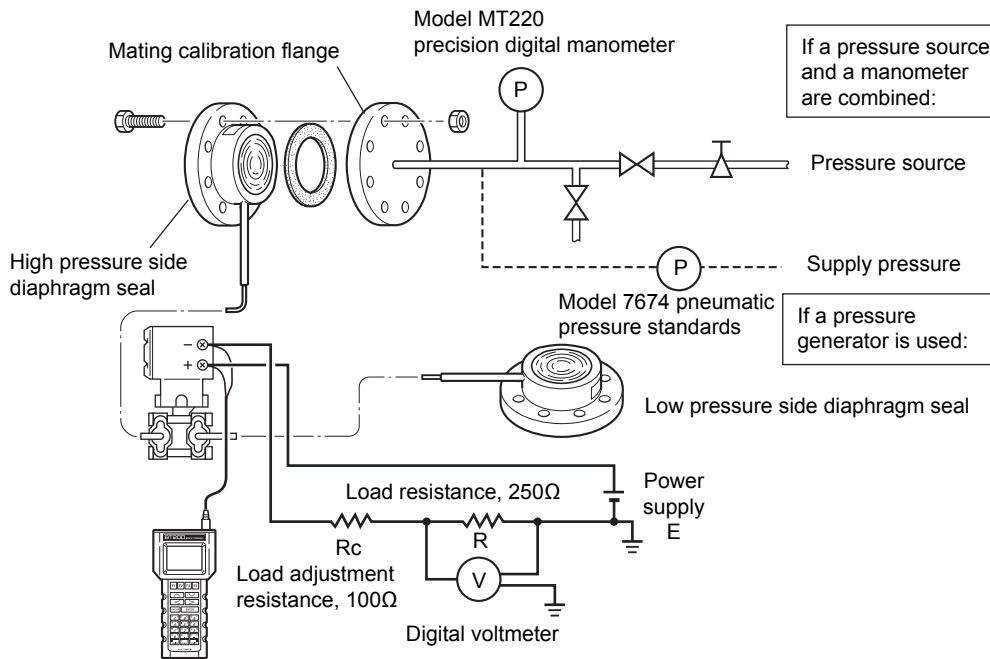


Figure 7.1 Instrument Connections (4 to 20mA output)

7.4 Disassembly and Reassembly

This section describes procedures for disassembly and reassembly for maintenance and component replacement.

Always turn OFF power and shut off and release pressures before disassembly. Use proper tools for all operations. Table 7.2 shows the tools required.

Table 7.2 Tools for Disassembly and Reassembly


Tool	Quantity	Remarks
Phillips screwdriver	1	JIS B4633, No. 2
Slotted screwdriver	1	
Allen wrenches	3	JIS B4648 One each, nominal 3, 4 and 2.5 mm Allen wrenches
Wrench	1	Width across flats, 17 mm
Torque wrench	1	
Adjustable wrench	1	
Socket wrench	1	Width across flats, 16 mm
Socket driver	1	Width across flats, 5.5 mm
Tweezers	1	



CAUTION

Precautions for ATEX Flameproof Type Transmitters

- Flameproof type transmitters must be, as a rule, removed to a non-hazardous area for maintenance and be disassembled and reassembled to the original state.
- On the flameproof type transmitters the two covers are locked, each by an Allen head bolt (shrouding bolt). When a shrouding bolt is driven clockwise by an Allen wrench, it is going in and cover lock is released, and then the cover can be opened.
When a cover is closed it should be locked by a shrouding bolt without fail. Tighten the shrouding bolt to a torque of 0.7 N·m {7 kgf·cm}.

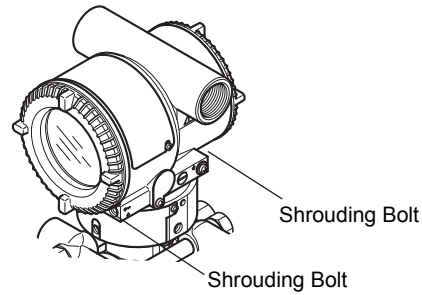

F0702.ai

Figure 7.2 Shrouding Bolts

7.4.1 Replacing the Integral Indicator



CAUTION

Cautions for Flameproof Type Transmitters

Users are prohibited by law from modifying the construction of a flameproof type transmitter. This would invalidate the agency approval for the use of the transmitter in a rated area. It follows that the user is prohibited from using a flameproof type transmitter with its integral indicator removed, or from adding an integral indicator to a transmitter. If such modification is absolutely required, contact Yokogawa.

This subsection describes the procedure for replacing an integral indicator. (See figure 7.3)

■ Removing the Integral Indicator

- Remove the cover.
- While supporting the integral indicator with one hand, loosen its two mounting screws.
- Dismount the LCD board assembly from the CPU assembly.

When doing this, carefully pull the LCD board assembly straight forward so as not to damage the connector pins between it and the CPU assembly.

■ Attaching the Integral Indicator

- Align both the LCD board assembly and CPU assembly connectors and engage them.
- Insert and tighten the two mounting screws.
- Replace the cover.

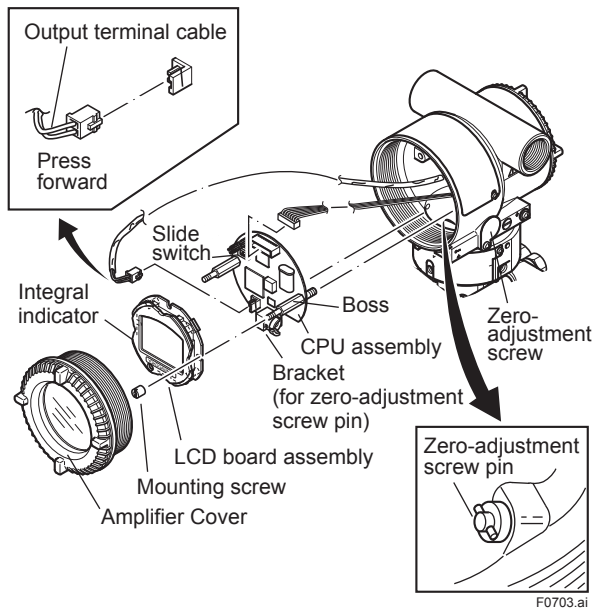


Figure 7.3 Removing and Attaching LCD Board Assembly and CPU Assembly

7.4.2 Replacing the CPU Board Assembly

This subsection describes the procedure for replacing the CPU assembly. (See figure 7.3)

■ Removing the CPU Assembly

- 1) Remove the cover. If an integral indicator is mounted, refer to subsection 7.4.1 and remove the indicator.
- 2) Turn the zero-adjustment screw to the position (where the screw head slot is horizontal) as shown in figure 7.3.
- 3) Disconnect the output terminal cable (cable with brown connector at the end). When doing this, lightly press the side of the CPU assembly connector and pull the cable connector to disengage.
- 4) Use a socket driver (width across flats, 5.5mm) to loosen the two bosses.
- 5) Carefully pull the CPU assembly straight forward to remove it.
- 6) Disconnect the flat cable (cable with white connector at the end) that connects the CPU assembly and the capsule.



NOTE

Be careful not to apply excessive force to the CPU assembly when removing it.

■ Mounting the CPU Assembly

- 1) Connect the flat cable (with white connector) between the CPU assembly and the capsule.
- 2) Connect the output terminal cable (with brown connector).



NOTE

Make certain that the cables do not get pinched between the case and the edge of the CPU assembly.

- 3) Align and engage the zero-adjustment screw pin with the groove on the bracket on the CPU assembly. Then insert the CPU board assembly straight onto the post in the amplifier case.
- 4) Tighten the two bosses. If the transmitter is equipped with an integral indicator, refer to subsection 7.4.1 to mount the indicator.



NOTE

Confirm that the zero-adjustment screw pin is placed properly in the groove on the bracket prior to tightening the two bosses. If it is not, the zero-adjustment mechanism will be damaged.

- 5) Replace the cover.

7.5 Troubleshooting

If any abnormality appears in the measured values, use the troubleshooting flow chart below to isolate and remedy the problem. Since some problems have complex causes, these flow charts may not identify all. If you have difficulty isolating or correcting a problem, contact Yokogawa service personnel.

7.5.1 Basic Troubleshooting

First determine whether the process variable is actually abnormal or a problem exists in the measurement system.

If the problem is in the measurement system, isolate the problem and decide what corrective action to take.

This transmitter is equipped with a self-diagnostic function which will be useful in troubleshooting, and the transmitter equipped with an integral indicator will show an alarm code as a result of self-diagnosis.

See subsection 7.5.3 for the list of alarms. See also each communication manual.



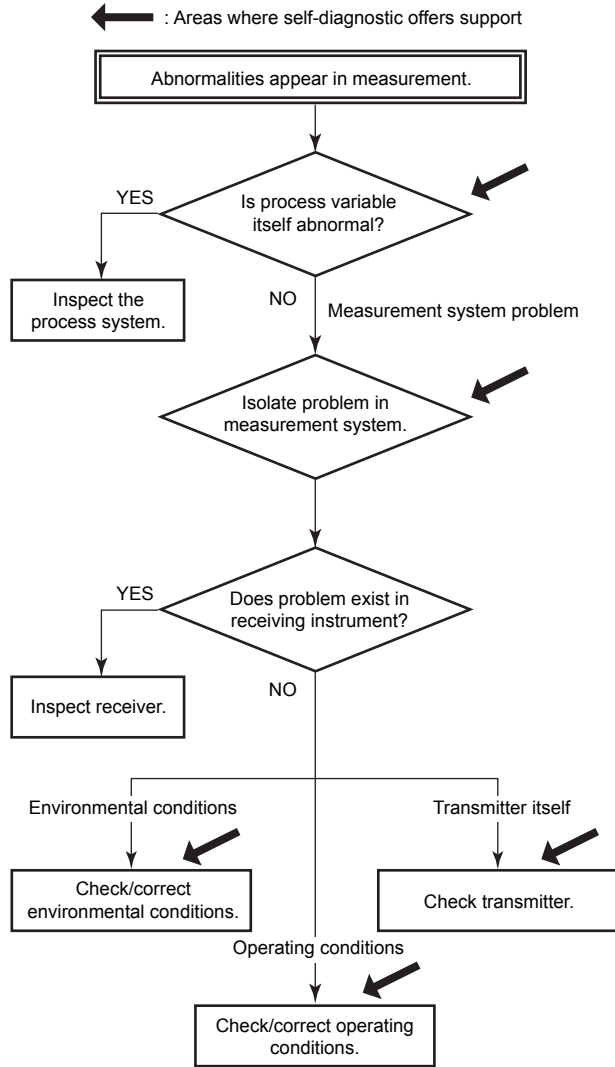



Figure 7.5 Basic Flow and Self-Diagnostics

7.5.2 Troubleshooting Flowcharts

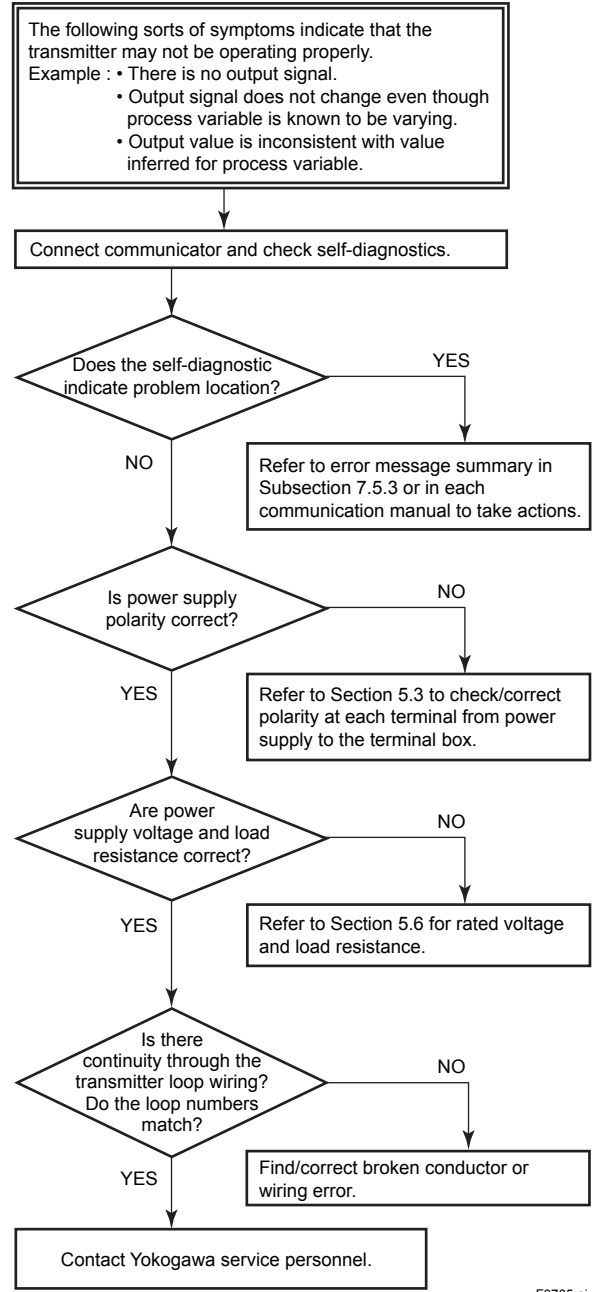

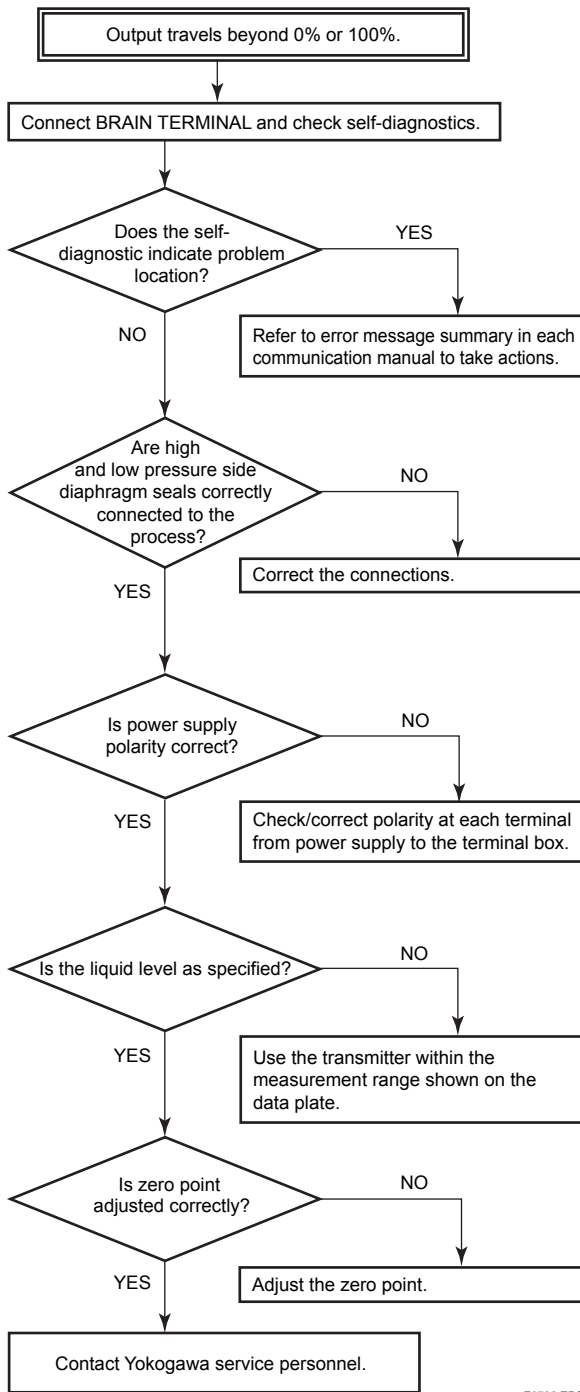

F0706.EPS

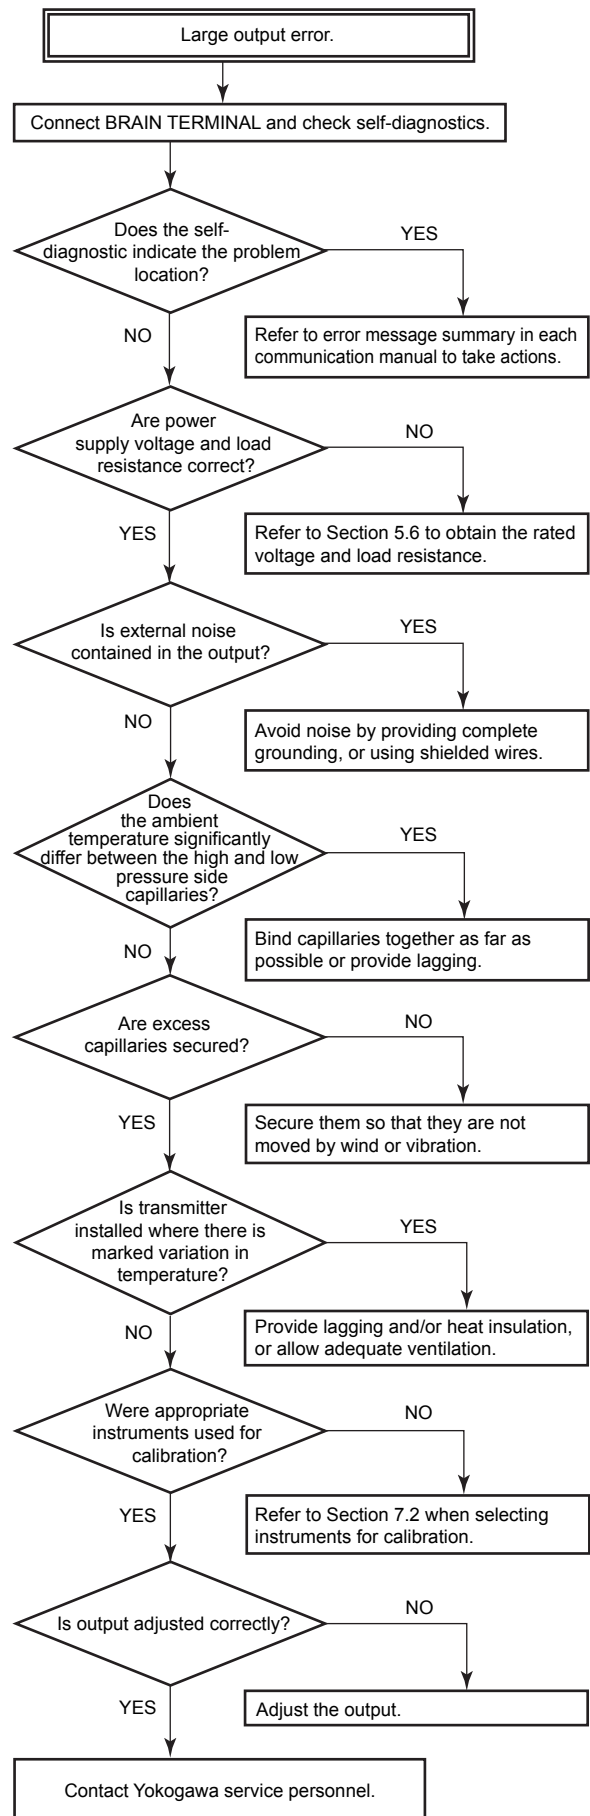

F0707.ai

7.5.3 Alarms and Countermeasures

Table 7.3 Alarm Message Summary

Indicator	Cause	Output Operation during Error	Countermeasure
None			
AL. 01 CAP. ERR	Sensor problem. Capsule temperature sensor problem. Capsule EEPROM problem.	Outputs the signal (Hold, High, or Low) set with parameter.	Replace capsule when error keeps appearing even after restart.
AL. 02 AMP. ERR	Amplifier temperature sensor problem. Amplifier EEPROM problem. Amplifier problem.	Outputs the signal (Hold, High, or Low) set with parameter.	Replace amplifier.
AL. 10 PRESS	Input is outside measurement range limit of capsule.	Outputs high range limit value or low range limit value.	Check input or replace capsule when necessary. Use heat insulation or make lagging to keep temperature within range.
AL. 11 ST. PRSS	Static pressure exceeds limit.	Continues to operate and output.	
AL. 12 CAP. TMP	Capsule temperature is outside range (-50 to 130°C).		
AL. 13 AMP. TMP	Amplifier temperature is outside range (-50 to 95°C)		
AL. 30 RANGE	Output is outside upper or lower range limit value.	Outputs high range limit value or low range limit value.	Check input and range setting, and change them as needed.
AL. 31 SP. RNG	Static pressure exceeds specified range.	Continues to operate and output.	Check input.
AL. 35 *1 P. HI	Input pressure exceeds specified threshold.		
AL. 36 *1 P. LO			
AL. 37 *1 SP. HI	Input static pressure exceeds specified threshold.		
AL. 38 *1 SP. LO			
AL. 39 *1 TMP. HI	Detected temperature exceeds specified threshold.		
AL. 40 *1 TMP. LO			
AL. 50 P. LRV	Specified value is outside of setting range.	Holds output immediately before error occurred.	Check setting and change them as needed.
AL. 51 P. URV			
AL. 52 P. SPN			
AL. 53 P. ADJ		Continues to operate and output.	Check input.
AL. 54 SP. RNG		Continues to operate and output holding static pressure in %.	Check setting and change them as needed.
AL. 55 SP. ADJ		Continues to operate and output.	Check input.
AL. 60 SC. CFG		Specified values or settings to define signal characterizer function do not satisfy the condition.	
AL. 79 OV. DISP	Displayed value exceeds limit.		

*1: These alarms may appear only when process alarm function is activated.

8. General Specifications

8.1 Standard Specifications

Refer to IM 01C25T02-01E for FOUNDATION Fieldbus communication type and IM 01C25T04-01EN for PROFIBUS PA communication type for the items marked with “◇”.

- **Performance Specifications**

See General Specifications sheet of each model.

- **Functional Specifications**

Span & Range Limits

EJX118A

Measurement Span/Range		kPa	inH ₂ O/(D1)	mbar/(D3)	mmH ₂ O/(D4)
M	Span	2 to 100	8 to 400	20 to 1000	200 to 10000
	Range	-100 to 100	-400 to 400	-1000 to 1000	-10000 to 10000
H	Span	10 to 500	40 to 2000	100 to 5000	0.1 to 5 kgf/cm ²
	Range	-500 to 500	-2000 to 2000	-5000 to 5000	-5 to 5 kgf/cm ²

EJX438A

Measurement Span/Range		MPa	psi/(D1)	bar/(D3)	kgf/cm ² (D4)	
A*1	Span	0.035 to 3.5	5 to 500	0.35 to 35	0.35 to 35	
	Range	-0.1 to 3.5	-14.5 to 500	-1 to 35	-1 to 35	
B	Flush type*1	Span	0.16 to 16	23 to 2300	1.6 to 160	1.6 to 160
		Range	-0.1 to 16	-14.5 to 2300	-1 to 160	-1 to 160
	Extended type*1	Span	0.16 to 7	23 to 1000	1.6 to 70	1.6 to 70
		Range	-0.1 to 7	-14.5 to 1000	-1 to 70	-1 to 70

*1: Measurement range is within the flange rating.

EJA118E

Measurement Span/Range		kPa	inH ₂ O/(D1)	mbar/(D3)	mmH ₂ O/(D4)
M	Span	2.5 to 100	10 to 400	25 to 1000	250 to 10000
	Range	-100 to 100	-400 to 400	-1000 to 1000	-10000 to 10000
H	Span	25 to 500	100 to 2000	250 to 5000	0.25 to 5 kgf/cm ²
	Range	-500 to 500	-2000 to 2000	-5000 to 5000	-5 to 5 kgf/cm ²

EJA438E

Measurement Span/Range		MPa	psi/(D1)	bar/(D3)	kgf/cm ² (D4)	
A*1	Span	0.06 to 3.5	8.6 to 500	0.6 to 35	0.6 to 35	
	Range	-0.1 to 3.5	-14.5 to 500	-1 to 35	-1 to 35	
B	Flush type*1	Span	0.46 to 16	67 to 2300	4.6 to 160	4.6 to 160
		Range	-0.1 to 16	-14.5 to 2300	-1 to 160	-1 to 160
	Extended type*1	Span	0.46 to 7	67 to 1000	4.6 to 70	4.6 to 70
		Range	-0.1 to 7	-14.5 to 1000	-1 to 70	-1 to 70

*1: Measurement range is within the flange rating.

Output “◇”

For 4 to 20 mA output

(Output signal code D, E and J)

Two wire 4 to 20 mA DC output with digital

communications, linear or square root programmable. BRAIN or HART FSK protocol are superimposed on the 4 to 20 mA signal. Output range: 3.6 mA to 21.6 mA. Output limits conform to NAMUR NE43 can be pre-set by option C2 or C3.

For 1 to 5 V output (Output signal code Q)

Three or four wire low power 1 to 5 V DC output with HART, linear or square root programmable. HART protocol is superimposed on the 1 to 5 V DC signal.

Output range: 0.9 V to 5.4 V DC

Failure Alarm

For 4 to 20 mA output

(Output signal code D, E and J)

Analog output status at CPU failure and hardware error;

Up-scale: 110%, 21.6 mA DC or more (standard)

Down-scale: -5%, 3.2 mA DC or less

For 1 to 5 V output (Output signal code Q)

Analog output status at CPU failure and hardware error;

Up-scale: 110%, 5.4 V DC or more (standard)

Down-scale: -5%, 0.8 V DC or less

Damping Time Constant (1st order)

Amplifier damping time constant is adjustable from 0 to 100.00 seconds and added to response time.

Note: For BRAIN protocol type, when amplifier damping is set to less than 0.5 seconds, communication may occasionally be unavailable during the operation, especially while output changes dynamically. The default setting of damping ensures stable communication.

Update Period “◇”

Differential Pressure: 45 ms

Static Pressure: 360 ms

Zero Adjustment Limits

Zero can be fully elevated or suppressed, within the lower and upper range limits of the capsule.

External Zero Adjustment “◇”

External Zero is continuously adjustable with 0.01% incremental resolution of span. Re-range can be done locally using the digital indicator with range-setting switch.

Integral Indicator (LCD display)

5-digit Numerical Display, 6-digit Unit Display and Bar graph.

The indicator is configurable to display one or up to four of the following variables periodically: Differential pressure in %, Scaled Differential pressure, Differential Pressure in Engineering unit, Static Pressure in Engineering unit. See “Setting When Shipped” for factory setting.

● **Normal Operating Condition**
(Selected features may affect limits.)

Ambient Temperature Limits

- 40 to 60°C (-40 to 140°F)
- 30 to 60°C (-22 to 140°F) with LCD display

Note: The ambient temperature limits must be within the fill fluid operating temperature range, see table 8.1.

Process Temperature Limits

See table 8.1.

Ambient Humidity Limits

0 to 100% RH

Working Pressure Limits

See table 8.1.

For atmospheric pressure or below, see figure 8.1a through 8.1e.

Table 8.1 Process temperature, Ambient temperature, and Working pressure

	Code	Process temperature*1	Ambient temperature*2	Working pressure	Specific gravity*3
Silicone oil (general use)	A	-10 to 250°C (14 to 482°F)*4	-10 to 60°C (14 to 140°F)	2.7 kPa abs (0.38 psi abs) to flange rating pressure	1.07
Silicone oil (general use)	B	-30 to 180°C (-22 to 356°F)	-15 to 60°C (-5 to 140°F)		0.94
Silicone oil (high temperature use)	C	10 to 310°C (50 to 590°F)	10 to 60°C (50 to 140°F)		1.09
Fluorinated oil (oil-prohibited use)	D	-20 to 120°C (-4 to 248°F)	-10 to 60°C (14 to 140°F)	51 kPa abs (7.4 psi abs) to flange rating pressure	1.90 to 1.92
Ethylene glycol (low temperature use)	E	-50 to 100°C (-58 to 212 °F)	-40 to 60°C (-40 to 140°F)	100 kPa abs (atmospheric pressure) to flange rating pressure	1.09
Silicone oil (high temp. and high vacuum use)	1	-10 to 250°C*4 (14 to 482°F)	-10 to 60°C*5 (14 to 140°F)	0.013 kPa abs (0.0019 psi abs) to flange rating pressure	1.07
Silicone oil (high temp. and high vacuum use)	2	10 to 310°C (50 to 590°F)	10 to 60°C*5 (50 to 140°F)		1.09
Silicone oil (high vacuum use)	4	-10 to 100°C (14 to 212°F)	-10 to 60°C*5 (14 to 140°F)		1.07

- *1: See figure 8.1a through 8.1e 'Working Pressure and Process Temperature.'
- *2: This ambient temperature is the transmitter ambient temperature.
- *3: Approximate values at a temperature of 25°C (77°F)
- *4: In case of wetted parts material code TW (Tantalum), process temperature limit is up to 200°C (392°F).
- *5: The upper ambient temperature limit is 50°C (122°F) in the following combinations.

Process connection style code	Process connection size code
W (Flush type)	2 (2-inch) or 8 (1 1/2-inch)
E (Extension type)	3 (3-inch)

Note: The differential pressure transmitter should be installed at least 600 mm below the high pressure (HP) process connection. However, this value (600 mm) may be affected by ambient temperature, operating pressure, fill fluid or material of the wetted diaphragm. Contact YOKOGAWA when the transmitter can not be installed at least 600 mm below the HP process connection.

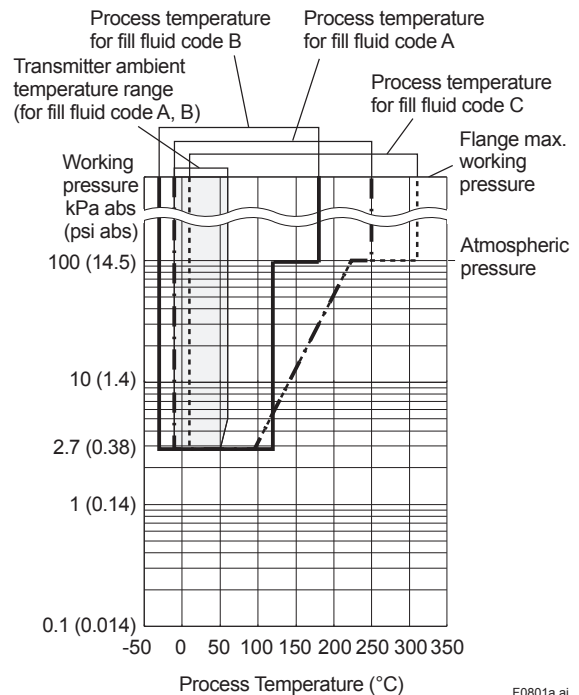


Figure 8.1a Working Pressure and Process Temperature (Fill fluid: silicone oil for general and high temperature use)

F0801a.ai

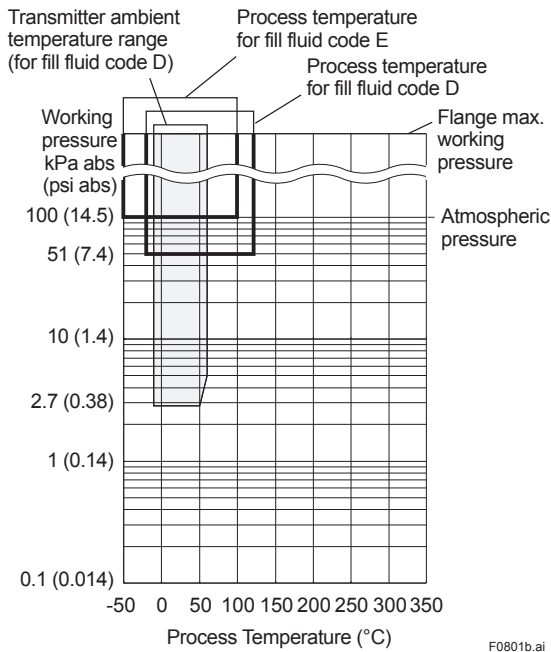


Figure 8.1b Working Pressure and Process Temperature (Fill fluid: fluorinated oil for oil-prohibited use and ethylene glycol for low temperature use)

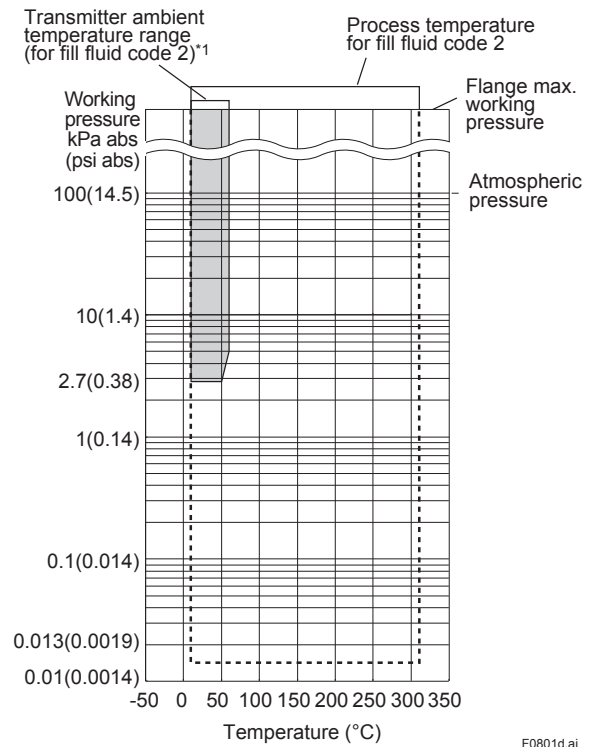


Figure 8.1d Working Pressure and Process Temperature (Fill fluid: silicone oil for high temp. and high vacuum use)

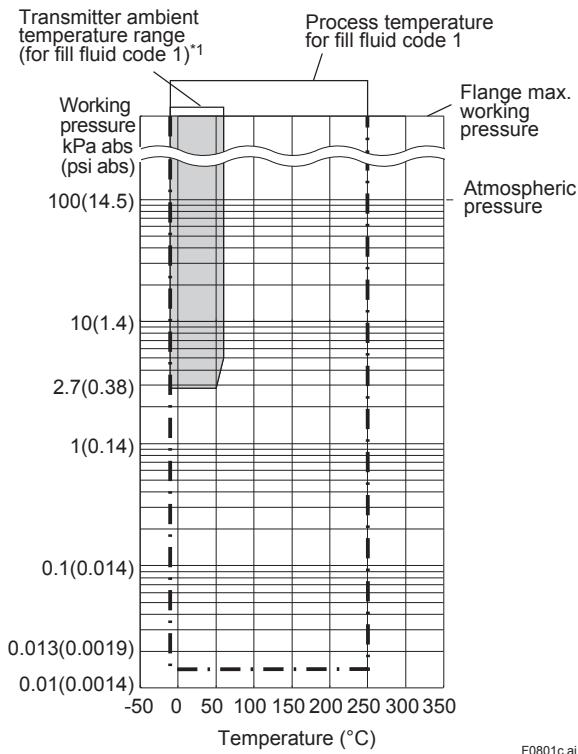


Figure 8.1c Working Pressure and Process Temperature (Fill fluid: silicone oil for high temp. and high vacuum use)

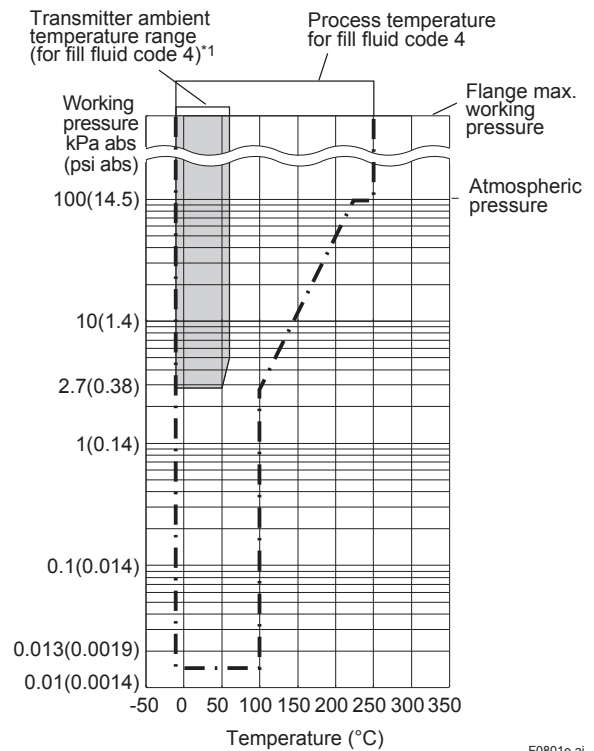


Figure 8.1e Working Pressure and Process Temperature (Fill fluid: silicone oil for high vacuum use)

*1: The upper ambient temperature limit is 50°(122°F) in the following combinations.

Process connection style code	Process connection size code
W (Flush type)	2 (2-inch) or 8 (1 1/2-inch)
E (Extension type)	3 (3-inch)

Supply & Load Requirements “◇”

(For output signal code D, E, and J. Optional features or approval codes may affect electrical requirements.)

With 24 V DC supply, up to a 550 Ω load can be used. See graph below.

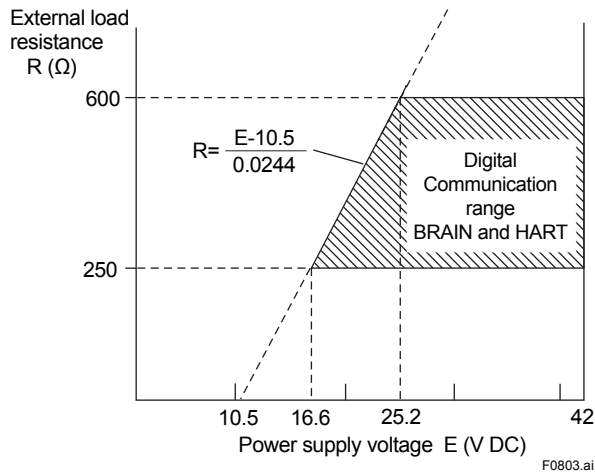


Figure 8.3 Relationship Between Power Supply Voltage and External Load Resistance

Supply Voltage

For 4 to 20 mA output

(Output signal code D, E and J)

10.5 to 42 V DC for general use and flameproof type.

10.5 to 32 V DC for lightning protector (Option code /A).

10.5 to 30 V DC for intrinsically safe, type n or non-incendive type.

Minimum voltage limited at 16.6 V DC for digital communications, BRAIN and HART

For 1 to 5 V output (Output signal code Q)

Power supply :

9 to 28 V DC for general use and flame proof type.

Power Consumption :

0.96 mA to 3 mA, 27 mW

Load for 4 to 20 mA output

(Output signal code D, E and J)

0 to 1290 Ω for operation

250 to 600 Ω for digital communication

Output Load for 1 to 5 V output

(Output signal code Q)

1 MΩ or greater (meter input impedance)

Communication Requirements “◇”

(Safety approvals may affect electrical requirements.)

BRAIN

Communication Distance

Up to 2 km (1.25 miles) when using CEV polyethylene-insulated PVC-sheathed cables. Communication distance varies depending on type of cable used.

Load Capacitance

0.22 μF or less

Load Inductance

3.3 mH or less

Input Impedance of communicating device

10 kΩ or more at 2.4 kHz.

HART

Communication Distance

Up to 1.5 km {1 mile} when using multiple twisted pair cables. Communication distance varies depending on type of cable used.

Use the following formula to determine cable length for specific applications:

$$L = \frac{65 \times 10^6}{(R \times C)} - \frac{(C_f + 10,000)}{C}$$

Where:

L = length in meters or feet

R = resistance in Ω (including barrier resistance)

C = cable capacitance in pF/m or pF/ft

C_f = maximum shunt capacitance of receiving devices in pF/m or pF/ft

EMC Conformity Standards

EN 61326-1 Class A, Table2 (For use in industrial locations)

EN 61326-2-3

EN 61326-2-5 (for Fieldbus)

Immunity influence during the test

Differential pressure / Pressure: Output shift is specified within ±1% of 1/20 Max span.

Static pressure: Output shift is specified within ±2% of 1MPa span.

Status Output Line*: Continues to operate without reversal.

*: Only for /AL option.

Condition for EMC test for FOUNDATION fieldbus type: The shield of the cable and the case are connected with a capacitor of 10nF.

● Physical Specifications

Process connections

See the following table.

Table 8.2 Flange size and rating

Process connection style	Size	Flange
Flush type	3-inch 2-inch 1 1/2-inch*1	JIS 10K, 20K, 40K, 63K*2 ANSI Class 150, 300, 600 JPI Class 150, 300, 600 DIN PN10/16, 25/40, 64
Extended type	4-inch 3-inch	JIS 10K, 20K, 40K*2 ANSI Class 150, 300 JPI Class 150, 300 DIN PN10/16, 25/40
Combination type*3 (Extended and Flush)	High pressure side: 4-inch Low pressure side: 3-inch	JIS 10K, 20K ANSI Class 150, 300 JPI Class 150, 300 DIN PN10/16, 25/40

*1: Flushing connection rings are always attached.

*2: Applicable for EJ□438□ only.

*3: Applicable for EJ□118□ only.

Gasket Contact Surface

See the following table.

Table 8.3 Gasket contact surface

Flange		JIS/JPI/ DIN		ANSI	
Wetted parts material code		SW SE SY	HW TW UW	SW SE SY	HW TW UW
Gasket contact Surface	Serration*1	—	—	●	—
	Flat (No serration)	●	●	●	●

●: Applicable, —: Not applicable

*1: ANSI B16.5

Electrical Connections

See “Model and Suffix Codes.”

Transmitter Mounting

2-inch pipe mounting

Wetted Parts Material

Diaphragm seal

Diaphragm and other wetted parts;
Refer to “Model And Suffix Codes.”

Flushing connection ring (optional)

Ring and Vent / Drain plugs
Refer to “Model And Suffix Codes.”
(Spiral) gasket for transmitter side
316SST (Hoop), PTFE Teflon (Filler)

Non-wetted Parts Material

Transmitter body section:

Cover flange
ASTM CF-8M
Cover flange bolting
ASTM-B7 carbon steel, 316L SST stainless steel, or ASTM grade 660 stainless steel
Housing
Low copper cast aluminum alloy with polyurethane paint or ASTM CF-8M stainless steel.

Cover O-rings

Buna-N, fluoro-rubber (option)
Degrees of Protection
IP66/IP67, Type 4X
Nameplate and tag
316SST (including /N4 wired tag)

Diaphragm seal section:

Process Flange
JIS S25C, 304 SST, or 316 SST
Capillary tube
316 SST
Protection tube
304 SST PVC-sheathed
(Max. operating temperature of PVC, 100°C (212°F))
Fill fluid
See table 8.1.

Weight

EJ□118□

Flush type: 16.2 kg (35.7 lbs)
(3-inch ANSI Class150 flange, capillary length 5 m; without integral indicator and mounting bracket.)
Extended type: 21.8 kg (48.1 lbs)
(4-inch ANSI Class150 flange, extension length (X2)=100 mm, capillary length 5 m; without integral indicator and mounting bracket.)
Combination type: 19.0 kg (41.7 lbs)
(4-inch and 3-inch ANSI Class150 flange, extension length (X2) =100 mm, capillary length 5 m; without integral indicator and mounting bracket.)

EJ□438□

Flush type: 7.2 kg (15.9 lbs)
(3-inch ANSI Class150 flange, capillary length 5 m; without integral indicator and mounting bracket.)



Extended type: 12.3 kg (27.1 lbs)
(4-inch ANSI Class150 flange, extension length (X2)=100 mm, capillary length 5 m; without integral indicator and mounting bracket.)

Add 1.5 kg (3.3lb) for amplifier housing code 2.

8.2 Model and Suffix Codes

● Instruction

 
The model and suffix codes for EJ□118□ and EJ□438□ consist of two parts; a transmitter body section (I) and a diaphragm seal section (II). This specification sheet introduces these two parts separately. The transmitter body section is shown in one table, and the diaphragm seal section specifications are listed according to the process connection style. First select the model and suffix codes of transmitter body section and then continue on one of the diaphragm seal section.

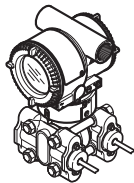

See Page 8-7



See Page 8-8

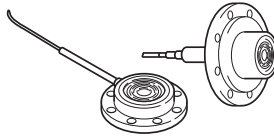


- Flush type
 - Flange size: 80A, 50A ••• See Page 8-9
 - Flange size: 40A ••• See Page 8-11
- Extended type ••• See Page 8-12
- Combination type ••• See Page 8-14

F0804.ai

EJ□118□

 I. Transmitter body section



F0805-1.ai



Model	Suffix codes	Description
EJX118A EJA118E	Diaphragm sealed differential pressure transmitter
Output signal	-D -E -J -F -G -Q	4 to 20 mA DC with digital communication (BRAIN protocol) 4 to 20 mA DC with digital communication (HART protocol) 4 to 20 mA DC with digital communication (HART 5/HART 7 protocol) Digital communication (FOUNDATION Fieldbus protocol) Digital communication (PROFIBUS PA protocol) Low Power, 1 to 5 V DC with digital communication (HART 7 protocol)
Measurement span (capsule)	M H	[EJX118A] 2 to 100 kPa (8 to 400 inH ₂ O) [EJA118E] 2.5 to 100 kPa (10 to 400 inH ₂ O) 10 to 500 kPa (40 to 2000 inH ₂ O) 25 to 500 kPa (100 to 2000 inH ₂ O)
—	S	Always S
—	C	Always C
Coverflange bolts and nuts material	J G C	ASTM-B7 carbon steel 316L SST stainless steel ASTM grade660 stainless steel
Installation	-9	Horizontal piping type and left side high pressure
Amplifier housing	1 2 3	Cast aluminum alloy ASTM CF-8M Stainless steel*2 Cast aluminum alloy with corrosion resistance properties
Electrical connection	▶ 0 2 4 5 7 9 A C D	G 1/2 female, one electrical connection without blind plugs 1/2 NPT female, two electrical connections without blind plugs M20 female, two electrical connections without blind plugs G 1/2 female, two electrical connections with a blind plug 1/2 NPT female, two electrical connections with a blind plug M20 female, two electrical connections with a blind plug G 1/2 female, two electrical connections and a 316 SST blind plug 1/2 NPT female, two electrical connections and a 316 SST blind plug M20 female, two electrical connections and a 316 SST blind plug
Integral Indicator	▶ D E N	Digital indicator *3 Digital indicator with the range setting switch (push button)*1 None
Mounting blaket	▶ B J N	304 SST 2-inch pipe mounting, flat type (for horizontal piping) 316 SST 2-inch pipe mounting, flat type (for horizontal piping) None
Diaphragm seal section		-□□□□□□□□-□□□□ Continued on diaphragm seal section (II)

The “▶” marks indicate the most typical selection for each specification.

- *1: Not applicable for output signal code F.
- *2: Not applicable for electrical connection code 0.
- *3: Not applicable for output signal code G.

EJ□438□

  I. Transmitter body section



F0806-1.ai


Model	Suffix codes	Description
EJX438A EJA438E	Diaphragm sealed gauge pressure transmitter
Output signal	-D -E -J -F -G -Q	4 to 20 mA DC with digital communication (BRAIN protocol) 4 to 20 mA DC with digital communication (HART protocol) 4 to 20 mA DC with digital communication (HART 5/HART 7 protocol) Digital communication (FOUNDATION Fieldbus protocol) Digital communication (PROFIBUS PA protocol) Low Power, 1 to 5 V DC with digital communication (HART 7 protocol)
Measurement span (capsule)	A B	[EJX438A] 0.035 to 3.5 MPa (5 to 500 psi) [EJA438E] 0.06 to 3.5 MPa (8.6 to 500 psi) 0.16 to 16 MPa (23 to 2300 psi)*1 0.46 to 16 MPa (67 to 2300 psi)*1
—	S	Always S
—	C	Always C
Coverflange bolts and nuts material	J G C	ASTM-B7 carbon steel 316L SST stainless steel ASTM grade660 stainless steel
Installation	-9	Horizontal piping type and left side high pressure
Amplifier housing	1 2 3	Cast aluminum alloy ASTM CF-8M Stainless steel *3 Cast aluminum alloy with corrosion resistance properties
Electrical connection	▶ 0 2 4 5 7 9 A C D	G 1/2 female, one electrical connection without blind plugs 1/2 NPT female, two electrical connections without blind plugs M20 female, two electrical connections without blind plugs G 1/2 female, two electrical connections with a blind plug 1/2 NPT female, two electrical connections with a blind plug M20 female, two electrical connections with a blind plug G 1/2 female, two electrical connections and a 316 SST blind plug 1/2 NPT female, two electrical connections and a 316 SST blind plug M20 female, two electrical connections and a 316 SST blind plug
Integral Indicator	▶ D E N	Digital indicator *4 Digital indicator with the range setting switch (push button)*2 None
Mounting bracket	▶ B J N	304 SST 2-inch pipe mounting, flat type (for horizontal piping) 316 SST 2-inch pipe mounting, flat type (for horizontal piping) None
Diaphragm seal section		-□□□□□□□□-□□□□ Continued on diaphragm seal section (II)

The "▶" marks indicate the most typical selection for each specification.
 *1: When specified process connection style code E, maximum range and span are 7 MPa (1000 psi.)
 *2: Not applicable for output signal code F.
 *3: Not applicable for electrical connection code 0, 5, 7 and 9.
 *4: Not applicable for output signal code G.

II. Diaphragm seal section (Flush type)

- Process connection size: 3-inch (80 mm) / 2-inch (50 mm)

 EJ□118□ - □□□□ - □□□□ - W□□ $\frac{3}{2}$ □□□□ - □□□□



F0807-1.ai

Model	Suffix codes	Description	EJ□118□	EJ□438□
EJ□118□ EJ□438□	-□□□□-□□□□	Transmitter body section (I)		
Process connection style	-W	Flush type		
Flange rating	J1	JIS 10K	○	○
	J2	JIS 20K	○	○
	J4	JIS 40K	○	○
	J6	JIS 63K	—	○
	A1	ANSI class 150	○	○
	A2	ANSI class 300	○	○
	A4	ANSI class 600	○	○
	D2	DIN PN10/16	○	○
D4	DIN PN25/40	○	○	
D5	DIN PN64	○	○	
Process connection size (Process flange size)	3	3-inch (80 mm)	○	○
	2	2-inch (50 mm)	○	○
Flange material	A	JIS S25C	○	○
	B	304 SST*10	○	○
	C	316 SST*10	○	○
Gasket contact surface *1	1	Serration (for ANSI flange with wetted parts material SW only)	○	○
	2	Flat (no serration)	○	○
Wetted parts material	SW	[Diaphragm] 316L SST	○	○
	HW	[Diaphragm] Hastelloy C-276*9	○	○
	TW	[Diaphragm] Tantalum	○	○
	UW	[Diaphragm] Titanium	○	○
Flushing connection ring *2	0	[Ring] None	○	○
	1	[Ring] Straight type	○	—
	2	[Ring] Straight type	○	—
	A	[Ring] Straight type	○	○
	B	[Ring] Straight type	—	○
Extension	0	None	○	○
Fill fluid	-A	[Process temp.] For general use (Silicone oil)*3 -10 to 250°C	○	○
	-B	[Process temp.] For general use (Silicone oil) -30 to 180°C	○	○
	-C	[Process temp.] For high temperature use (silicone oil)*4*7 10 to 310°C	○	○
	-D	[Process temp.] For oil-prohibited use (fluorinated oil)*5 -20 to 120°C	○	○
	-E	[Process temp.] For low temperature use (ethylene glycol) -50 to 100°C	○	○
	-1	[Process temp.] High temp. and high vacuum use (Silicone oil)*3*11 -10 to 250°C	○	○
	-2	[Process temp.] High temp. and high vacuum use (Silicone oil)*4*7*11 10 to 310°C	○	○
	-4	[Process temp.] High vacuum use (Silicone oil)*11 -10 to 100°C	○	○
Capillary connection	A	Side of diaphragm seal unit	○	○
	2	Always 2	○	○
Capillary length*6	1	1 m	○	○
	2	2 m	○	○
	3	3 m	○	○
	4	4 m	○	○
	5	5 m	○	○
	6	6 m	○	○
Option codes	7	7 m	○	○
	8	8 m	○	○
	9	9 m	○	○
	A	10 m	○	○
Option codes		/□ Optional specification		

The "►" marks indicate the most typical selection for each specification. Example: EJX118A-DMSCG-912EN-WA13B1SW00-BA25/□


- *1: See table 8.3 'Gasket contact surface' on page 8-5.
- *2: When specified flushing connection ring code 1, 2, A, or B, exclusive gasket is provided for transmitter side.
- *3: In case of wetted parts material code TW (Tantalum), the process temperature limit is -10 to 200°C.
- *4: Wetted parts material code TW (Tantalum) cannot be applied.
- *5: Even in case where fill fluid code D (fluorinated oil) is selected, if degrease cleansing treatment or both degrease cleansing and dehydrating treatment for the wetted parts is required, specify option code K1 or K5.
- *6: In case of wetted parts material code HW (Hastelloy C), TW (Tantalum), and UW (Titanium) for 2-inch pressure flange, specify capillary length from 1 to 5 m.
- *7: Flushing connection ring code 1, 2, A, or B cannot be applied.
- *8: Not applicable for gasket contact surface code 1.
- *9: Hastelloy C-276 or N10276.
- *10: Forged version of the material may be used.
- *11: Not applicable for wetted parts material code UW (Titanium).
- *12: The upper ambient temperature limit is 50°C (122°F) in the following combinations.

Process connection style code	Process connection size code
W (Flush type)	2 (2-inch) or 8 (1 1/2-inch)
E (Extension type)	3 (3-inch)

II. Diaphragm seal section (Flush type)

- Process connection size: 1 1/2-inch (40 mm)

 EJ□118□ - □□□□ - □□□□ - W□8□□□□ - □□□□
 EJ□438□ - □□□□ - □□□□ - W□8□□□□ - □□□□



F0808-1.ai

Model	Suffix codes	Description	EJ□118□	EJ□438□
EJ□118□ EJ□438□	-□□□□-□□□□	Transmitter body section (I)	<input type="checkbox"/>	<input type="checkbox"/>
Process connection style	-W	Flush type	<input type="checkbox"/>	<input type="checkbox"/>
Flange rating	J1 JIS 10K J2 JIS 20K J4 JIS 40K A1 ANSI class 150 A2 ANSI class 300 A4 ANSI class 600	P1 JPI class 150 P2 JPI class 300 P4 JPI class 600	<input type="checkbox"/>	<input type="checkbox"/>
Process connection size (Process flange size)	8	1 1/2-inch (40 mm)	<input type="checkbox"/>	<input type="checkbox"/>
Flange material	▶ A JIS S25C B 304 SST*5 C 316 SST*5		<input type="checkbox"/>	<input type="checkbox"/>
Gasket contact surface *1	1 Serration (for ANSI flange only) 2 Flat (no serration)		<input type="checkbox"/>	<input type="checkbox"/>
Wetted parts material	SW	[Diaphragm] 316L SST [Others] 316L SST	<input type="checkbox"/>	<input type="checkbox"/>
Flushing connection ring *2	3 Reducer type R 1/4 connections*4 4 Reducer type 1/4 NPT connections C Reducer type R 1/4 connections*4 D Reducer type 1/4 NPT connections	[Ring] [Vent/Drain plugs] [Material] 316 SST 316 SST 316 SST	<input type="checkbox"/>	<input type="checkbox"/>
Extension	0	None	<input type="checkbox"/>	<input type="checkbox"/>
Fill fluid	▶ -A For general use (Silicone oil) -B For general use (Silicone oil) -D For oil-prohibited use (fluorinated oil)*3 -E For low temperature use (ethylene glycol) -1 High temp. and high vacuum use (Silicone oil) -4 High vacuum use (Silicone oil)	[Process temp.] [Ambient temp.] -10 to 250°C -10 to 60°C -30 to 180°C -15 to 60°C -20 to 120°C -10 to 60°C -50 to 100°C -40 to 60°C -10 to 250°C -10 to 50°C -10 to 100°C -10 to 50°C	<input type="checkbox"/>	<input type="checkbox"/>
Capillary connection	A	Side of diaphragm seal unit	<input type="checkbox"/>	<input type="checkbox"/>
—	2	Always 2	<input type="checkbox"/>	<input type="checkbox"/>
Capillary length	1 .. 1 m 2 .. 2 m 3 .. 3 m 4 .. 4 m 5 .. 5 m	6 6 m 7 7 m 8 8 m 9 9 m A 10 m	<input type="checkbox"/>	<input type="checkbox"/>
Option codes	/□ Optional specification		<input type="checkbox"/>	<input type="checkbox"/>

 
The "▶" marks indicate the most typical selection for each specification. Example: EJX118A-DMSCG-912EN-WA18B1SW40-BA25/□
 EJX438A-DAS2G-912EN-WA18B1SWD0-BA25/□

- *1: See table 8.3 'Gasket contact surface' on page 8-5.
- *2: When specified flushing connection ring code 3, 4, C, or D, exclusive gasket is provided for transmitter side.
- *3: Even in case where fill fluid code D (fluorinated oil) is selected, if degrease cleansing treatment or both degrease cleansing and dehydrating treatment for the wetted parts is required, specify option code K1 or K5.
- *4: Not applicable for gasket contact surface code 1.
- *5: Forged version of the material may be used.

II. Diaphragm seal section (Extended type)

- Process connection size: 4-inch (100 mm) / 3-inch (80 mm)

EJ□118□ - □□□□ - □□□□ - E 4 3 □□□□ - □□□□



F0809-1.ai

Model	Suffix codes	Description	EJ□118□	EJ□438□
EJ□118□ EJ□438□	-□□□□-□□□□	Transmitter body section (I)	<input type="checkbox"/>	<input type="checkbox"/>
Process connection style	-E	Extended type	<input type="checkbox"/>	<input type="checkbox"/>
Flange rating	J1 JIS 10K J2 JIS 20K J4 JIS 40K A1 ANSI class 150 P1 JPI class 150 A2 ANSI class 300 P2 JPI class 300 D2 DIN PN10/16 D4 DIN PN25/40		<input type="checkbox"/>	<input type="checkbox"/>
Process connection size (Process flange size)	4 4-inch (100 mm) 3 3-inch (80 mm)		<input type="checkbox"/>	<input type="checkbox"/>
Flange material	A JIS S25C B 304 SST*4 C 316 SST*4		<input type="checkbox"/>	<input type="checkbox"/>
Gasket contact surface *1	1 Serration (for ANSI flange only) 2 Flat (no serration)		<input type="checkbox"/>	<input type="checkbox"/>
Wetted parts material	SE [Diaphragm] [Pipe] [Others] 316L SST 316 SST 316 SST		<input type="checkbox"/>	<input type="checkbox"/>
Flushing connection ring	0 None		<input type="checkbox"/>	<input type="checkbox"/>
Extension	1 Length (X2) = 50 mm 2 Length (X2) = 50 mm 3 Length (X2) = 100 mm 4 Length (X2) = 100 mm 5 Length (X2) = 150 mm 6 Length (X2) = 150 mm		<input type="checkbox"/>	<input type="checkbox"/>
Fill fluid	-A For general use (Silicone oil) [Process temp.] [Ambient temp.] -10 to 250°C -10 to 60°C -B For general use (Silicone oil) -30 to 180°C -15 to 60°C -C For high temperature use (silicone oil) 10 to 310°C 10 to 60°C -D For oil-prohibited use (fluorinated oil)*2 -20 to 120°C -10 to 60°C -E For low temperature use (ethylene glycol) -50 to 100°C -40 to 60°C -1 High temp. and high vacuum use (Silicone oil) -10 to 250°C -10 to 60°C*5 -2 High temp. and high vacuum use (Silicone oil) 10 to 310°C 10 to 60°C*5 -4 High vacuum use (Silicone oil) -10 to 100°C -10 to 60°C*5		<input type="checkbox"/>	<input type="checkbox"/>
Capillary connection	B Back of diaphragm seal unit		<input type="checkbox"/>	<input type="checkbox"/>
—	2 Always 2		<input type="checkbox"/>	<input type="checkbox"/>
Capillary length *3	1 .. 1 m 6 6 m 2 .. 2 m 7 7 m 3 .. 3 m 8 8 m 4 .. 4 m 9 9 m 5 .. 5 m A 10 m		<input type="checkbox"/>	<input type="checkbox"/>
Option codes	/□ Optional specification		<input type="checkbox"/>	<input type="checkbox"/>


The “▶” marks indicate the most typical selection for each specification. Example: EJX118A-DMSCG-912EN-EA14B1SE02-BB25/□
EJX438A-DASCG-912EN-EA14B1SE01-BB25/□

-
- *1: See table 8.3 'Gasket contact surface' on page 8-5.
 - *2: Even in case where fill fluid code D (fluorinated oil) is selected, if degrease cleansing treatment or both degrease cleansing and dehydrating treatment for the wetted parts is required, specify option code K1 or K5.
 - *3: The specified capillary length includes the extension length (X_2) and the flange thickness (t).
 - *4: Forged version of the material may be used.
 - *5: The upper ambient temperature limit is 50°C (122°F) when specifying process connection size code 3 (3-inch).

II. Diaphragm seal section (Combination type)

- Process connection size: Low pressure side; 4-inch (100 mm) ··· Extended type
High pressure side; 3-inch (80 mm) ··· Flush type

EJ□118□ - □□□□ - □□□□ - Y □ W □□□□□ - □□□□

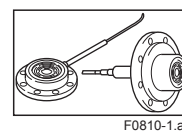

F0810-1.ai

Model	Suffix codes	Description
EJ□118□ - □□□□ - □□□□	·····	Transmitter body section (I)
Process connection style	-Y ·····	Combination type (Extended and Flush)
Flange rating	J1 ····· J2 ····· A1 ····· A2 ····· D2 ····· D4 ·····	JIS 10K JIS 20K ANSI class 150 P1 ····· JPI class 150 ANSI class 300 P2 ····· JPI class 300 DIN PN10/16 DIN PN25/40
Process connection size (Process flange size)	W ·····	High pressure side 4-inch (100 mm) Low pressure side 3-inch (80 mm)
Flange material	▶ A ····· B ····· C ·····	JIS S25C 304 SST ^{*4} 316 SST ^{*4}
Gasket contact surface ^{*1}	1 ····· 2 ·····	Serration (for ANSI flange only) Flat (no serration)
Wetted parts material	SY ·····	[Diaphragm] [Pipe] [Others] High pressure side: 316L SST 316 SST 316 SST Low pressure side: 316L SST — 316L SST
Flushing connection ring	0 ·····	None
Extension	1 ····· 3 ····· 5 ·····	Length (X ₂) = 50 mm Length (X ₂) = 100 mm Length (X ₂) = 150 mm
Fill fluid	▶ -A ···· -B ···· -C ···· -D ···· -E ···· -1 ···· -2 ···· -4 ····	[Process temp.] [Ambient temp.] For general use (Silicone oil) -10 to 250°C -10 to 60°C For general use (Silicone oil) -30 to 180°C -15 to 60°C For high temperature use (silicone oil) 10 to 310°C 10 to 60°C For oil-prohibited use (fluorinated oil) ^{*2} -20 to 120°C -10 to 60°C For low temperature use (ethylene glycol) -50 to 100°C -40 to 60°C High temp. and high vacuum use (Silicone oil) -10 to 250°C -10 to 60°C High temp. and high vacuum use (Silicone oil) 10 to 310°C 10 to 60°C High vacuum use (Silicone oil) -10 to 100°C -10 to 60°C
Capillary connection	C ····	High pressure side: Back of diaphragm seal unit Low pressure side: Side of diaphragm seal unit
—	2 ····	Always 2
Capillary length ^{*3}	1 ··· 1 m 2 ··· 2 m 3 ··· 3 m 4 ··· 4 m 5 ··· 5 m	6 ····· 6 m 7 ····· 7 m 8 ····· 8 m 9 ····· 9 m A ····· 10 m
Option codes		/□ Optional specification

The “▶” marks indicate the most typical selection for each specification. Example: EJX118A-DMSCG-912EN-YA1WB1SY01-BC25/□
 *1: See table 8.3 ‘Gasket contact surface’ on page 8-5.
 *2: Even in case where fill fluid code D (fluorinated oil) is selected, if degrease cleansing treatment or both degrease cleansing and dehydrating treatment for the wetted parts is required, specify option code K1 or K5.
 *3: The specified capillary length of high pressure side (extended side) includes the extension length (X₂) and the flange thickness (t).
 *4: Forged version of the material may be used.

8.3 Optional Specifications “◇”

Item		Description	Code
Factory Mutual (FM)		FM Explosionproof *1 Explosionproof for Class I, Division 1, Groups B, C and D Dust-ignitionproof for Class II/III, Division 1, Groups E, F and G Hazardous (classified) locations, indoors and outdoors (NEMA 4X)	FF1
		FM Intrinsically safe *1*3 Intrinsically Safe for Class I, Division 1, Groups A, B, C and D, Class II, Division 1, Groups E, F and G and Class III, Division 1 Hazardous Locations. Nonincendive for Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Hazardous Locations.	FS1
		Combined FF1 and FS1 *1*3	FU1
ATEX		ATEX Flameproof *1 II 2G, 2D Ex d IIC T6...T4 Gb, Ex tb IIIC T85°C Db Special fastener: ClassA2-50(A4-50) or more	KF22
		ATEX Intrinsically safe Ex ia *1*3 II 1G, 2D Ex ia IIC T4 Ga, Ex ia IIIC T85°C T100°C T120°C Db	KS21
		Combined KF22, KS21 and ATEX Intrinsically safe Ex ic *1*3 Ex ic: II 3G Ex ic IIC T4 Gc	KU22
Canadian Standards Association (CSA)		CSA Explosionproof *1 [For CSA C22.2] Explosionproof for Class I, Division 1, Groups B, C and D Dustignitionproof for Class II/III, Division 1, Groups E, F and G [For CSA E60079] Flameproof for Zone1, Ex d IIC T6...T4 Enclosure IP66/IP67 Process Sealing Certification Dual Seal Certified by CSA to the requirement of ANSI/ISA 12.27.01 No additional sealing required Primary seal failure annunciation: at the zero adjustment screw	CF1
		CSA Intrinsically safe *1 *3 [For CSA C22.2] Intrinsically safe for Class I, Division 1, Groups A, B, C and D, Class II, Division 1, Groups E,F and G, Class III, Division 1 Nonincendive for Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, Division 1 [For CSA E60079] Ex ia IIC T4, Ex nL IIC T4 Process Sealing Certification Dual Seal Certified by CSA to the requirement of ANSI/ISA 12.27.01 No additional sealing required Primary seal failure annunciation: at the zero adjustment screw	CS1
		Combined CF1 and CS1 *1*3	CU1
IECEX		IECEX flameproof *1 Flameproof for Zone1, Ex d IIC T6...T4 Gb Special fastener: ClassA2-50(A4-50) or more	SF2
		IECEX Intrinsically safe, type n and flameproof Approval *1*3 Intrinsically safe and type n Ex ia IIC T4, Ex nL IIC T4 Flameproof Flameproof for Zone1, Ex d IIC T6...T4 Gb Special fastener: ClassA2-50(A4-50) or more	SU2
		IECEX Intrinsically safe and flameproof *1*3 Intrinsically safe Ex ia IIC T4 Ga, Ex ic IIC T4 Gc Flameproof Flameproof for Zone1, Ex d IIC T6...T4 Gb Special fastener: ClassA2-50(A4-50) or more	SU21
Combination of Approval		Combination of KU22, FU1 and CU1	V1U1
Painting	Color change	Amplifier cover only	P□
		Amplifier cover and terminal cover, Munsell 7.5 R4/14	PR
	Coating change	Anti-corrosion coating*4	X2
316 SST exterior parts		316 SST name plate, tag plate and zero adjustment screw	HC
Fluoro-rubber O-ring		All O-rings of amplifier housing. Lower limit of ambient temperature: -15°C (5°F)	HE

Item	Description		Code			
Lightning protector	Transmitter power supply voltage: 10.5 to 32 V DC (10.5 to 30 V DC for intrinsically safe type.) Allowable current: Max. 6000 A (1×40 μs), Repeating 1000 A (1×40 μs) 100 times Applicable Standards: IEC 61000-4-4, IEC 61000-4-5		A			
Status output *12	Transistor output (open drain: sink type) Contact rating: 10.5 to 30 V DC, 120 mA DC (max) Low level: 0 to 2 V DC		AL			
Oil-prohibited use	Degrease cleansing treatment.		K1			
Oil-prohibited use with dehydrating treatment	Degrease cleansing and dehydrating treatment.		K5			
Calibration units *6	P calibration (psi unit)	(See Table for Span and Range Limits.)	D1			
	bar calibration (bar unit)		D3			
	M calibration (kgf/cm ² unit)		D4			
Teflon film *5 *11	Diaphragm protection from sticky process fluid by FEP Teflon film attached with fluorinated oil. Operation range: 20 to 150°C, 0 to 2 MPa (Not applicable for vacuum service).		TF1			
Operating temperature correction *8	Adjusting range: 80°C to Maximum temperature of specified fill fluid		R			
Capillary without PVC sheaths	When ambient temperature exceeds 100°C, or use of PVC is prohibited		V			
Output limits and failure operation *7	Failure alarm down-scale: Output status at CPU failure and hardware error is -5%, 3.2 mA DC or less. *20		C1			
	NAMUR NE43 Compliant Output signal limits: 3.8 mA to 20.5 mA *21	Failure alarm down-scale: Output status at CPU failure and hardware error is -5%, 3.2 mA DC or less.	C2			
		Failure alarm up-scale: Output status at CPU failure and hardware error is 110%, 21.6 mA or more.	C3			
Gold-plate *9	Inside of isolating diaphragms (fill fluid side) are gold plated, effective for hydrogen permeation.		A1			
Stainless steel tag plate	304SST tag plate wired onto transmitter		N4			
Data configuration at factory *10	Data configuration for HART communication type	Software damping, Descriptor, Message	CA			
	Data configuration for BRAIN communication type	Software damping	CB			
Advanced diagnostics *13	Multi-sensing process monitoring • Impulse line blockage detection *14		DG6			
Material certificate	Process flange, Block	For Flush type	M2W			
	Process flange, Block, Ring *15		M5W			
	Process flange, Block, Pipe, Base	For Extended type	M2E			
	High Pressure side: Process flange, Block, Pipe, Base Low Pressure side: Process flange, Block	For Combination type	M2Y			
Pressure test/Leak test Certificate *19	EJX118A EJA118E	(Flange rating)	(Test pressure)	Nitrogen (N ₂) Gas *18 Retention time: 10 minutes		
		JIS 10K	2 MPa (290 psi)		T51	
		JIS 20K	5 MPa (720 psi)		T54	
		JIS 40K *16	10 MPa (1450 psi)		T57	
		ANSI/JPI Class 150	3 MPa (430 psi)		T52	
		ANSI/JPI Class 300 *16	8 MPa (1160 psi)		T56	
		ANSI/JPI Class 300 *17	7 MPa (1000 psi)		T55	
		ANSI/KPI Class 600 *16	16 MPa (2300 psi)		T58	
	EJX438A, EJA438E	For A-Capsule	JIS 10K		2 MPa (290 psi)	T51
			JIS 20K, 40K, 63K		3.5 MPa (500 psi)	T53
			ANSI/JPI Class 150, 300, 600		3.5 MPa (500 psi)	T53
		For B-Capsule	JIS 10K		2 MPa (290 psi)	T51
			JIS 20K		5 MPa (720 psi)	T54
			JIS 40K *16		10 MPa (1450 psi)	T57
			JIS 40K *17		7 MPa (1000 psi)	T55
			JIS 63K *16		16 MPa (2300 psi)	T58
			ANSI/JPI Class 150		3 MPa (435 psi)	T52
			ANSI/JPI Class 300 *16		8 MPa (1160 psi)	T56
			ANSI/JPI Class 300 *17		7 MPa (1000 psi)	T55
			ANSI/JPI Class 600 *16		16 MPa (2300 psi)	T58

Contact Yokogawa representative for the codes indicated as '-':


- *1: Applicable for Electrical connection code 2, 4, 7, and 9.
- *2: Applicable for Electrical connection code 2 and 7.
- *3: Not applicable for option code /AL.
- *4: Not applicable with color change option.
- *5: Applicable for flush type (process connection style code W.)
- *6: The unit of MWP (Max. working pressure) on the name plate of a housing is the same unit as specified by option code D1, D3, and D4.
- *7: Applicable for output signal code D, E and J. The hardware error indicates faulty amplifier or capsule.
- *8: Specify the process operating temperature for zero correction. Example: Zero correction by process temperature 90°C.
- *9: Applicable for wetted parts material code SW, SE, SY, and HW.
- *10: Also see 'Ordering Information.'
- *11: Applicable for flushing connection ring code 0. Not applicable for Fill fluid code 1, 2, or 4.
- *12: Check terminals cannot be used when this option is specified. Not applicable for output signal code F and amplifier housing code 2.
- *13: Applicable only for output signal code -E and -J.
- *14: The change of pressure fluctuation is monitored and then detects the impulse line blockage. See TI 01C25A31-01E for detailed technical information required for using this function.
- *15: Applicable for flushing connection ring code 1, 2, 3, 4, A, B, C, and D.
- *16: Applicable for flush type (process connection style code W.)
- *17: Applicable for extended type and Combination type (process connection style code E and Y.)
- *18: Pure nitrogen gas is used for oil-prohibited use (option code K1 and K5.)
- *19: The unit on the certificate is always MPa regardless of selection of option code D1, D3, or D4. A flushing connection ring will not be applied when conducting the pressure test or leak test.
- *20: Output status at CPU failure and hardware error is -5%, 0.8V DC or less for output signal code Q.
- *21: The 1 to 5 V voltage output corresponding to 4 to 20 mA current output is applied to output signal code Q which is non-compliant to NAMUR NE43.

8.4 Dimensions


● Transmitter body section

Unit: mm (Approx.: inch)

EJ□118□

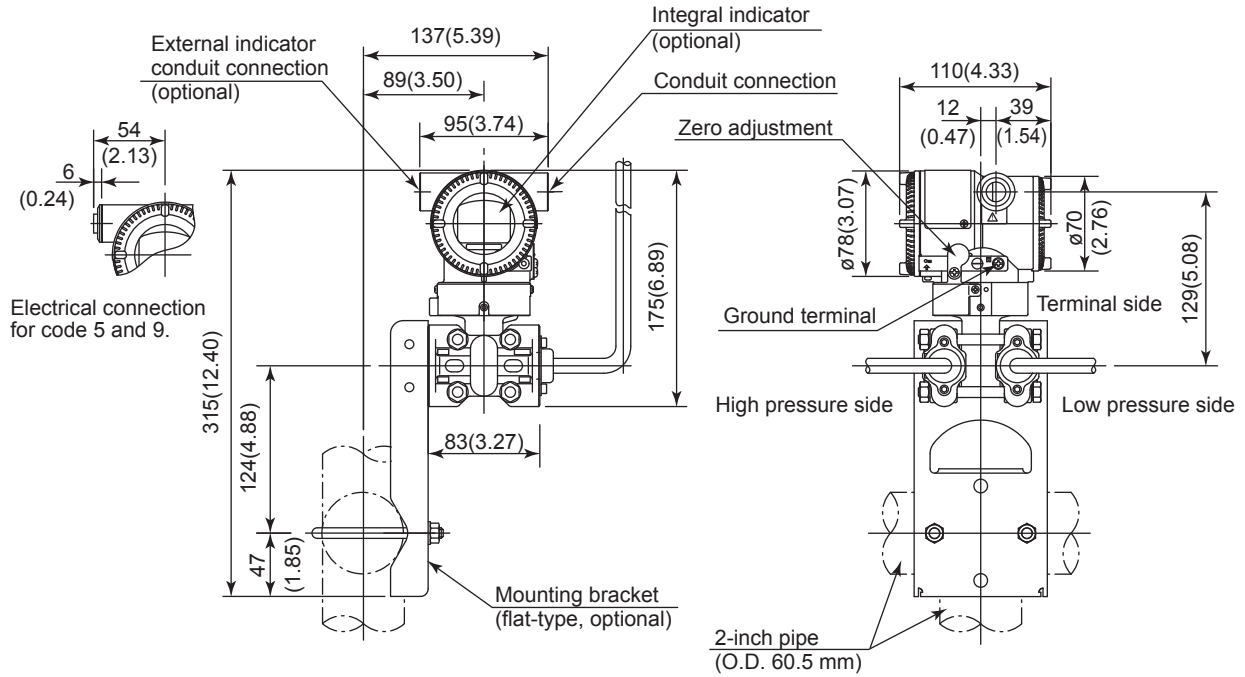

EJ□438□

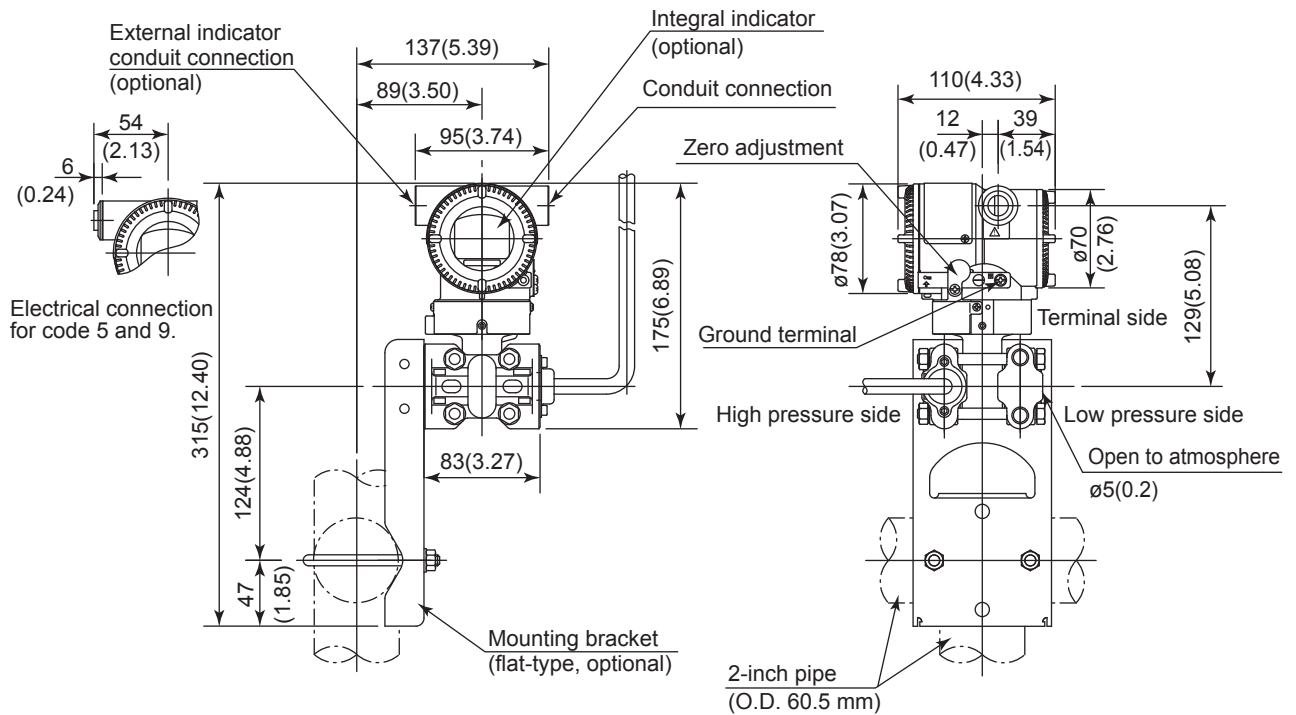


F0811.ai

< Diaphragm seal section >


● Flush type

Unit: mm (Approx.: inch)


- No ring (flushing connection ring code 0)

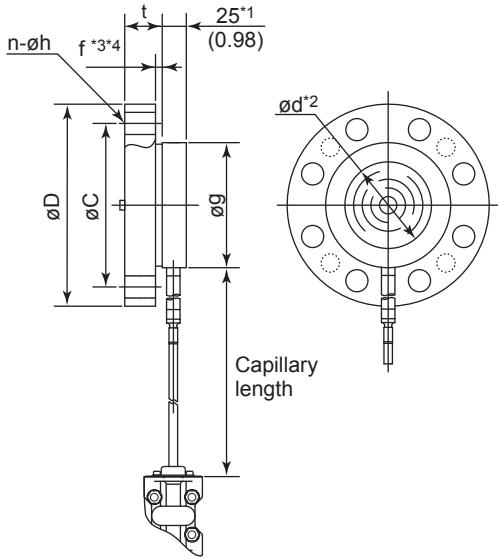


- With ring (flushing connection ring code 1, 2, 3, 4, A, B, C and D)

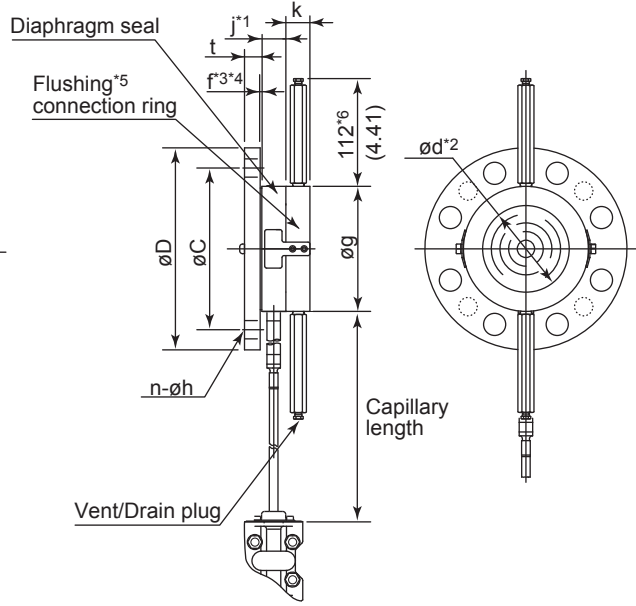

● Extended type

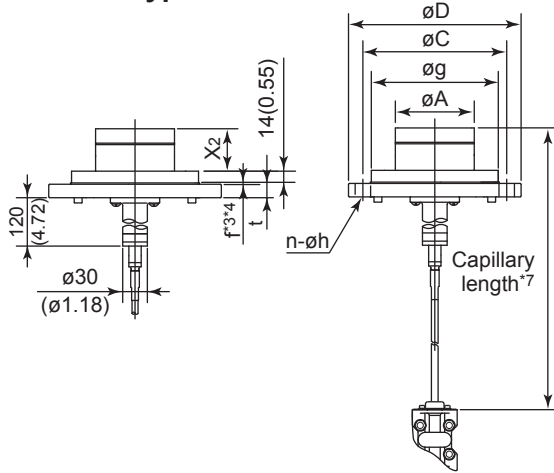


- *1: When wetted parts material code **UW** (titanium), value is 34 (1.34)
- *2: Indicates inside diameter of gasket contact surface
- *3: In case where process flange material is JIS S25C, value of f is 0.
- *4: In case where process flange material is JIS SUS304 in ANSI/JPI flange, value of f is included in t.

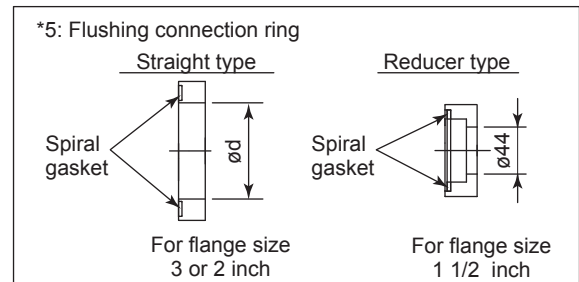

- *5: Flushing connection ring
- *6: When option code **K1** or **K5** is selected, add 11 mm (0.28 inch.)
- *7: The specified capillary length includes the extension length (X₂) and the flange thickness (t).

● Combination type

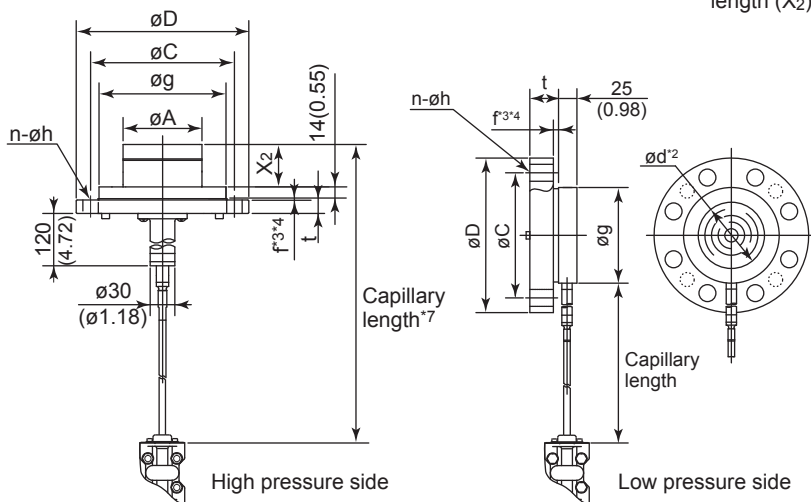

Extension length (X₂)

Extension code	X ₂
1, 2	50(1.97)
3, 4	100(3.94)
5, 6	150(5.91)

F0812.ai

Unit: mm (Approx.: inch)

Process flange size: 4 inch (100 mm)

Code	Flange rating	øD	øC	øg	ød	t	f*3*4	Bolt holes		j	k	øA
								No.(n)	Dia.(øh)			
J1	JIS 10K	210(8.27)	175(6.89)	155(6.10)	—	18(0.71)	0	8	19(0.75)	—	—	96±0.5(3.78±0.02)
J2	JIS 20K	225(8.86)	185(7.28)	155(6.10)	—	24(0.94)	0	8	23(0.91)	—	—	96±0.5(3.78±0.02)
J4	JIS 40K	250(9.84)	205(8.07)	155(6.10)	—	36(1.42)	0	8	25(0.98)	—	—	96±0.5(3.78±0.02)
A1	ANSI class 150	228.6(9.00)	190.5(7.50)	155(6.10)	—	23.9(0.94)	1.6(0.06)	8	19.1(0.75)	—	—	96±0.5(3.78±0.02)
A2	ANSI class 300	254(10.00)	200.2(7.88)	155(6.10)	—	31.8(1.25)	1.6(0.06)	8	22.4(0.88)	—	—	96±0.5(3.78±0.02)
P1	JPI class 150	229(9.02)	190.5(7.50)	155(6.10)	—	24(0.94)	1.6(0.06)	8	19(0.75)	—	—	96±0.5(3.78±0.02)
P2	JPI class 300	254(10.0)	200.2(7.88)	155(6.10)	—	32(1.26)	1.6(0.06)	8	22(0.87)	—	—	96±0.5(3.78±0.02)
D2	DIN PN10/16	220(8.66)	180(7.09)	155(6.10)	—	20(0.79)	0	8	18(0.71)	—	—	96±0.5(3.78±0.02)
D4	DIN PN25/40	235(9.25)	190(7.48)	155(6.10)	—	24(0.94)	0	8	22(0.87)	—	—	96±0.5(3.78±0.02)

Process flange size: 3 inch (80 mm)

Code	Flange rating	øD	øC	øg	ød*2	t	f*3*4	Bolt holes		j*1	k	øA
								No.(n)	Dia.(øh)			
J1	JIS 10K	185(7.28)	150(5.91)	130(5.12)	90(3.54)	18(0.71)	0	8	19(0.75)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
J2	JIS 20K	200(7.87)	160(6.30)	130(5.12)	90(3.54)	22(0.87)	0	8	23(0.91)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
J4	JIS 40K	210(8.27)	170(6.69)	130(5.12)	90(3.54)	32(1.26)	0	8	23(0.91)	25(0.98)	27(1.06)	—
J6	JIS 63K	230(9.06)	185(7.28)	130(5.12)	90(3.54)	40(1.57)	0	8	25(0.98)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
A1	ANSI class 150	190.5(7.50)	152.4(6.00)	130(5.12)	90(3.54)	23.9(0.94)	1.6(0.06)	4	19.1(0.75)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
A2	ANSI class 300	209.6(8.25)	168.1(6.62)	130(5.12)	90(3.54)	28.5(1.12)	1.6(0.06)	8	22.4(0.88)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
A4	ANSI class 600	209.6(8.25)	168.1(6.62)	130(5.12)	90(3.54)	38.2(1.50)	6.4(0.25)	8	22.4(0.88)	25(0.98)	27(1.06)	—
P1	JPI class 150	190(7.48)	152.4(6.00)	130(5.12)	90(3.54)	24(0.94)	1.6(0.06)	4	19(0.75)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
P2	JPI class 300	210(8.27)	168.1(6.61)	130(5.12)	90(3.54)	28.5(1.12)	1.6(0.06)	8	22(0.87)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
P4	JPI class 600	210(8.27)	168.1(6.61)	130(5.12)	90(3.54)	38.4(1.51)	6.4(0.25)	8	22(0.87)	25(0.98)	27(1.06)	—
D2	DIN PN10/16	200(7.87)	160(6.30)	130(5.12)	90(3.54)	20(0.79)	0	8	18(0.71)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
D4	DIN PN25/40	200(7.87)	160(6.30)	130(5.12)	90(3.54)	24(0.94)	0	8	18(0.71)	25(0.98)	27(1.06)	71±0.5(2.8±0.02)
D5	DIN PN64	215(8.46)	170(6.69)	130(5.12)	90(3.54)	28(1.10)	0	8	22(0.87)	25(0.98)	27(1.06)	—

Process flange size: 2 inch (50 mm)

Code	Flange rating	øD	øC	øg	ød*2	t	f*3*4	Bolt holes		j*1	k
								No.(n)	Dia.(øh)		
J1	JIS 10K	155(6.10)	120(4.72)	100(3.94)	61(2.40)	16(0.63)	0	4	19(0.75)	25(0.98)	27(1.06)
J2	JIS 20K	155(6.10)	120(4.72)	100(3.94)	61(2.40)	18(0.71)	0	8	19(0.75)	25(0.98)	27(1.06)
J4	JIS 40K	165(6.50)	130(5.12)	100(3.94)	61(2.40)	26(1.02)	0	8	19(0.75)	25(0.98)	27(1.06)
J6	JIS 63K	185(7.28)	145(5.71)	100(3.94)	61(2.40)	34(1.34)	0	8	23(0.91)	25(0.98)	27(1.06)
A1	ANSI class 150	152.4(6.00)	120.7(4.75)	100(3.94)	61(2.40)	19.1(0.75)	1.6(0.06)	4	19.1(0.75)	25(0.98)	27(1.06)
A2	ANSI class 300	165.1(6.50)	127.0(5.00)	100(3.94)	61(2.40)	22.4(0.88)	1.6(0.06)	8	19.1(0.75)	25(0.98)	27(1.06)
A4	ANSI class 600	165.1(6.50)	127.0(5.00)	100(3.94)	61(2.40)	31.8(1.25)	6.4(0.25)	8	19.1(0.75)	25(0.98)	27(1.06)
P1	JPI class 150	152(5.98)	120.6(4.75)	100(3.94)	61(2.40)	19.5(0.77)	1.6(0.06)	4	19(0.75)	25(0.98)	27(1.06)
P2	JPI class 300	165(6.50)	127.0(5.00)	100(3.94)	61(2.40)	22.4(0.88)	1.6(0.06)	8	19(0.75)	25(0.98)	27(1.06)
P4	JPI class 600	165(6.50)	127.0(5.00)	100(3.94)	61(2.40)	31.9(1.26)	6.4(0.25)	8	19(0.75)	25(0.98)	27(1.06)
D2	DIN PN10/16	165(6.50)	125(4.92)	100(3.94)	61(2.40)	18(0.71)	0	4	18(0.71)	25(0.98)	27(1.06)
D4	DIN PN25/40	165(6.50)	125(4.92)	100(3.94)	61(2.40)	20(0.79)	0	4	18(0.71)	25(0.98)	27(1.06)
D5	DIN PN64	180(7.09)	135(5.31)	100(3.94)	61(2.40)	26(1.02)	0	4	22(0.87)	25(0.98)	27(1.06)

Process flange size: 1 1/2 inch (40 mm)

Code	Flange rating	øD	øC	øg	ød*2	t	f*3*4	Bolt holes		j	k
								No.(n)	Dia.(øh)		
J1	JIS 10K	140(5.51)	105(4.13)	86(3.39)	44(1.73)	16(0.63)	0	4	19(0.75)	27(1.06)	30(1.18)
J2	JIS 20K	140(5.51)	105(4.13)	86(3.39)	44(1.73)	18(0.71)	0	4	19(0.75)	27(1.06)	30(1.18)
J4	JIS 40K	160(6.30)	120(4.72)	86(3.39)	44(1.73)	24(0.94)	0	4	23(0.91)	27(1.06)	30(1.18)
A1	ANSI class 150	127(5.00)	98.4(3.88)	86(3.39)	44(1.73)	17.5(0.69)	1.6(0.06)	4	15.9(0.63)	27(1.06)	30(1.18)
A2	ANSI class 300	155.4(6.12)	114.3(4.50)	86(3.39)	44(1.73)	20.6(0.81)	1.6(0.06)	4	22.4(0.88)	27(1.06)	30(1.18)
A4	ANSI class 600	155.4(6.12)	114.3(4.50)	86(3.39)	44(1.73)	28.8(1.13)	6.4(0.25)	4	22.4(0.88)	27(1.06)	30(1.18)
P1	JPI class 150	127(5.00)	98.6(3.88)	86(3.39)	44(1.73)	17.6(0.69)	1.6(0.06)	4	16(0.63)	27(1.06)	30(1.18)
P2	JPI class 300	155(6.10)	114.3(4.50)	86(3.39)	44(1.73)	20.6(0.81)	1.6(0.06)	4	22(0.87)	27(1.06)	30(1.18)
P4	JPI class 600	155(6.10)	114.3(4.50)	86(3.39)	44(1.73)	28.9(1.14)	6.4(0.25)	4	22(0.87)	27(1.06)	30(1.18)


*1: When wetted parts material code UW (titanium) is selected, value is 34 (1.34.)

*2: Indicates inside diameter of gasket contact surface.

*3: In case where process flange material is JIS S25C, value of f is 0.

*4: In case where process flange material is JIS SUS304 in ANSI/JPI flange, value of f is included in t.

• Terminal Configuration

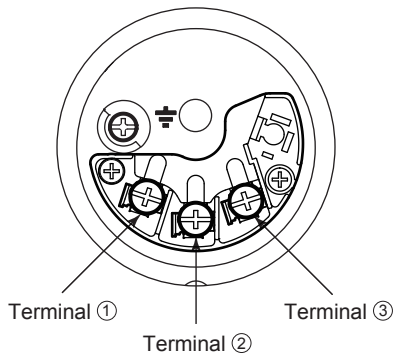

• Terminal Wiring for 4 to 20 mA output

SUPPLY	+	①] Power supply and output terminals
	-	②	
CHECK	+	③] External indicator (ammeter) terminals ^{*1,2}
or	-	②	
ALARM	+	③] Status contact output terminals ^{*2}
	-	②	
			⏏ Ground terminal

*1: When using an external indicator or check meter, the internal resistance must be 10 Ω or less. A check meter or indicator cannot be connected when /AL option is specified.

*2: Not available for FOUNDATION Fieldbus and PROFIBUS PA communication types.

• Terminal Wiring for 1 to 5 V output

SUPPLY	+	①] Power supply terminals
	-	②	
VOUT	+	③] 1 to 5 V DC with HART communication terminals
	-	②	
			⏏ Ground terminal

F0813.ai

Revision Information

- Title : Diaphragm Sealed Differential Pressure and Pressure Transmitters
EJ□118□ and EJ□438□
- Manual No. : IM 01C25H01-01E

Edition	Date	Page	Revised Item
1st	Oct. 2004	—	New publication
10th	June 2014	1-2 2-6 2-13 5-1 to 5-4 5-1 5-2, 6-1 6-4 to 6-9 8-20	1. • Add note for symbols. 2.9.2 • Revise category for CSA Nonincendive. 2.12 • Update safety requirement standard. 5. • Revise drawings and symbols for terminal. 5.3.1 • Add note for power supply. Add note for BRAIN communication. 6.6 • Add local parameter setting function. 8.4 • Change terminal drawing.
11th	Oct. 2014	2-3 2-5 2-7, 2-8 2-9 to 2-10 2-13 to 2-14 2-14 5-1 5-2 5-3 to 5-4 5-5 6-6 6-7 6-8 6-9 7-7 8-1, 8-4 8-4 8-7, 8-8 8-15 8-21	2.8 • Add information for 1 to 5 V output. 2.9.1 • Add information for 1 to 5 V output. 2.9.2 • Add information for 1 to 5 V output. 2.9.3 • Add information for 1 to 5 V output. 2.9.4 • Add EPL code. Revise applicable standard. Add information for 1 to 5 V output. Add note for electro static charge. Add electrical connection. 2.10 • Add standard for PROFIBUS. 5.3 • Add Figure 5.1 Terminal. 5.3.3 • Add information for 1 to 5 V output. 5.4 • Add information for 1 to 5 V output. 5.6 • Add applicability. 6.6.1 • Add "10.Device information" in Figure 6.7. 6.6.3 • Add note in the figure. 6.6 • Add 6.6.6 Pressure LRV/URV Configuration. 6.6 • Add 6.6.8 Output Mode Configuration and 6.6.9 Display Out 1 Configuration. 7.5.3 • Correct AL31 output operation. 8.1 • Add information for 1 to 5 V output. • Add EMC standard for PROFIBUS and EMI specification. 8.2 • Add output signal code Q 8.3 • Revise the description for SU2 and SF2. 8.4 • Add information for 1 to 5 V output.
12th	July 2015	1-2 1-3 2-1 2-5, 2-7, 2-9, 2-14 2-6, 2-7 2-12 2-12 to 2-13 2-16 2-16 6-5 6-6 8-4 8-9 to 8-14 8-15	• Add trademark statement. 1.1 • Add (g) and (h). 2.1 • Replace Figure 2.2. • Delete /V1F. 2.9.2 • Add "No.61010-2-030." 2.9.3 (6) • Replace nameplate. 2.9.4 • Add SU21. Add a and b. 2.10 • Change the note for EN 61326-2-5. 2.12 • Add C22.2 standards. 6.6.1 • Delete note for -Q in Figure 6.7. 6.6.3 • Change note in the figure. 8.1 • Revise descriptions for EMC conformity standards. 8.2 • Delete #. 8.3 • Add SU21.